



燈の匠
Light Master

LIGHTMASTER



FORCE 2.0

AUGUR

NMAX

勁戰六代

水冷BWS

除土胎大

安裝說明書


Assembly Instructions

❖ 大胎土除空濾鎖點 **勁戰** **BWS** **NMAX** 都一樣

只有靠近排氣管的鎖點不同



安裝說明

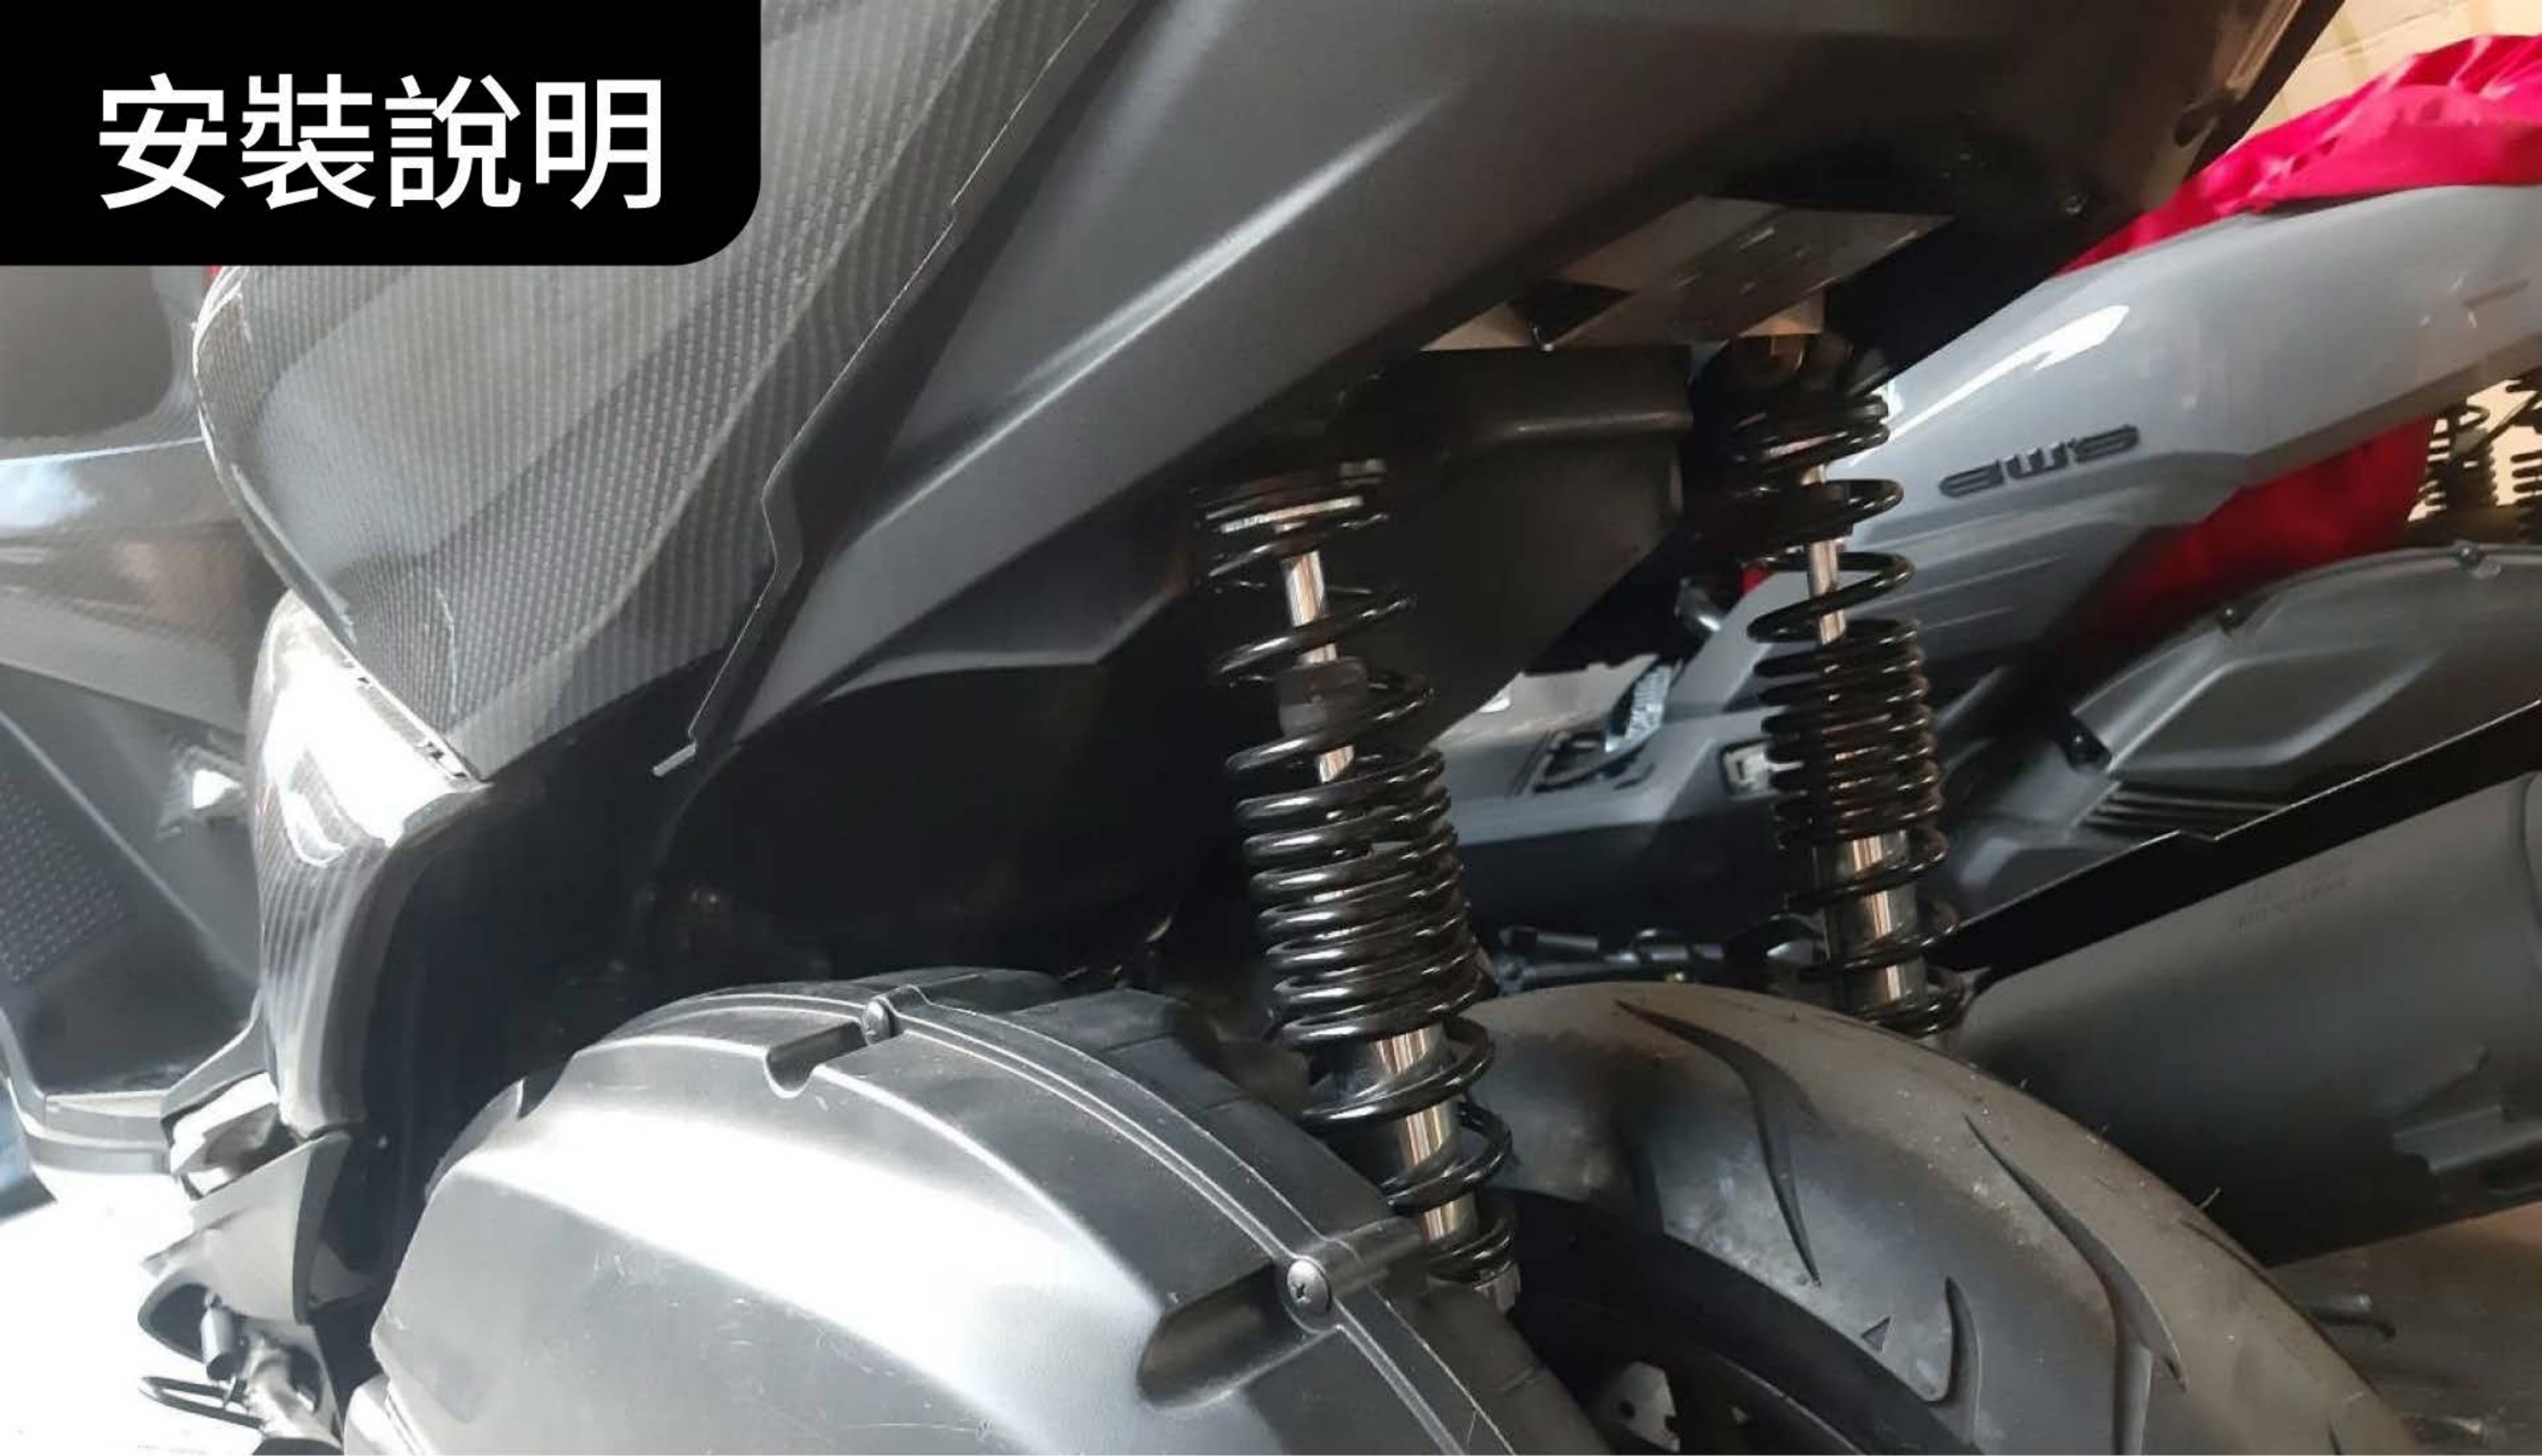

❶ 先將空濾外蓋兩顆螺絲取下



這兩顆螺絲



② 將後避震螺絲拆下

③ 都拆下之後就能將土除放進去





④ 搬起空濾將鎖點對好

A close-up photograph of a car's underbody suspension assembly. The image shows a metal control arm or bracket with several bolts. One bolt is partially tightened. The surrounding area includes various plastic components and a textured surface, possibly a sound-deadening mat. A white text box is overlaid on the bottom right of the image.

❖ 可先將螺絲稍微鎖上
再去對準剩餘的鎖點



⑤ 將另一邊的鎖點對好鎖螺絲



NMAX 靠近排氣管的鎖點跟 **勁戰** **BWS**


不一樣之外其餘步驟都是一樣



**⑥ 將大胎土除微調至正中間後
將螺絲都鎖緊，再來要修飾空濾外蓋**



7 箭頭指的地方要將他
修飾到能不卡到土除為止

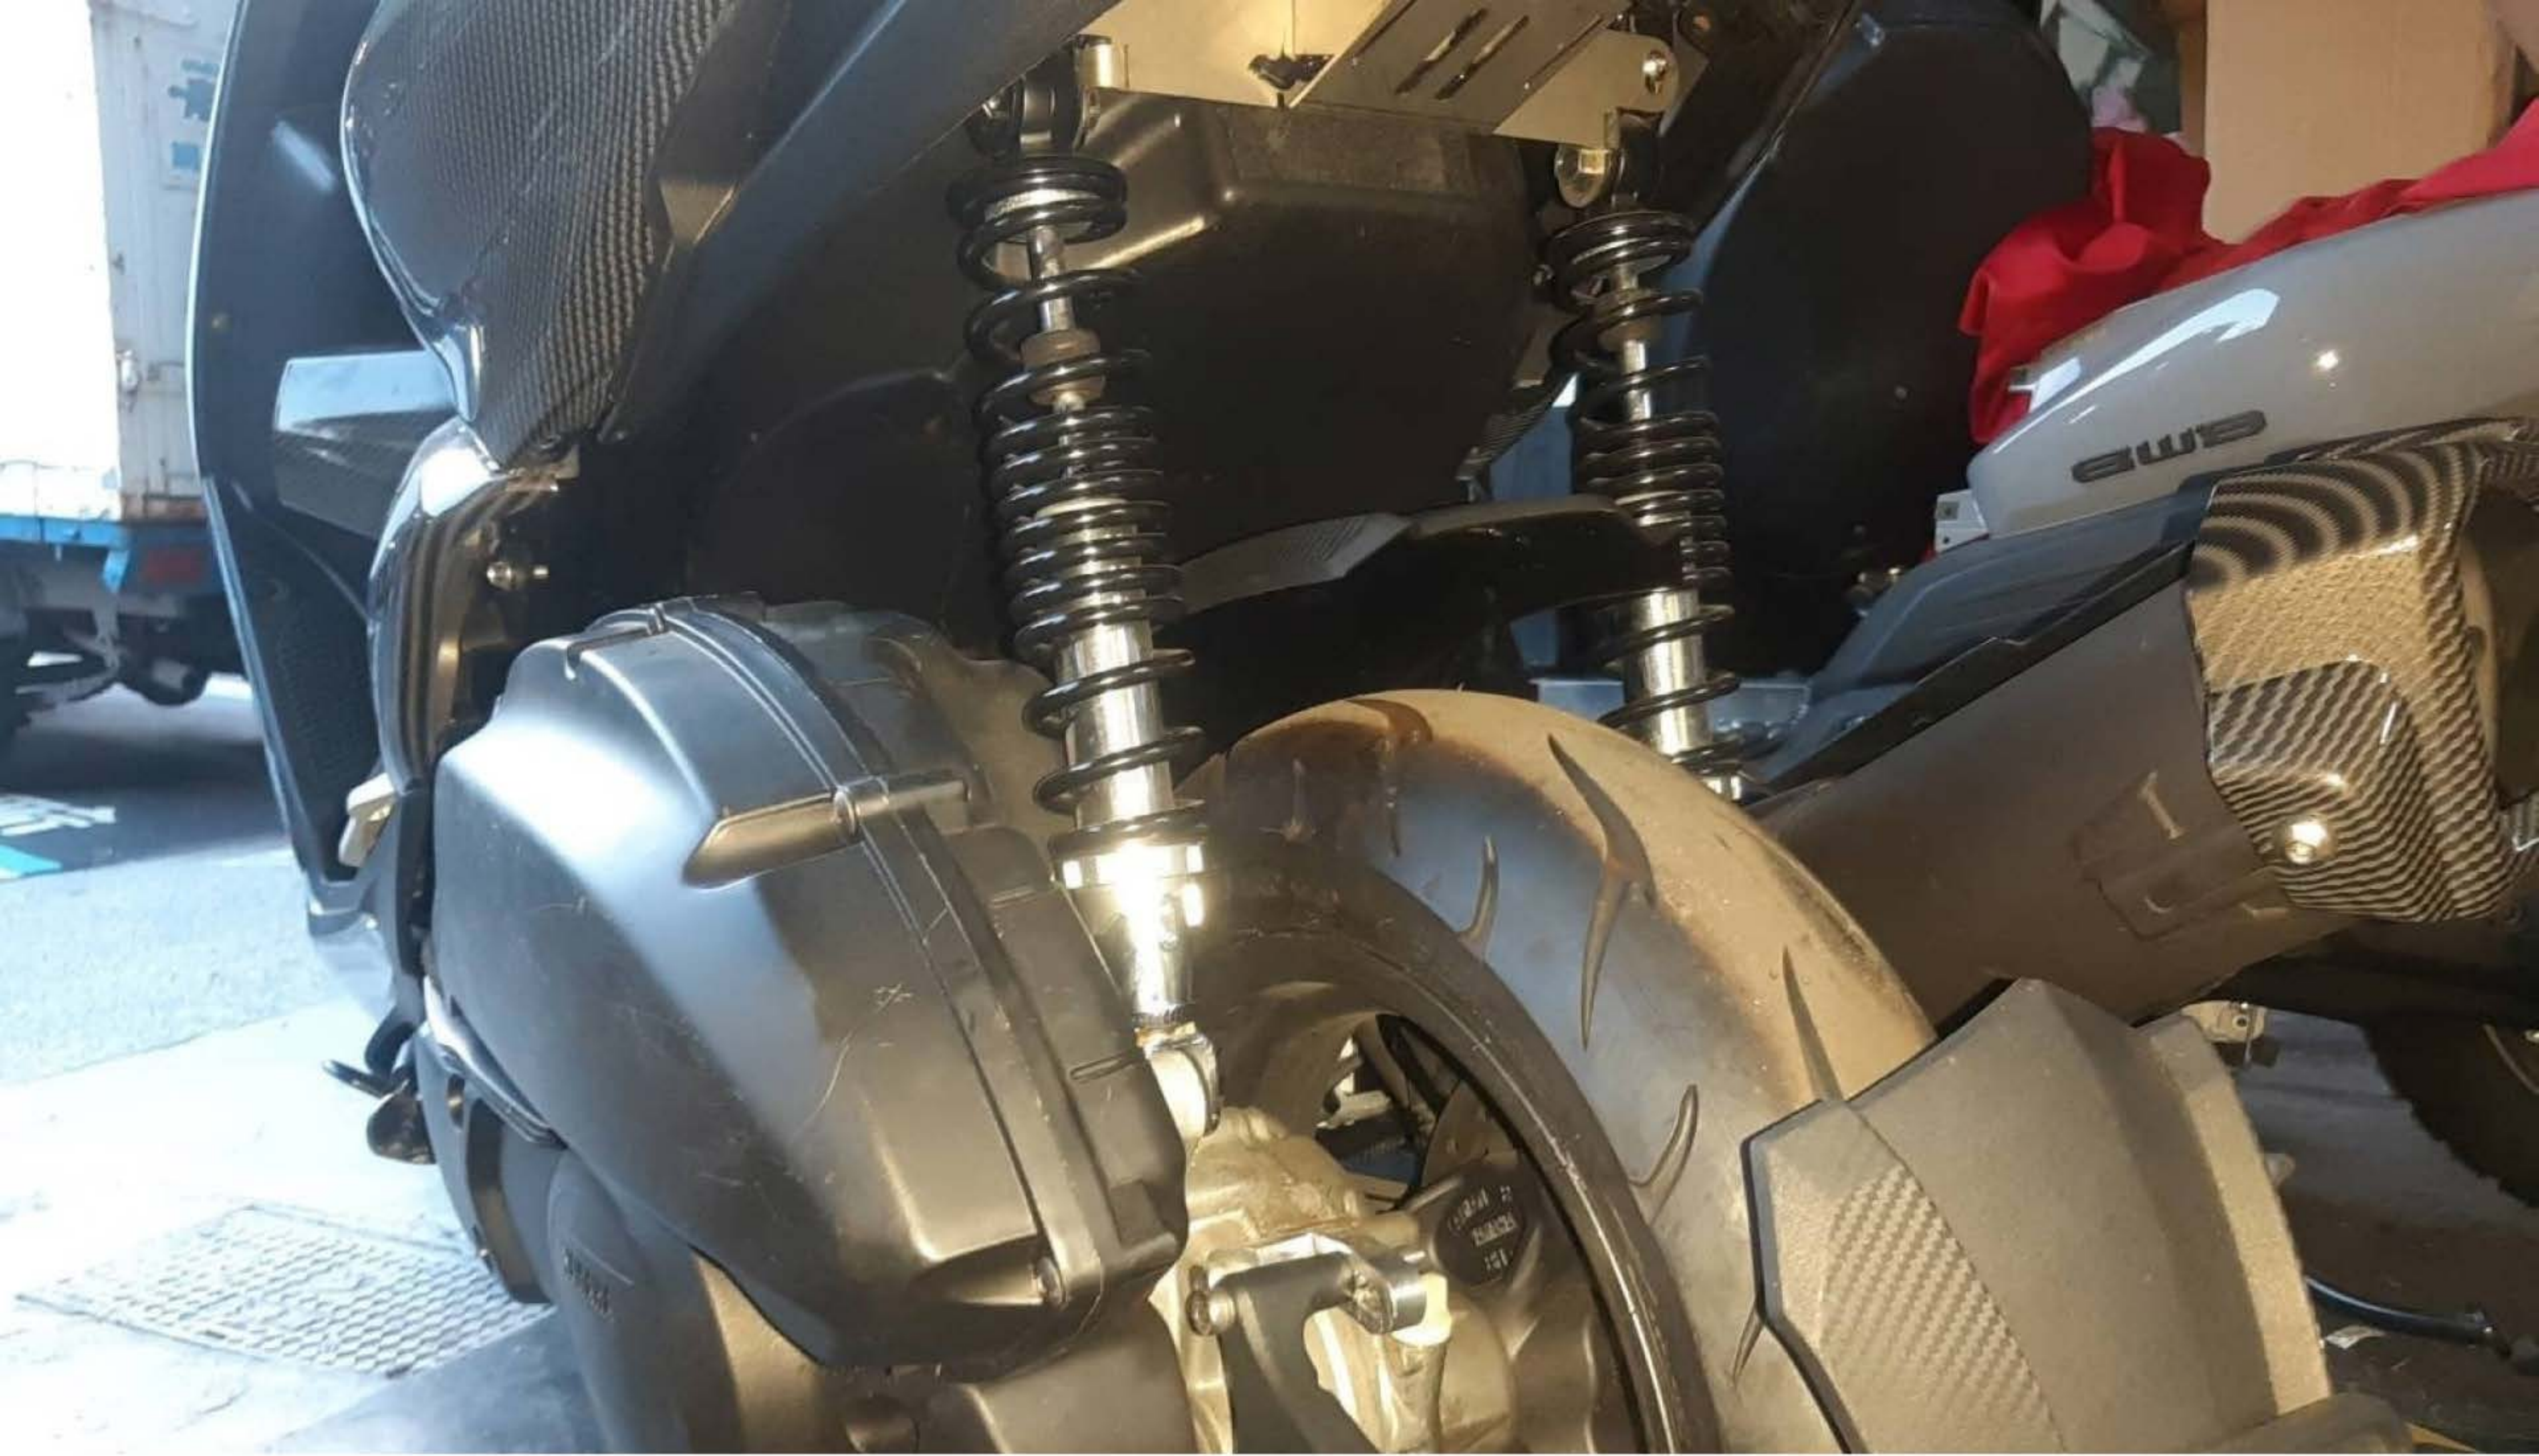

⑧ 修改完成後將螺絲鎖回



燈の匠
Light Master

LIGHTMASTER



安裝完成

<http://tw-lightmaster.com/shop/>