



燈の匠
Light Master

LIGHTMASTER



FORCE 2.0

AUGUR

勁戰七代

類MT-09

後土除

安裝說明書

Assembly Instructions

產品內容

擋泥板



支架 A



支架 B



長螺絲×2
大墊片×2




短螺絲×2
大墊片×2



螺帽×2
小螺絲×2
大墊片×2

調整支架×2
螺帽×2
長螺絲×2
大墊片×2

所需工具

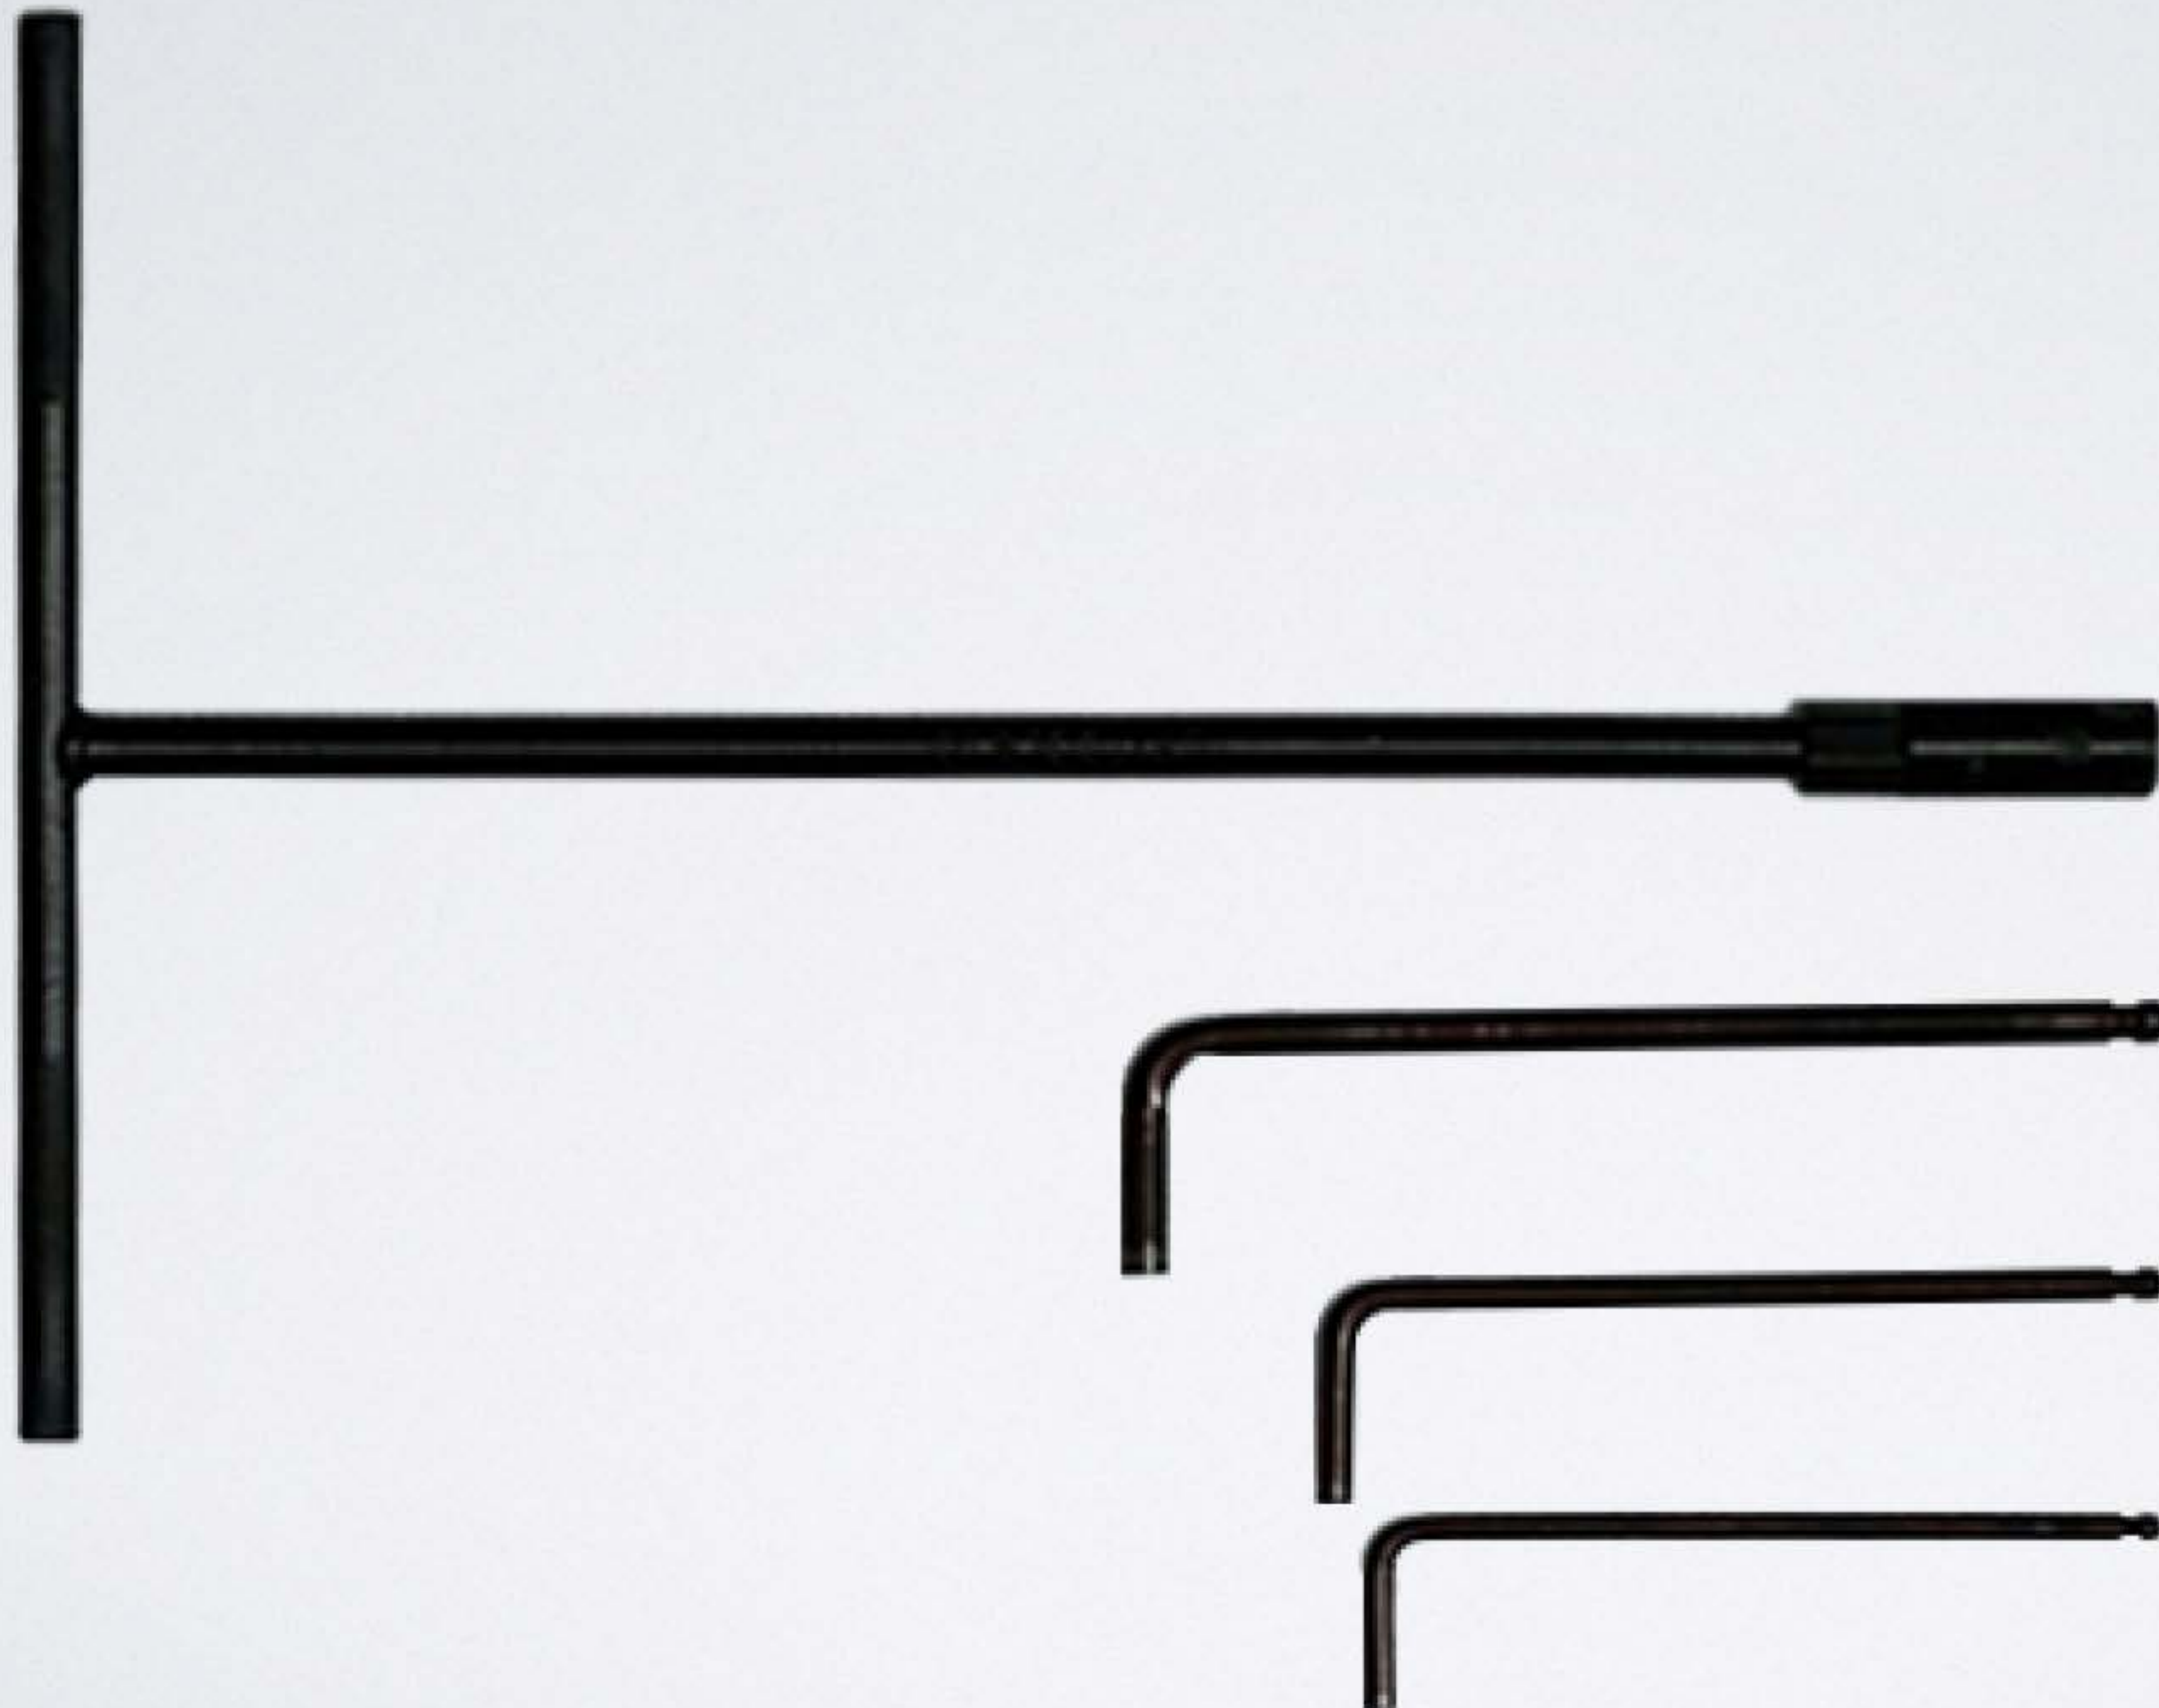

外六角 10mm

內六角 6mm

內六角 5mm

內六角 4mm

安裝說明


卸下螺絲
拆除原廠後土除



擋泥板內部墊上螺帽



鎖上支架B

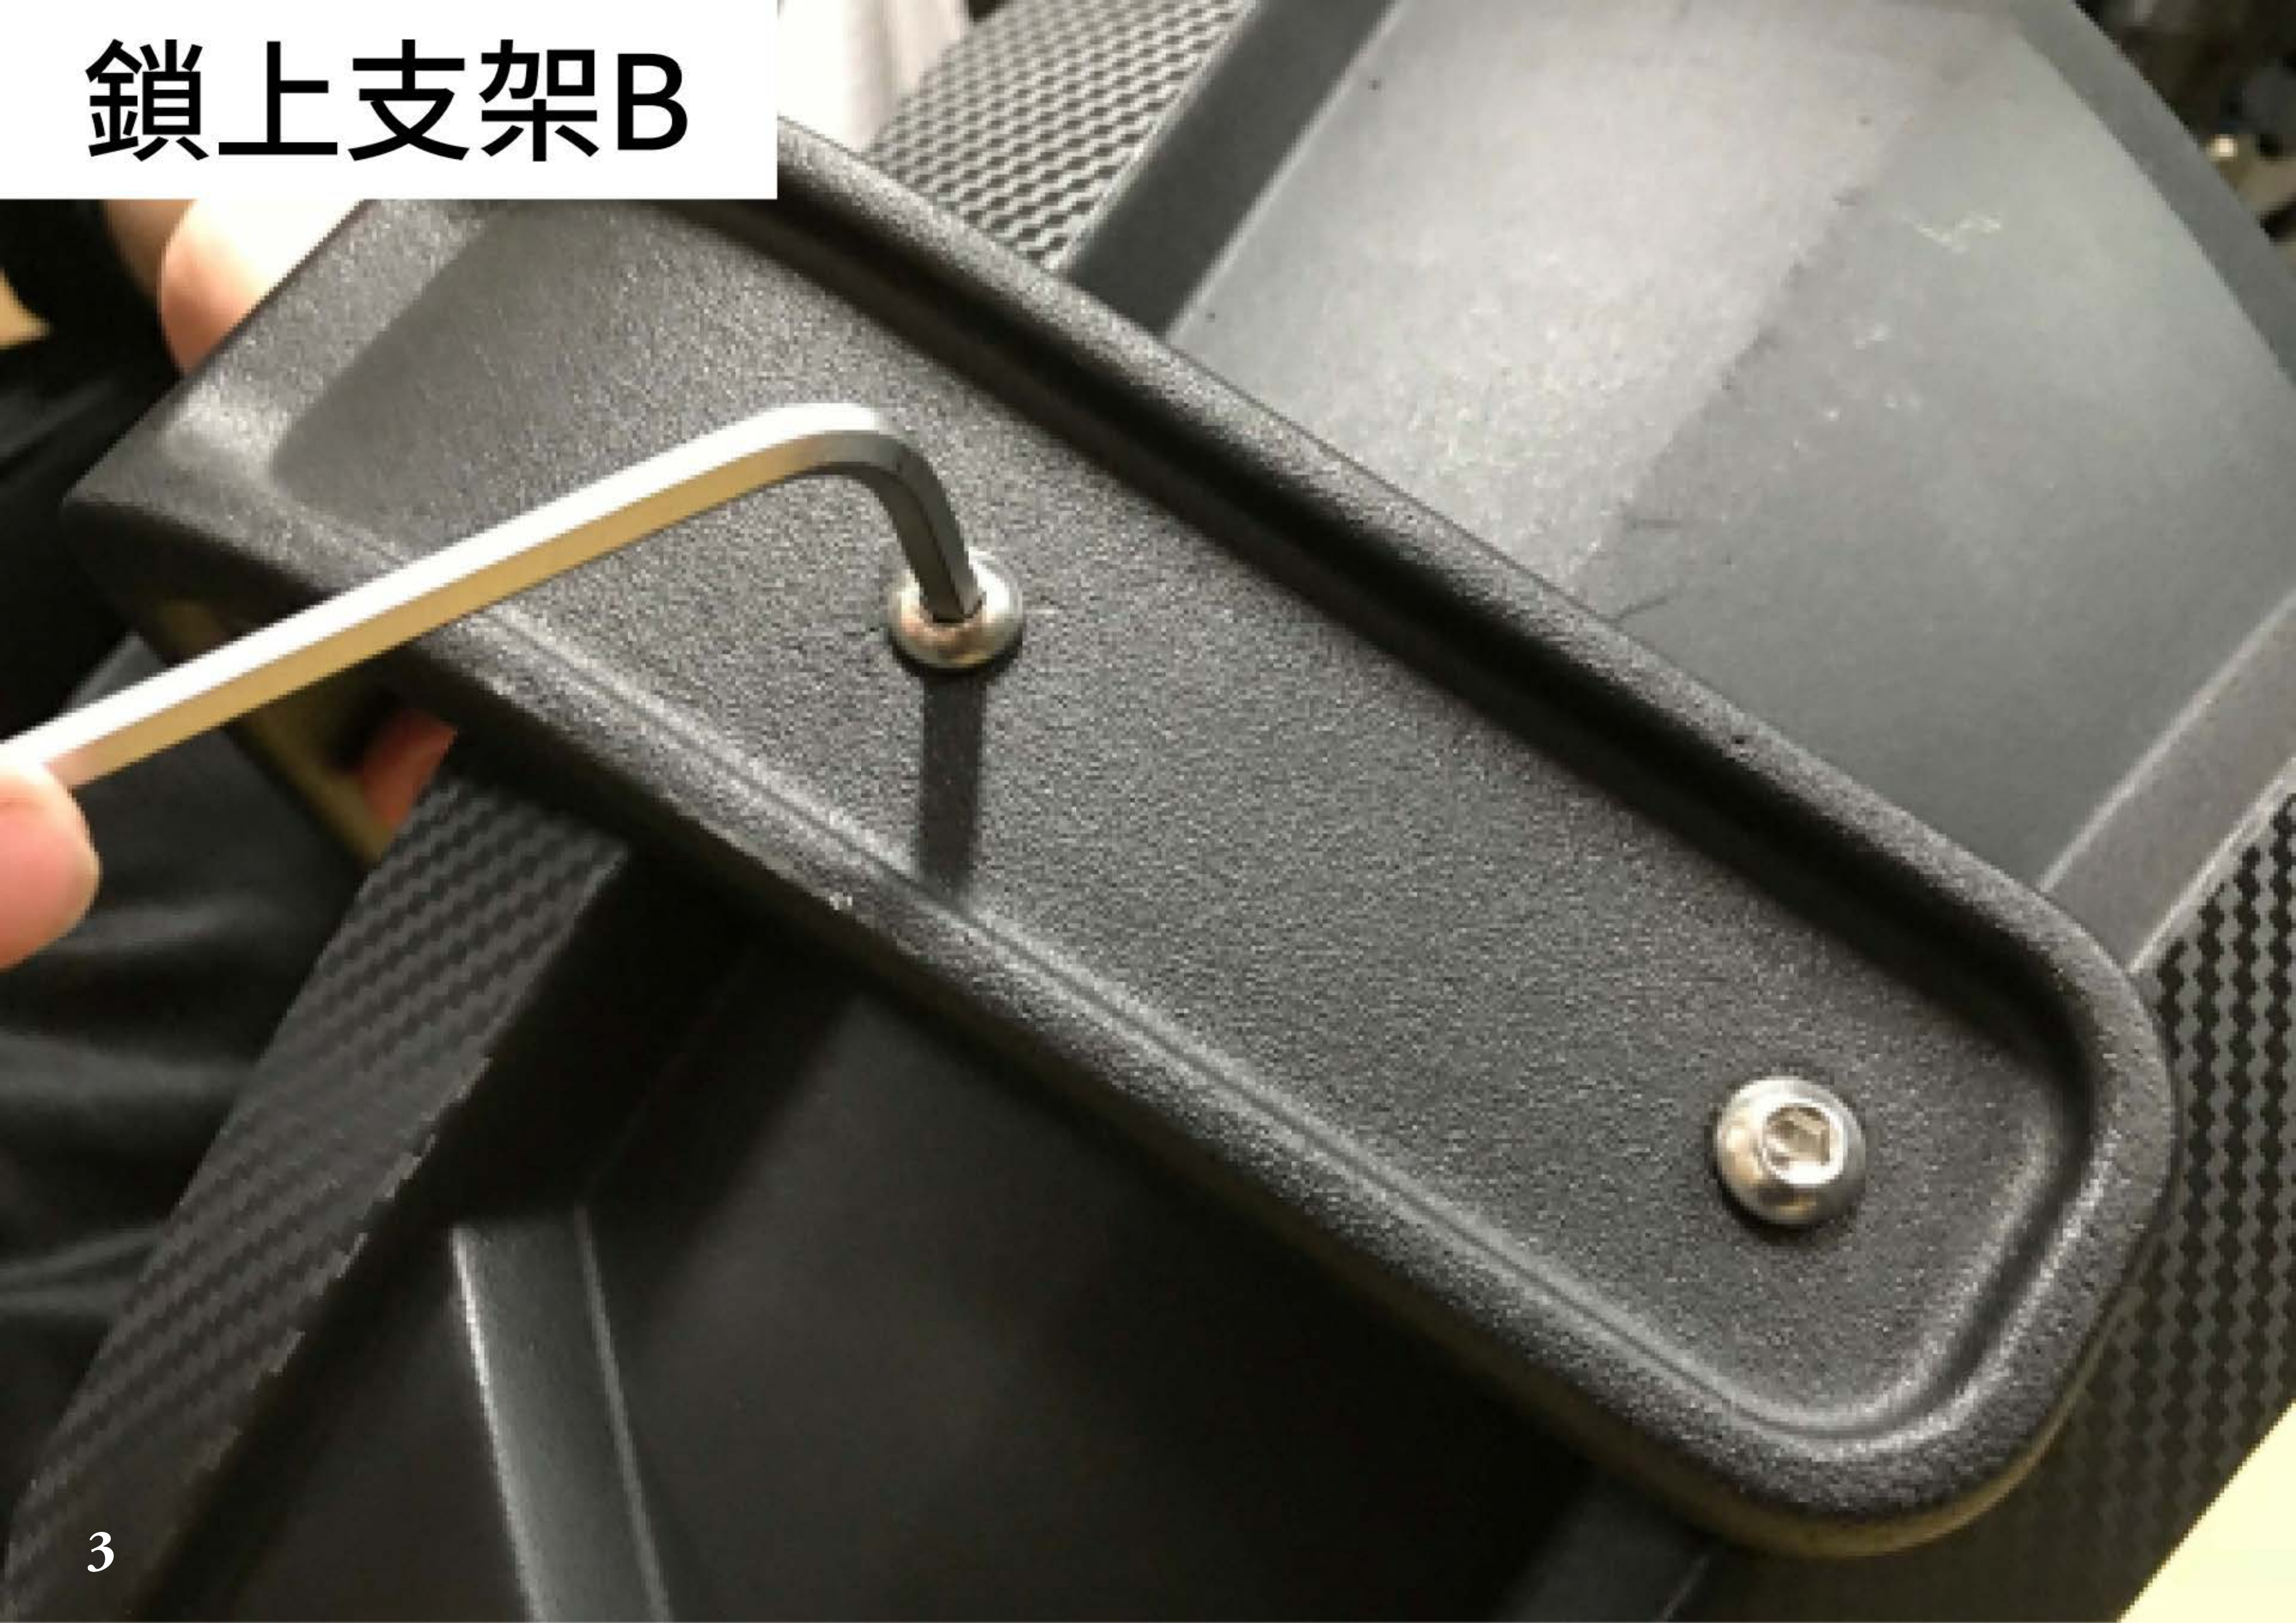

將支架 A 與支架 B 鎖上



❖ 請墊上墊片再行鎖上

卸除螺絲



A close-up photograph of a car's headlight assembly. A black plastic adjustment bracket is being attached to the metal headlight housing. The bracket has a yellow plastic cap on top and a silver adjustment knob on the side. The headlight lens is visible in the background, and the car's body panels are in the foreground.

裝上調整支架

❖ 先不要鎖緊，
稍後還要調整角度

將組好的後土除支架裝上
讓螺帽卡進調整支架的溝槽裡
調整好想要的角度後再鎖緊
鎖緊後即安裝完成！





燈の匠
Light Master

LIGHTMASTER



安裝完成

<http://tw-lightmaster.com/shop/>