



燈の匠
Light Master

LIGHTMASTER

FORCE

SMAX



類MT-09後土除
移植套件

安裝說明書
Assembly Instructions



安裝說明

❶ 首先先將中柱立起



② 接著用十字起子將箭頭處的螺絲卸下



③ 將外蓋拆下



④ 再來用 T 桿 10 號將這兩顆螺絲拆下來





**⑤ 拆除完畢之後準備開始安裝
MT-09 後土除及轉接座**

⑥ 拿出螺絲及墊片





7 先將兩邊螺絲還有墊片
先穿過轉接座

A close-up photograph of a person's hand holding two small, silver-colored metal nuts. The hand is positioned palm-up, and the nuts are resting on the middle and ring fingers. A white rectangular text box is overlaid on the palm, containing the text '8 接著拿出螺帽'. In the background, a pair of pliers is visible, and the overall scene suggests a mechanical repair or assembly process.


8 接著拿出螺帽



**⑨ 將兩邊螺絲與螺帽稍微鎖緊固定
以便上車之後進行角度調整**

上車對準鎖點



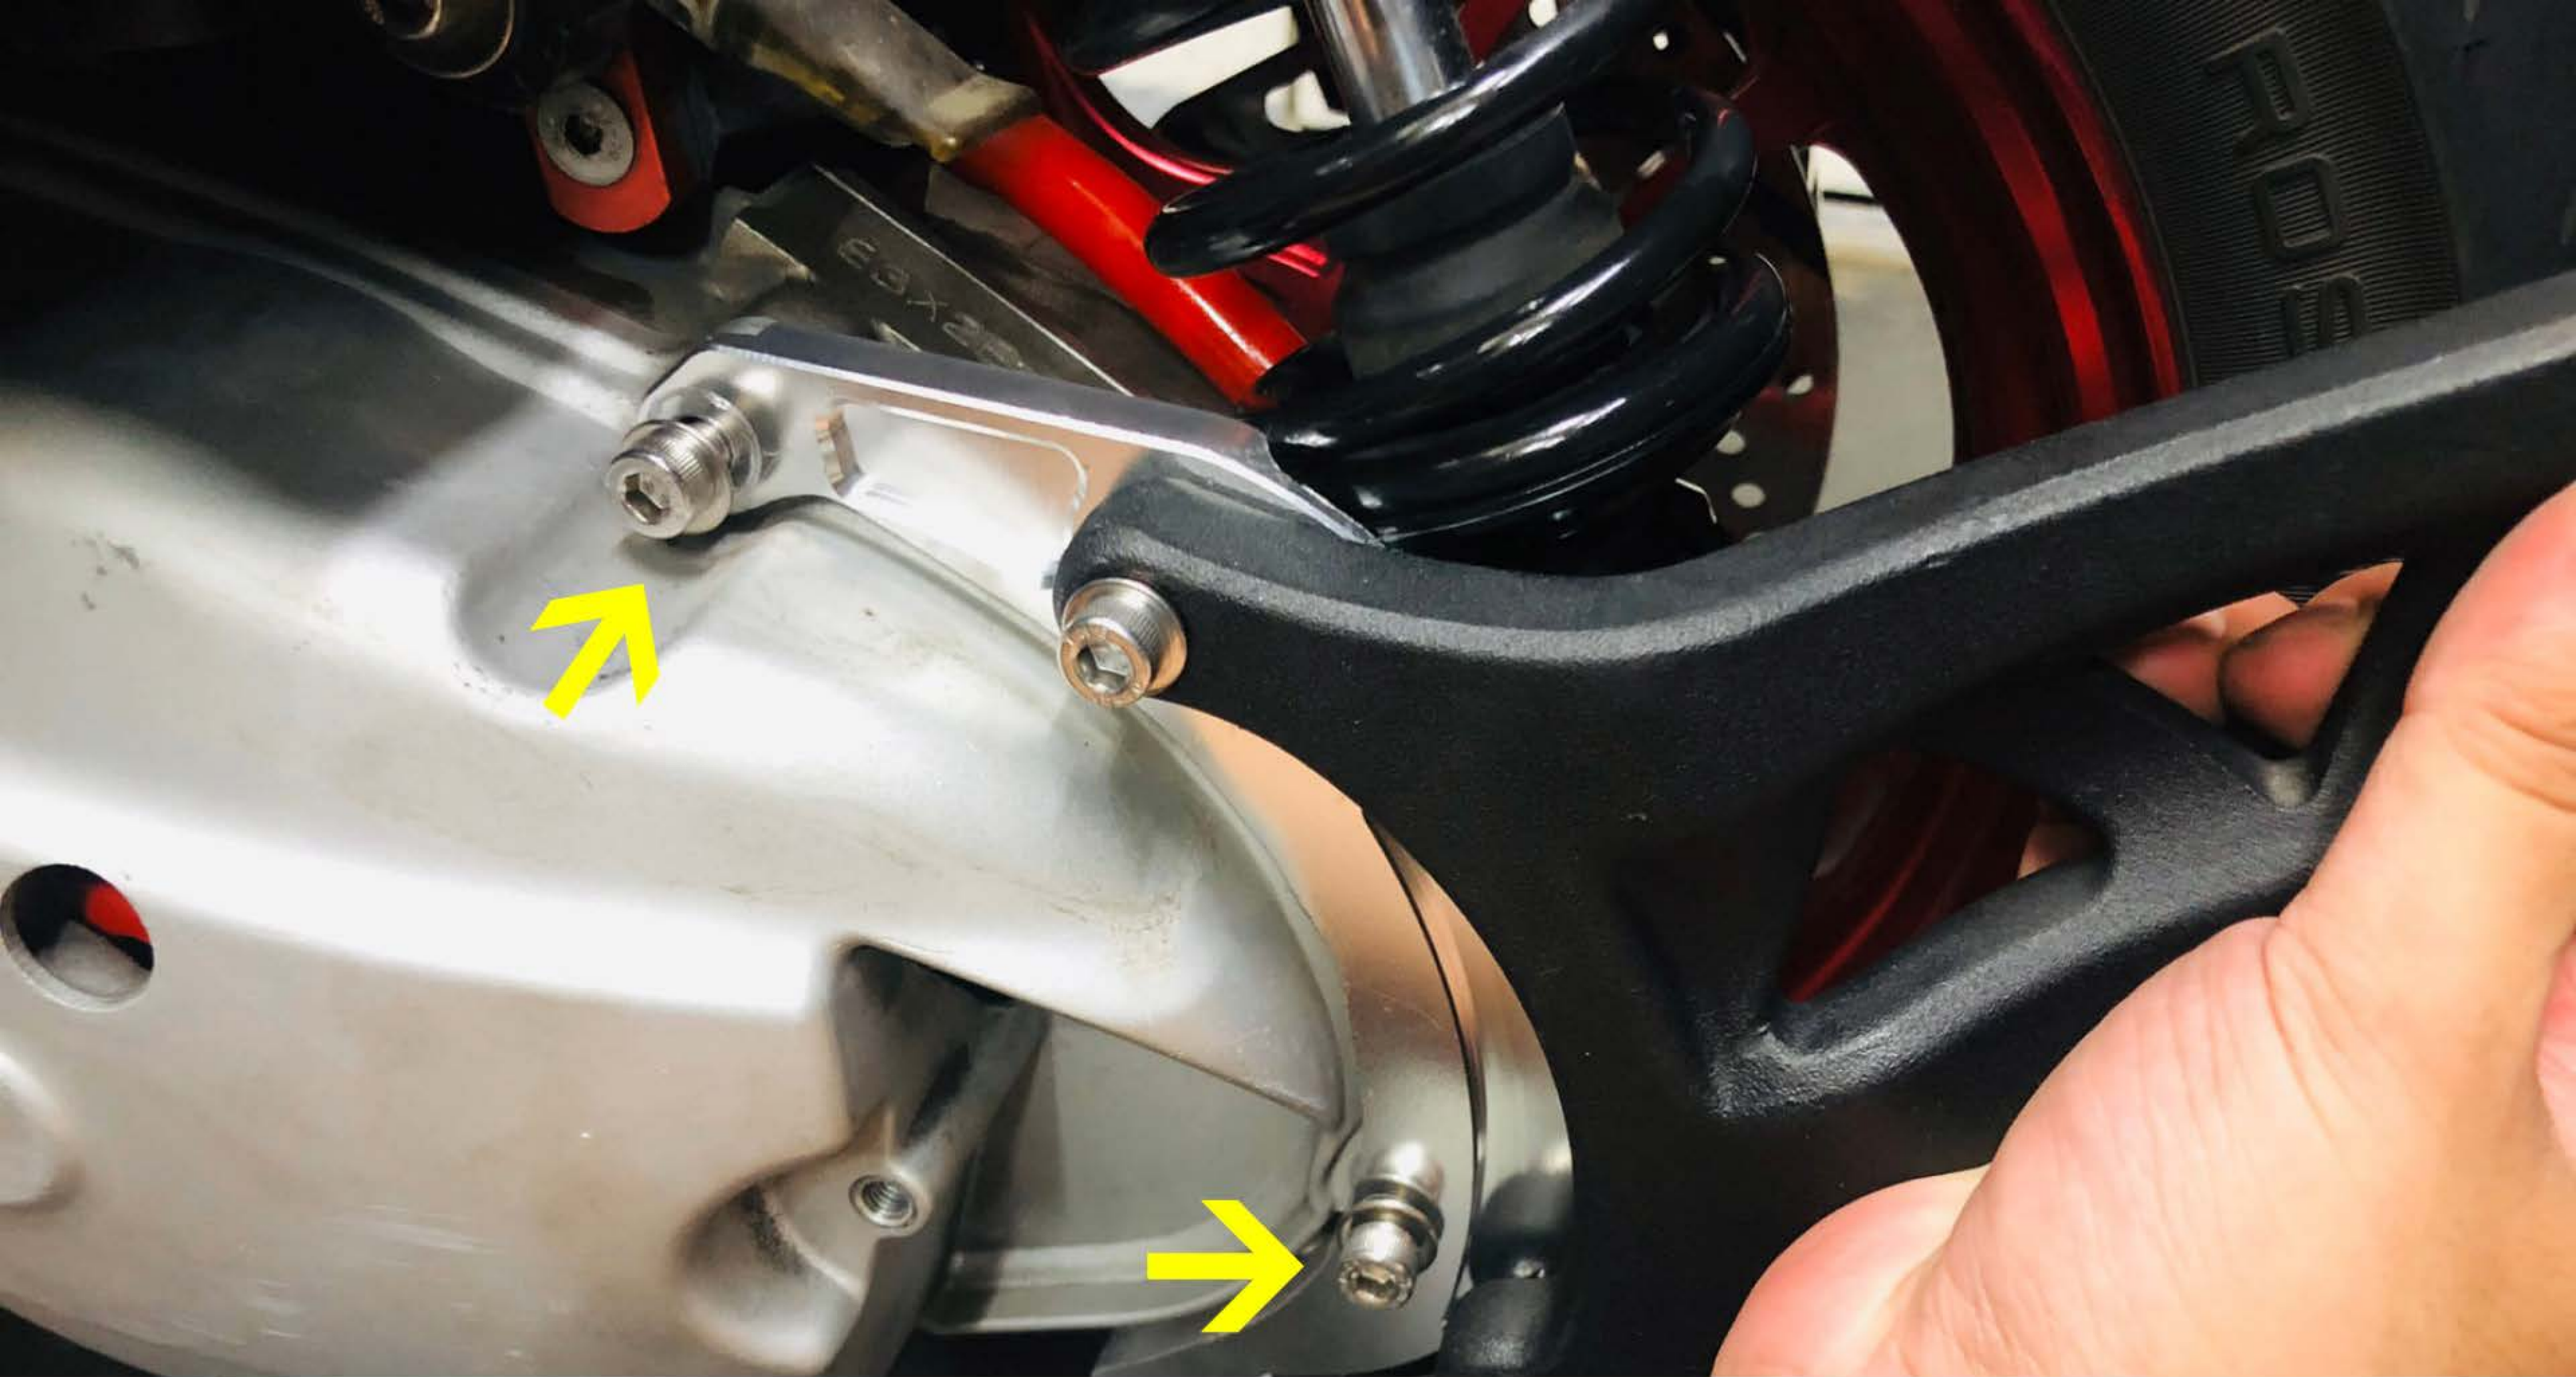

**⑩ 將剩下的兩個螺絲以及墊片
分別鎖在箭頭標示處**

⑪ 內六角扳手將固定支架的上下兩顆螺絲鎖緊





■ 黃色部分必須切除才能讓外蓋合上車

■ 青色部分會影響到轉接座的滑動該修多少
可依需求自行發揮



⑫ 裝了轉接座之後需要切削修改傳動外蓋才能安裝上車



13 最後將修改完畢的傳動外蓋安裝
並將全部螺絲依序鎖回去



安裝完成！



燈の匠
Light Master

LIGHTMASTER



安裝完成

<http://tw-lightmaster.com/shop/>