



燈の匠
Light Master

LIGHTMASTER

TMAX



燈具五件組

【2012 - 2016 年適用】

安裝說明書
Assembly Instructions


產品內容



光導五件組



前方向燈

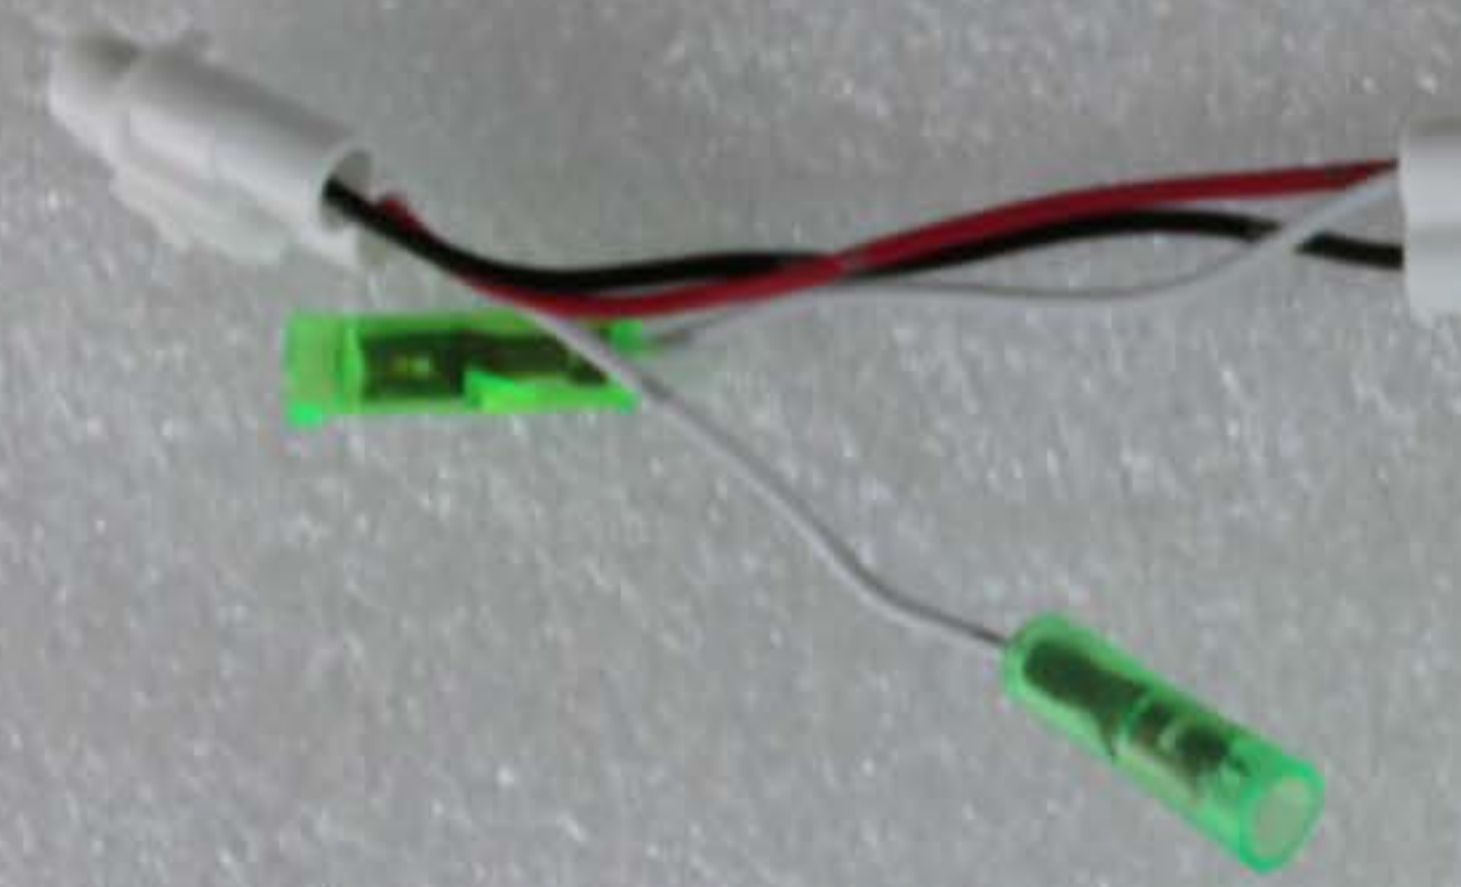

15~16年式線組



12~14年式線組


❖ 請先依照車型自行安裝線組

A rear direction light assembly is shown, partially wrapped in clear plastic. It has several wires extending from it, including a red wire, a yellow wire, and a white wire. A black plastic mounting bracket is attached to the top. To the right of the light is a white plastic connector with four wires (red, yellow, red, and green) plugged into it. The wires are labeled with green tape. The entire assembly is laid out on a white surface.

後方向燈


轉接線組

❖ 請先依照車型自行安裝線組

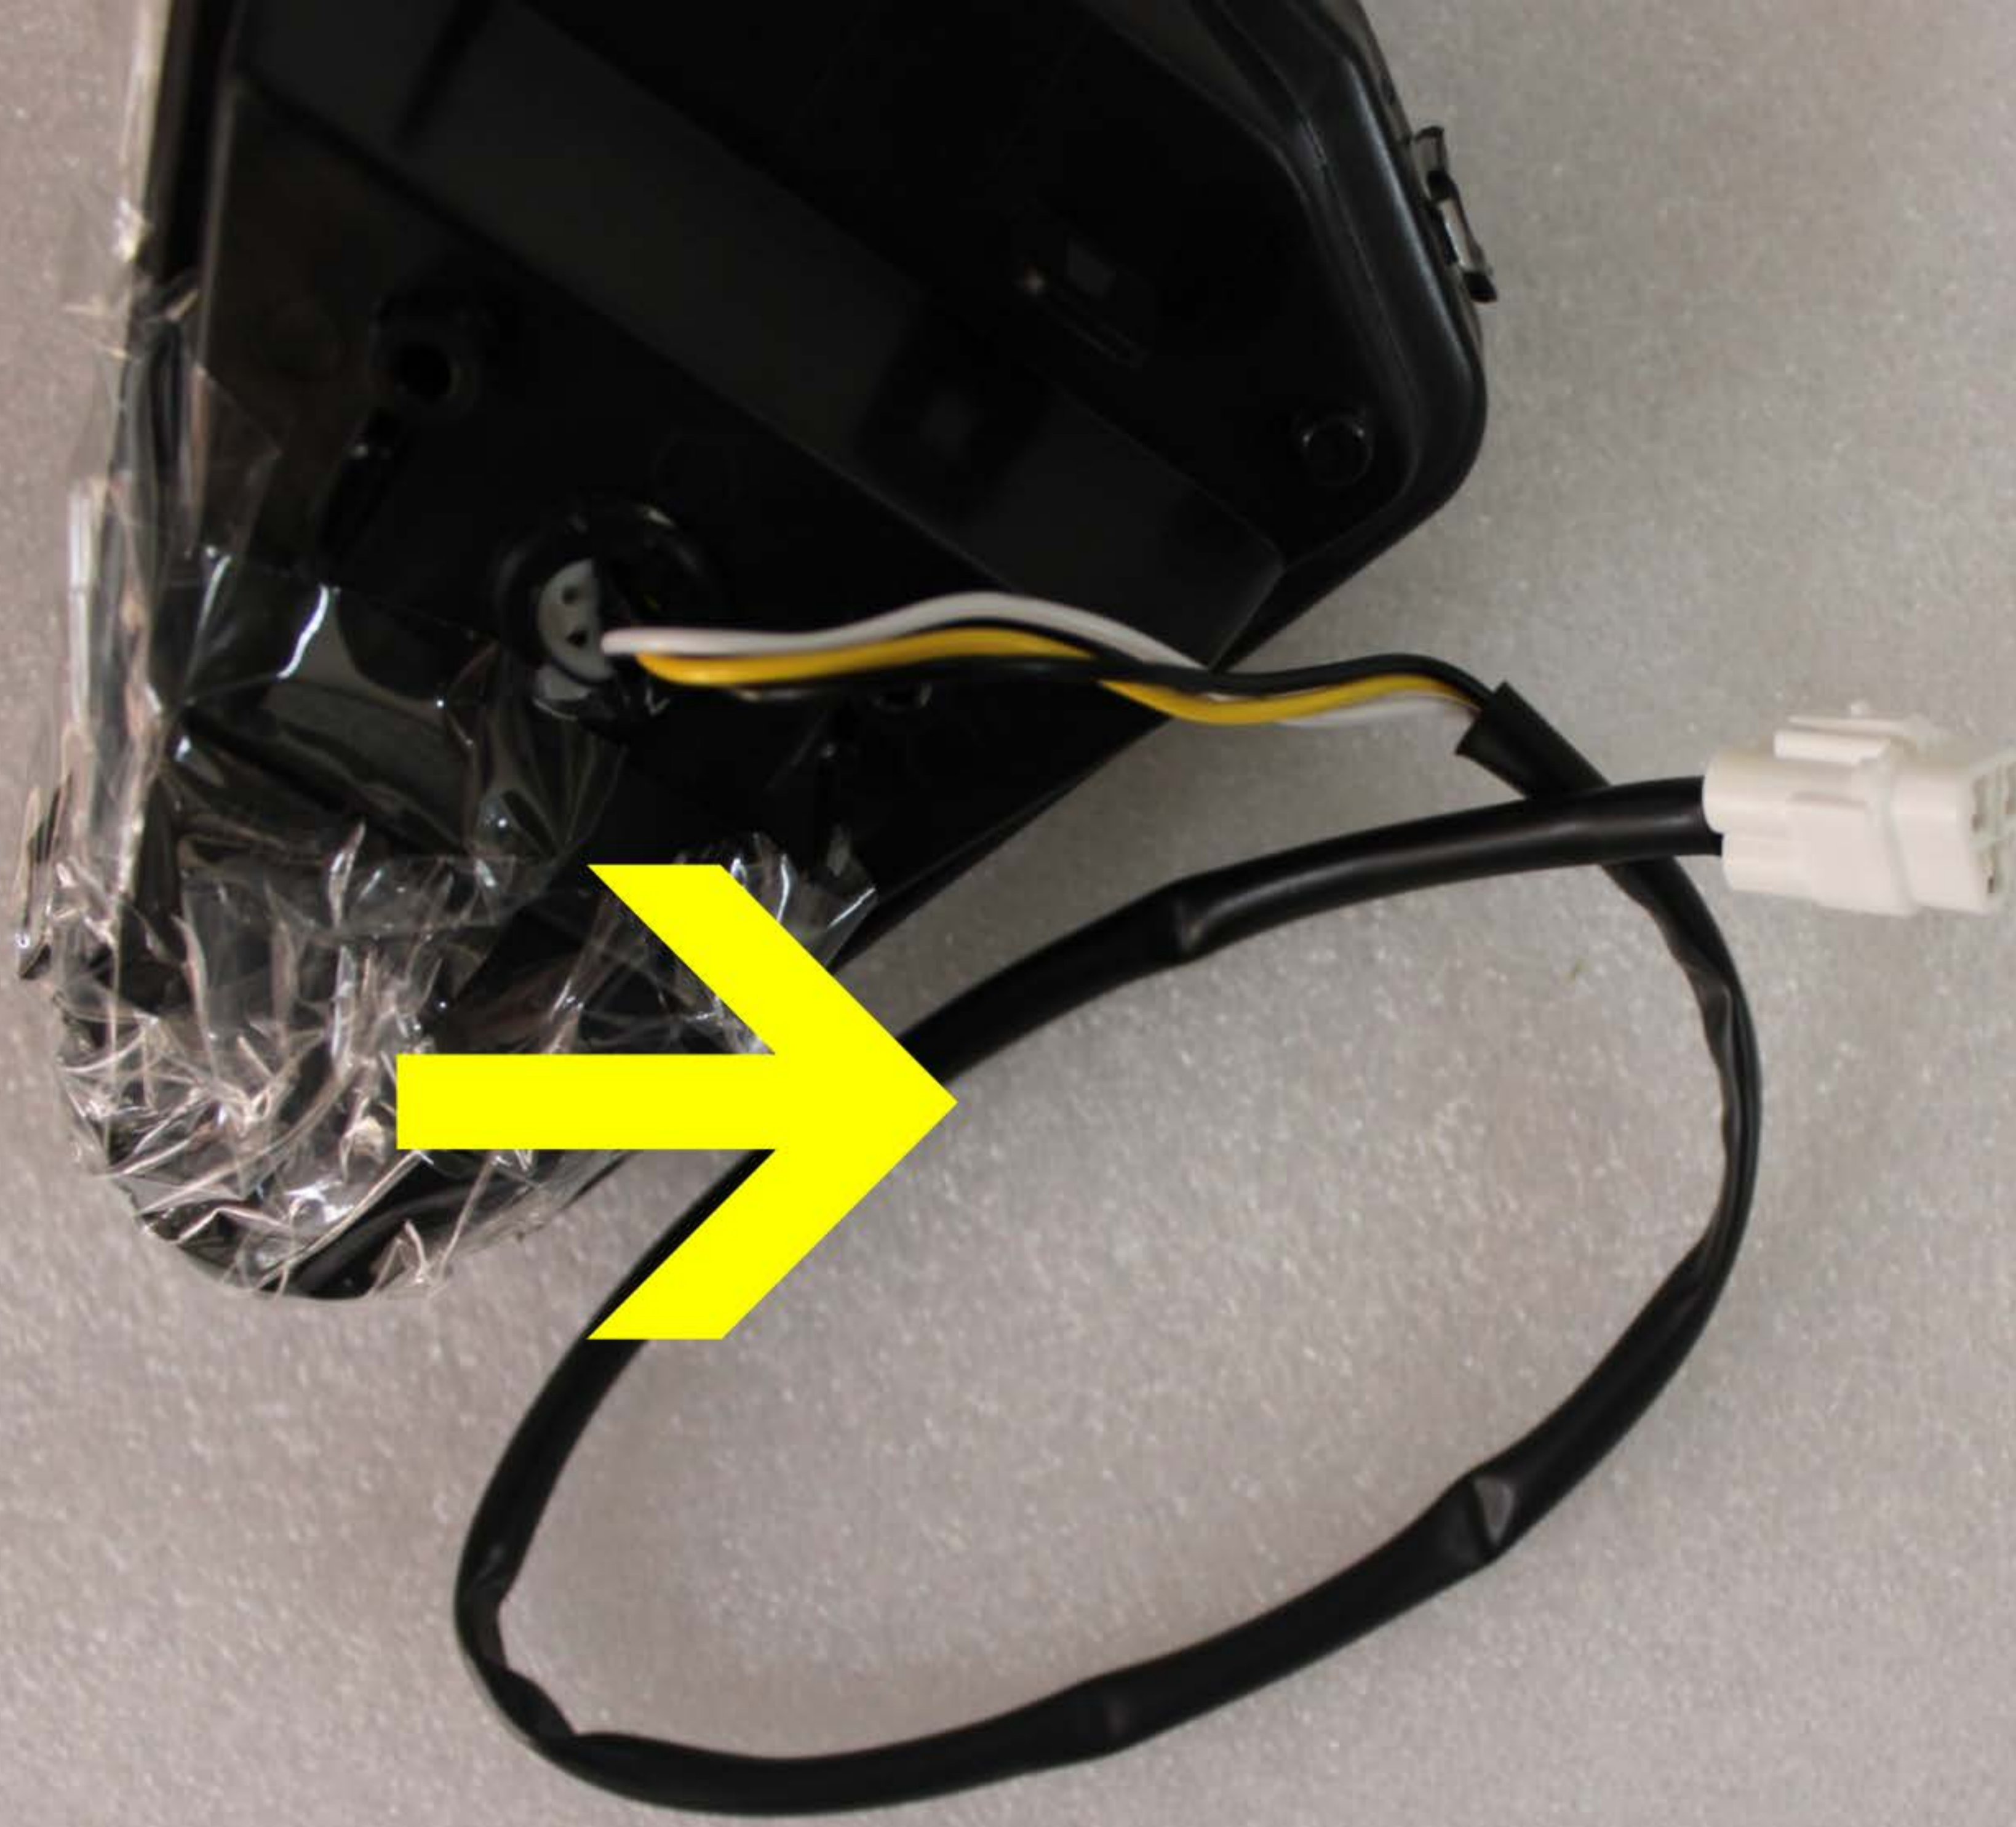

行煞燈線組

所需工具

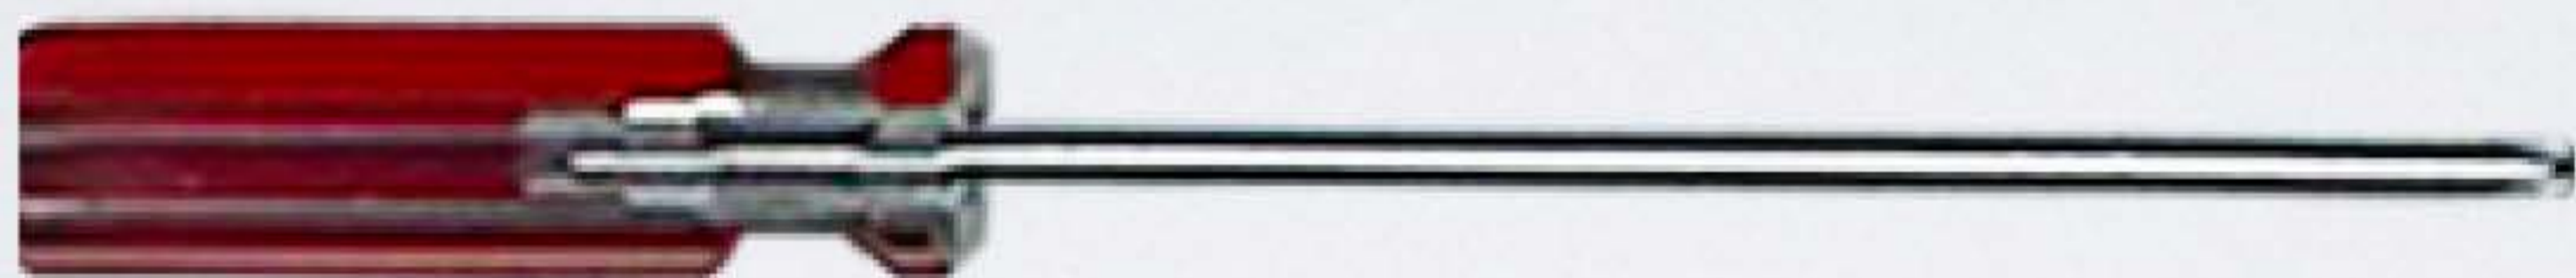

十字螺絲起子



外六角 10mm



內六角 6mm

安裝步驟

① 燈具

② 繼電器


安裝說明

① 燈具


卸下大燈下方螺絲，拆下大盾




卸下左右四顆螺絲，拆下後照鏡

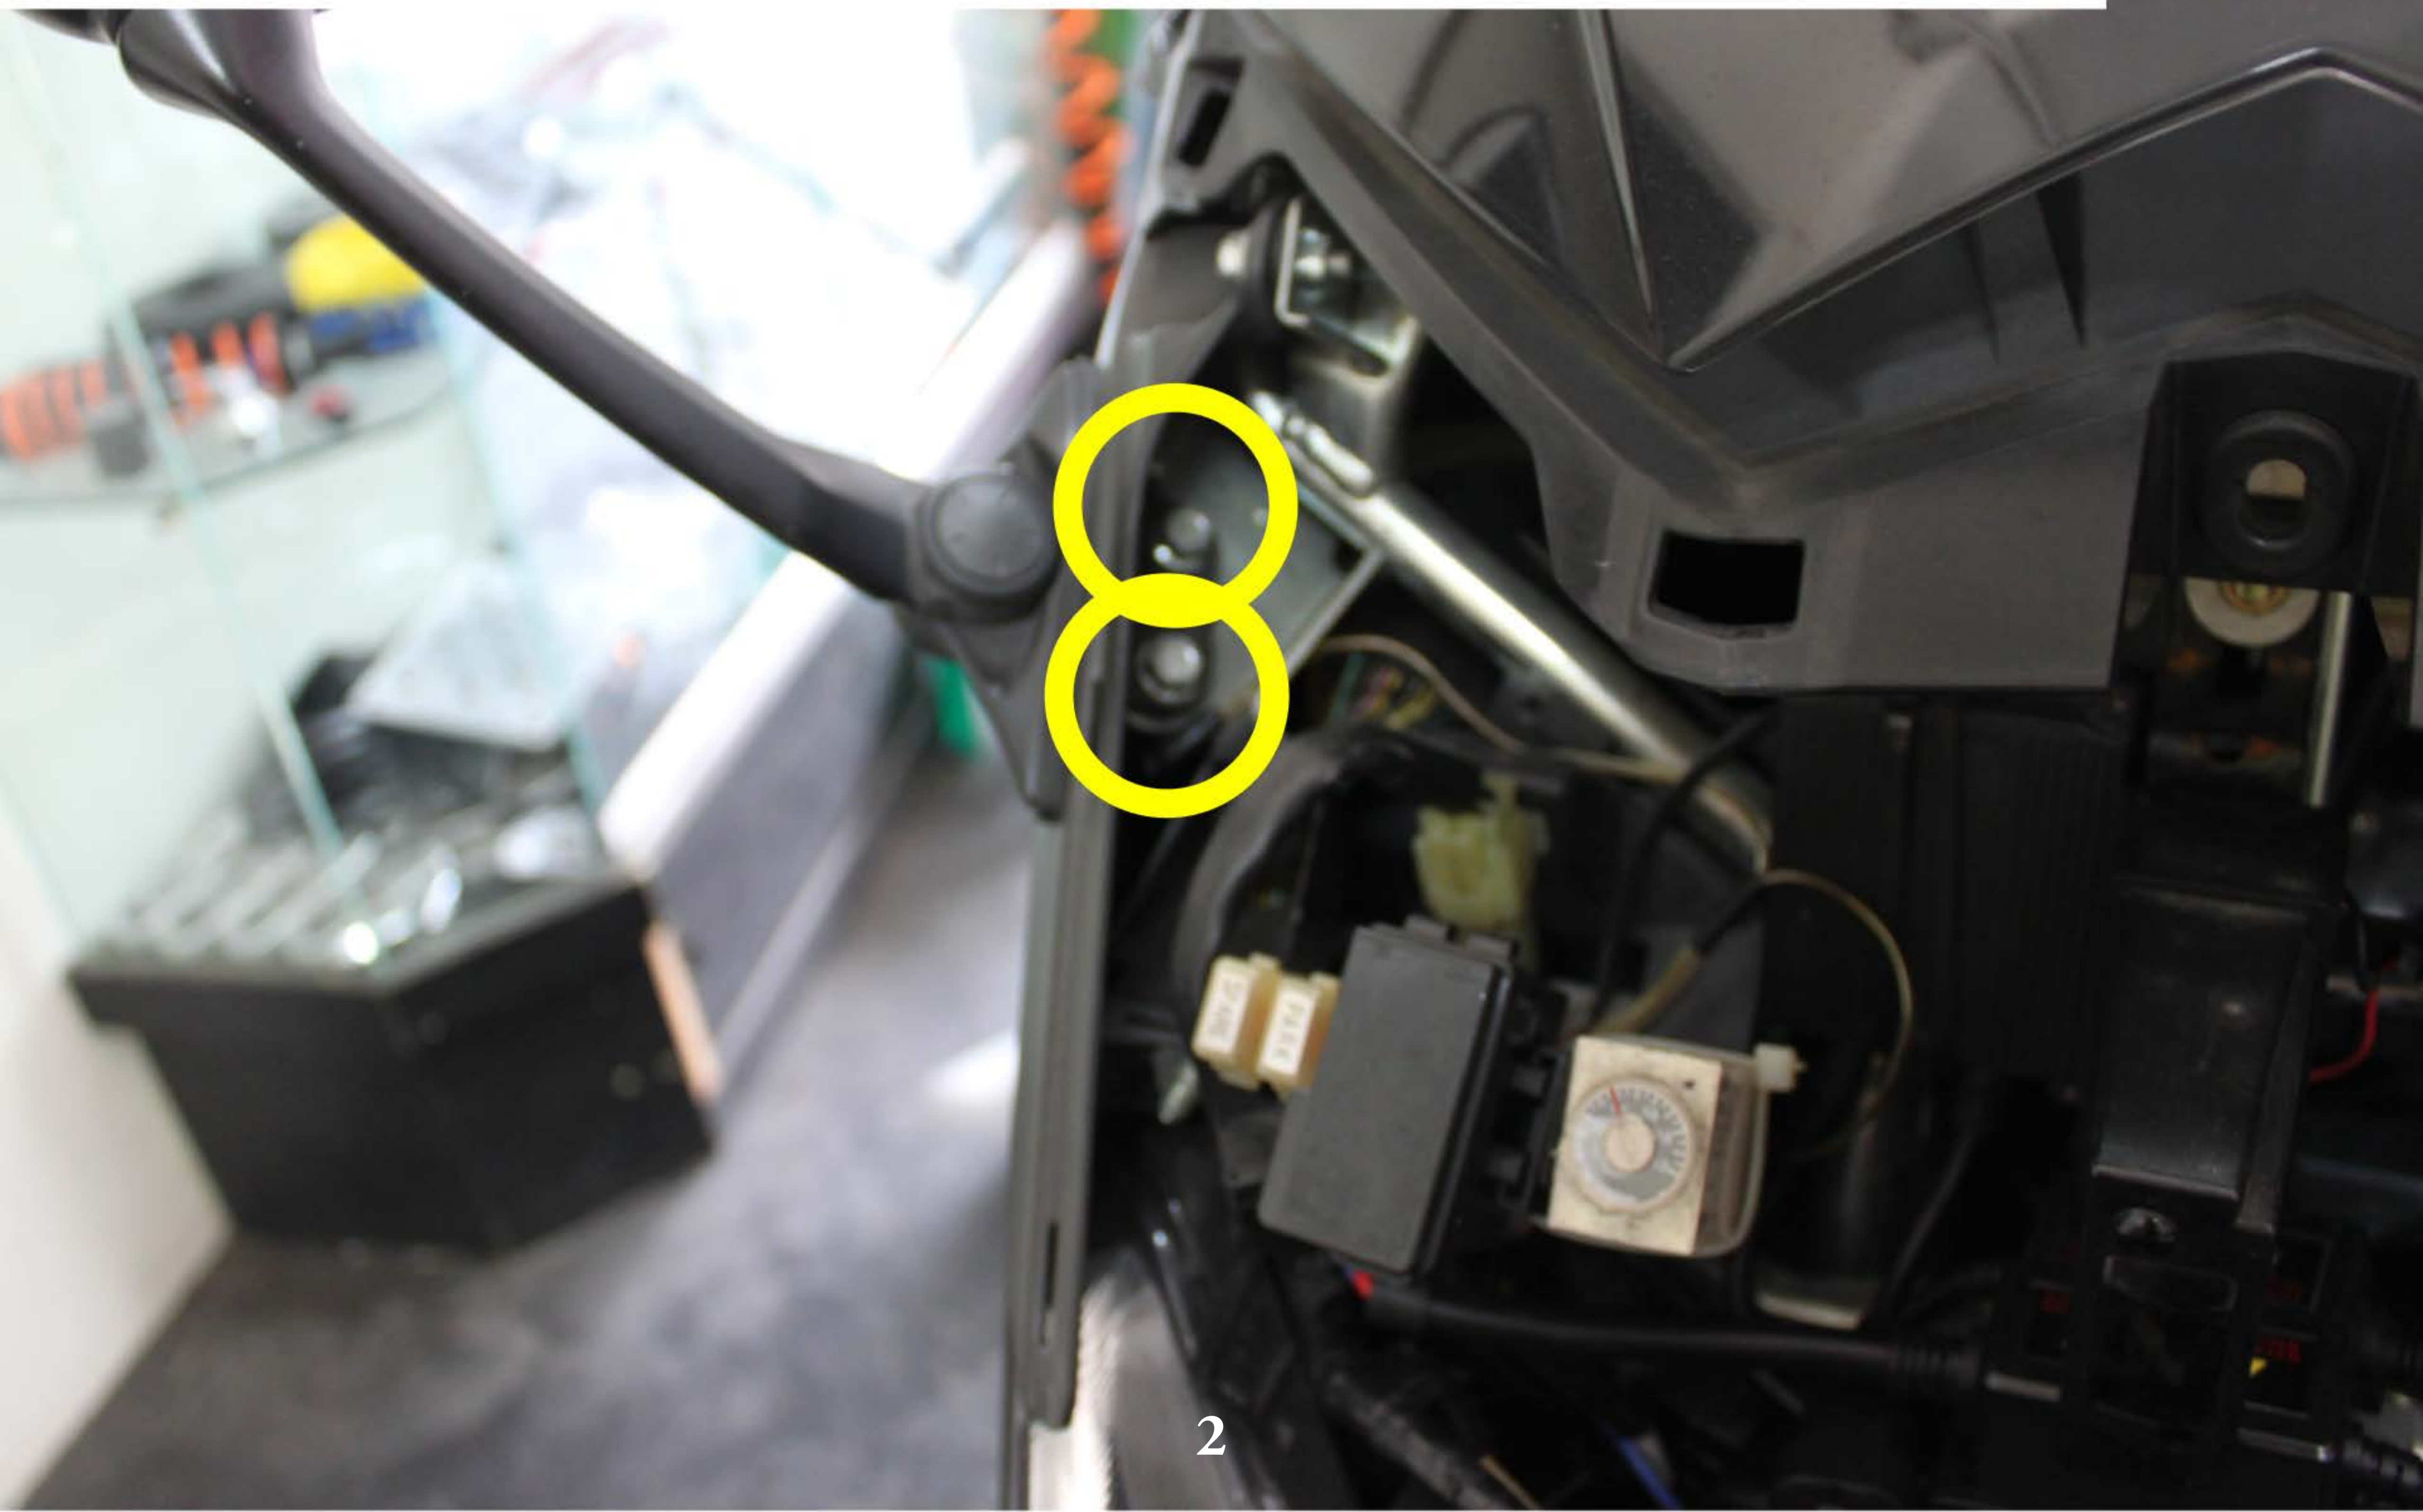

卸下大燈中間螺絲

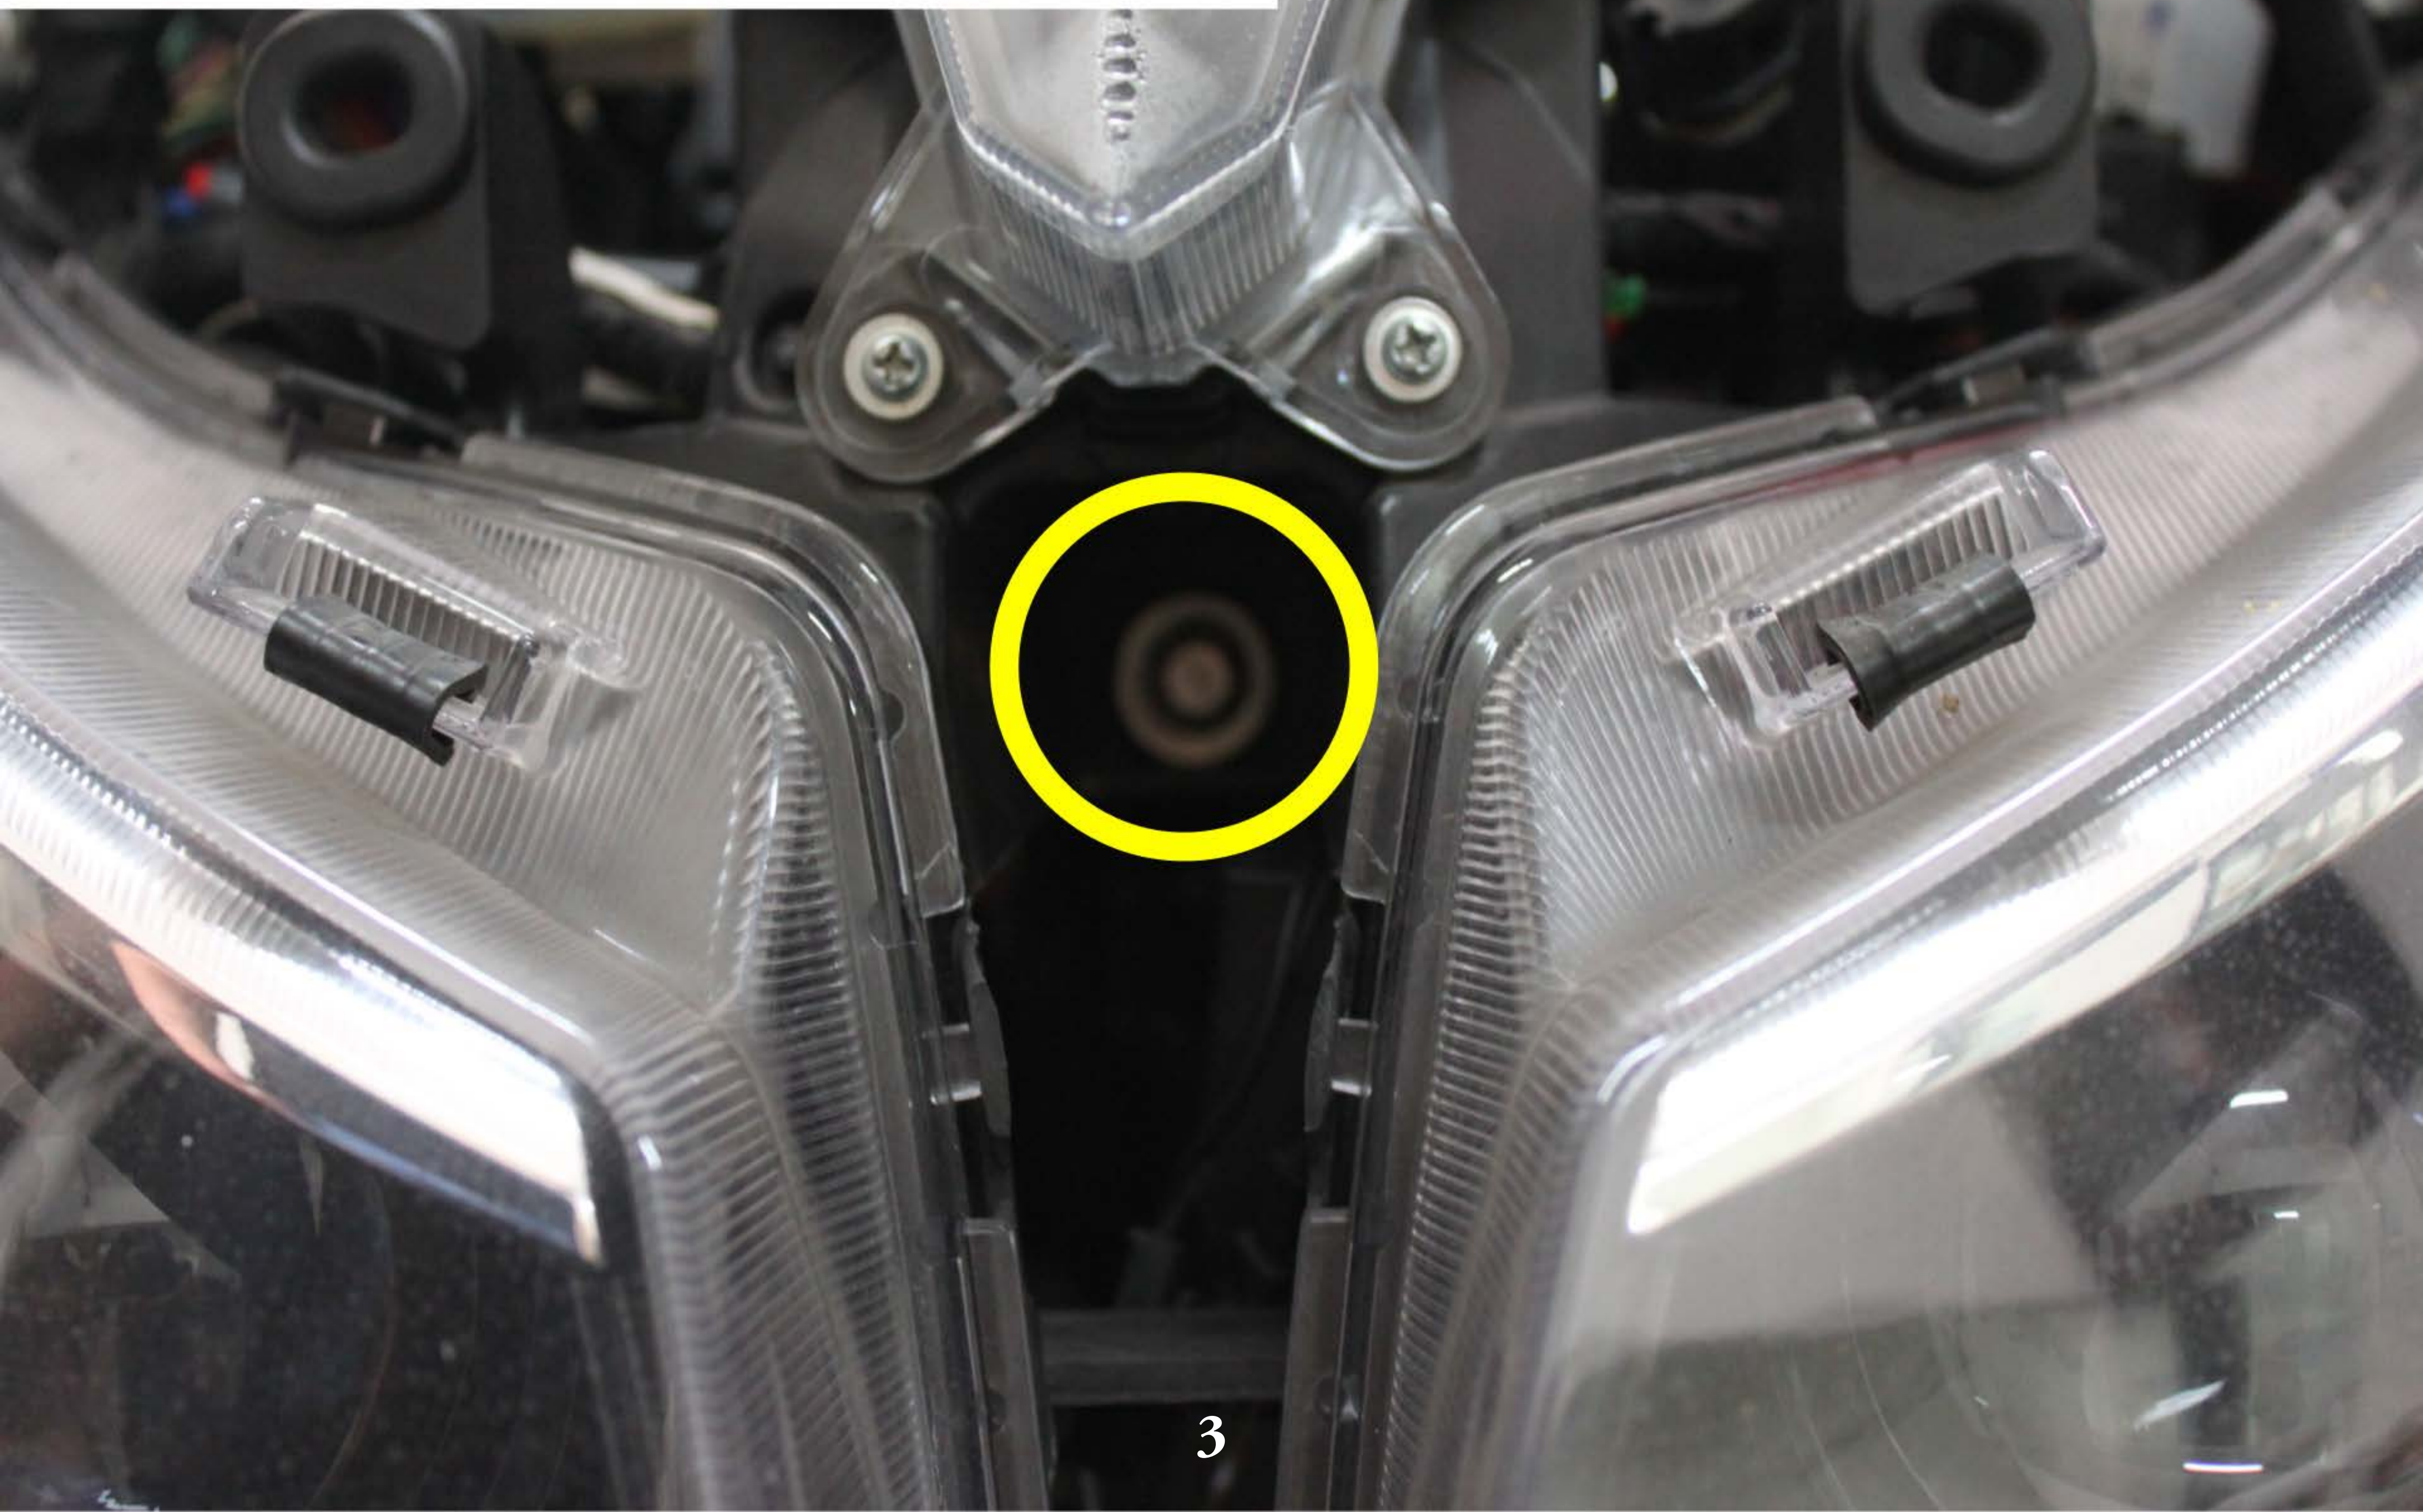

卸下側邊左右螺絲

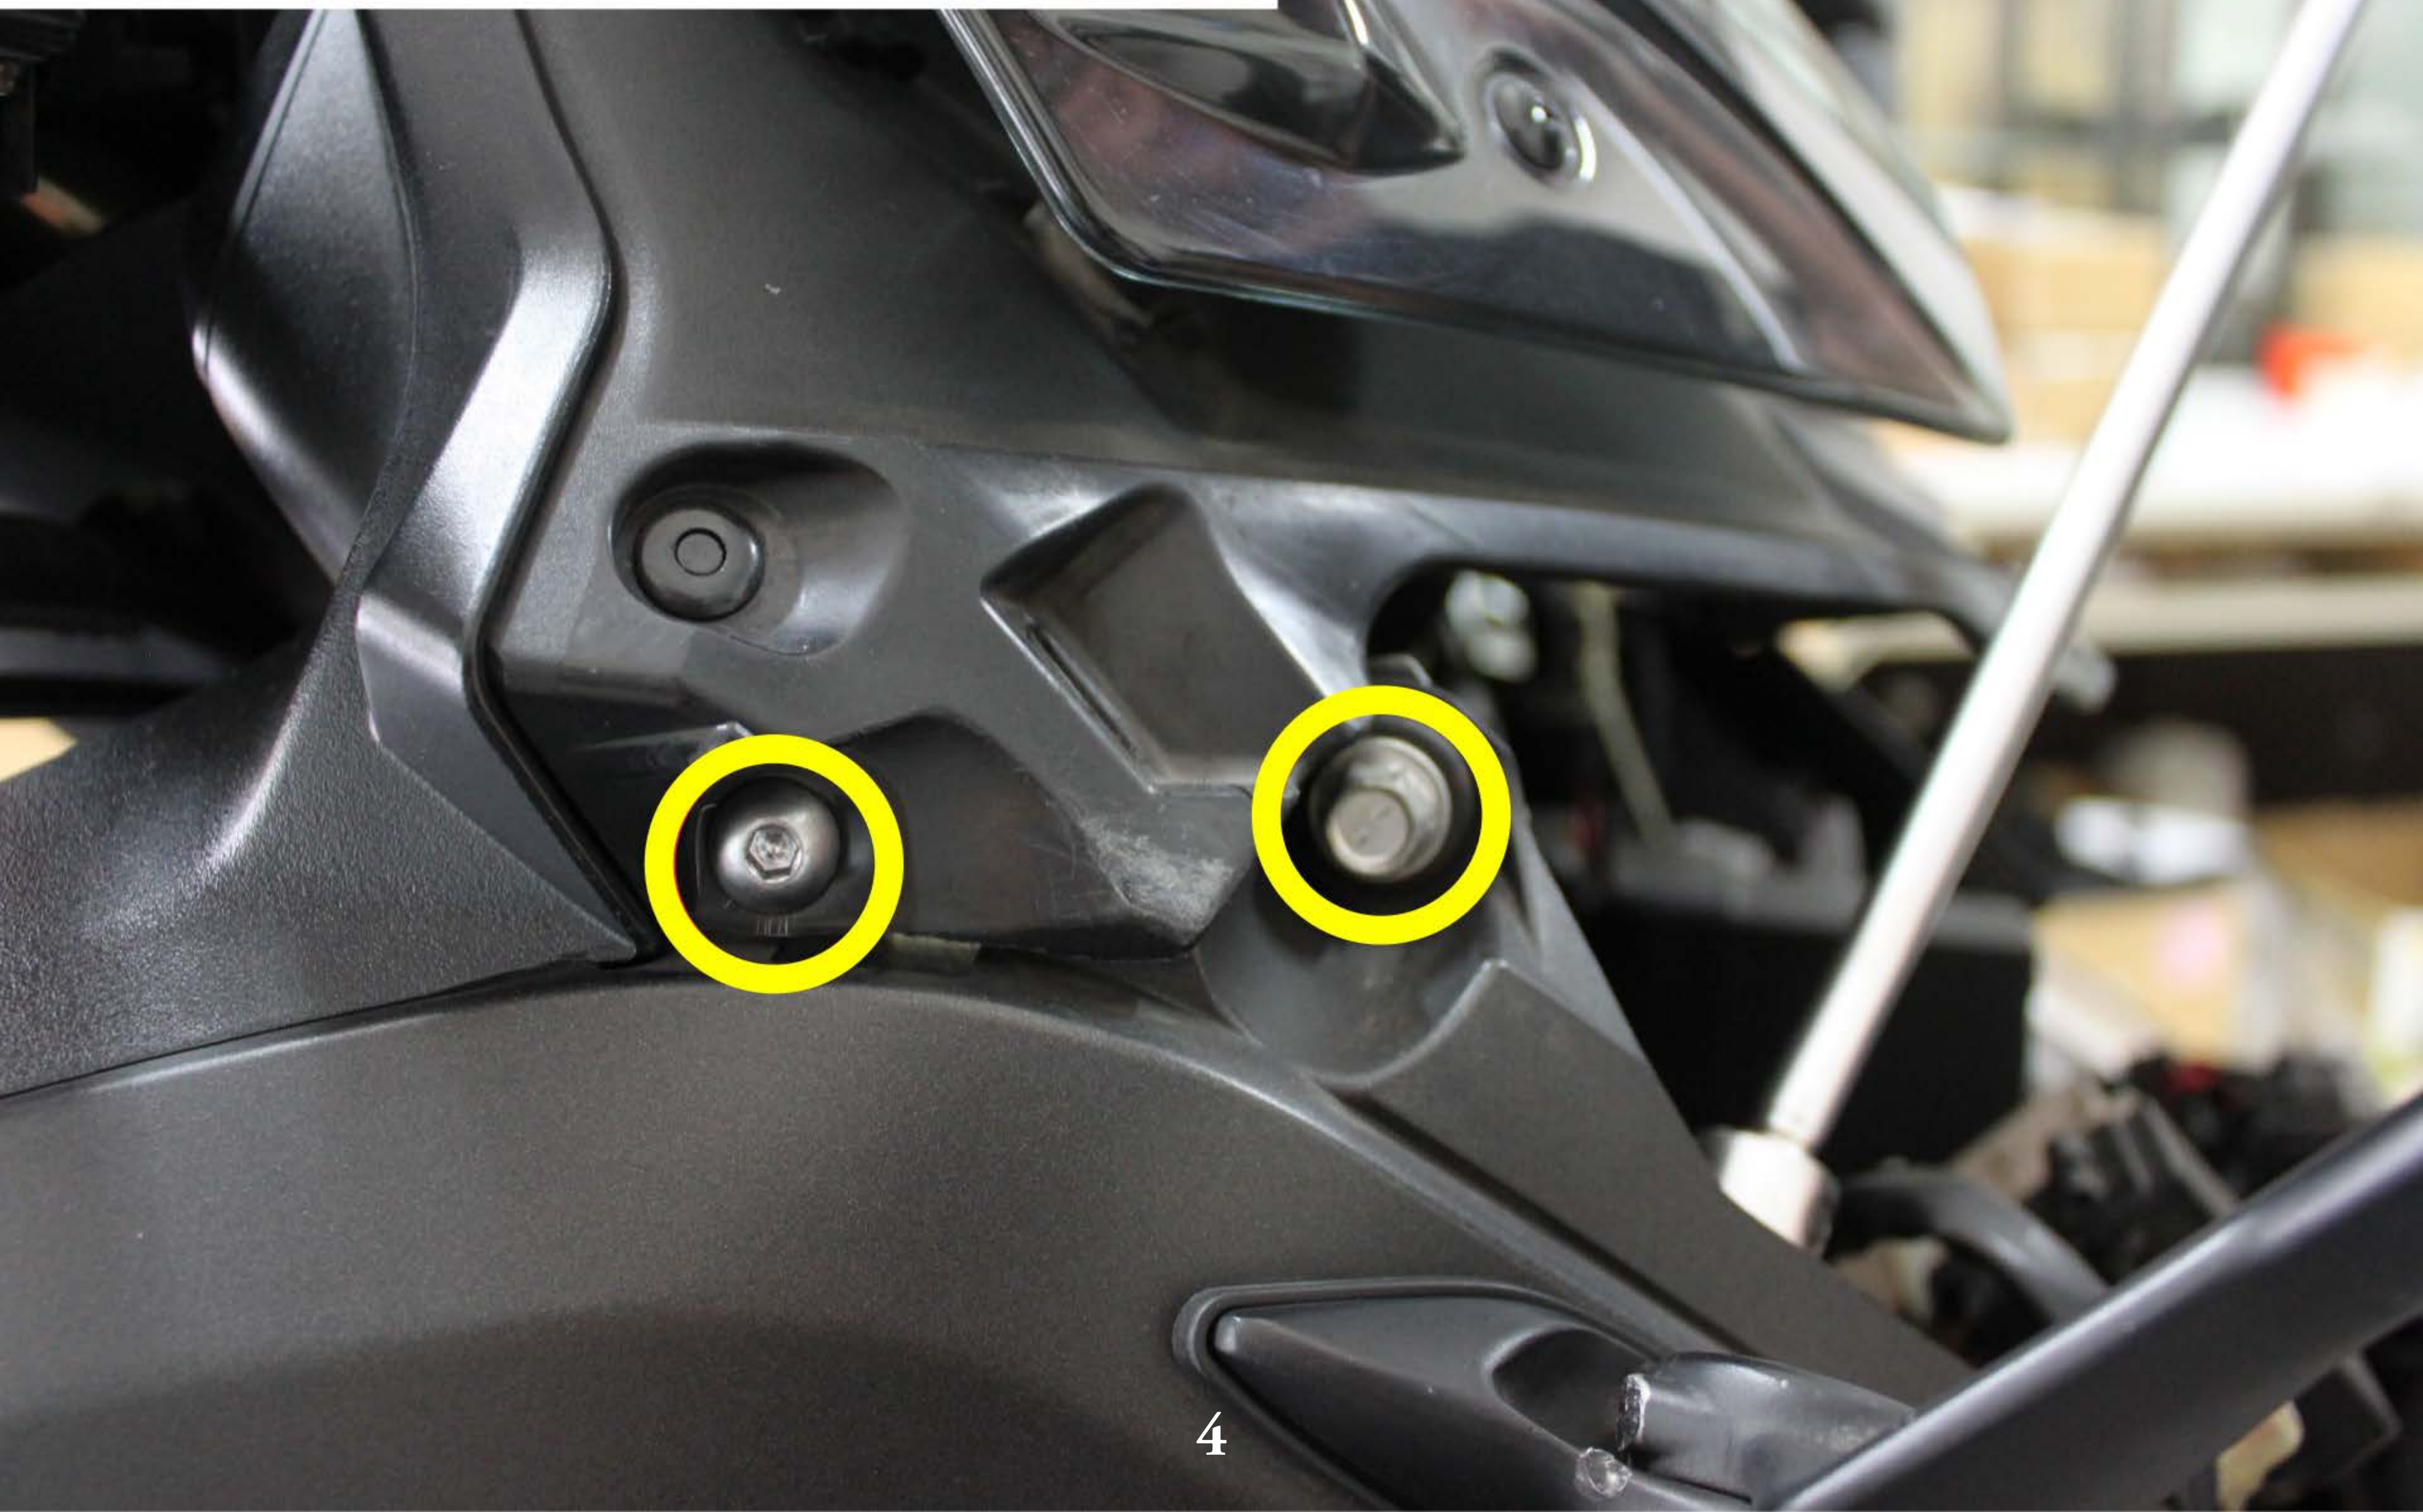

左置物箱旁螺絲卸除

拆除護蓋



卸下內側三顆螺絲

拆開置物箱蓋子



左置物箱內螺絲卸除

拆除左置物箱



卸下左側螺絲



打開右側手套箱

卸下右側螺絲



拆開左右腳踏板


卸下左右共四顆螺絲



卸下左右六顆插銷



卸下左右方向燈後方螺絲

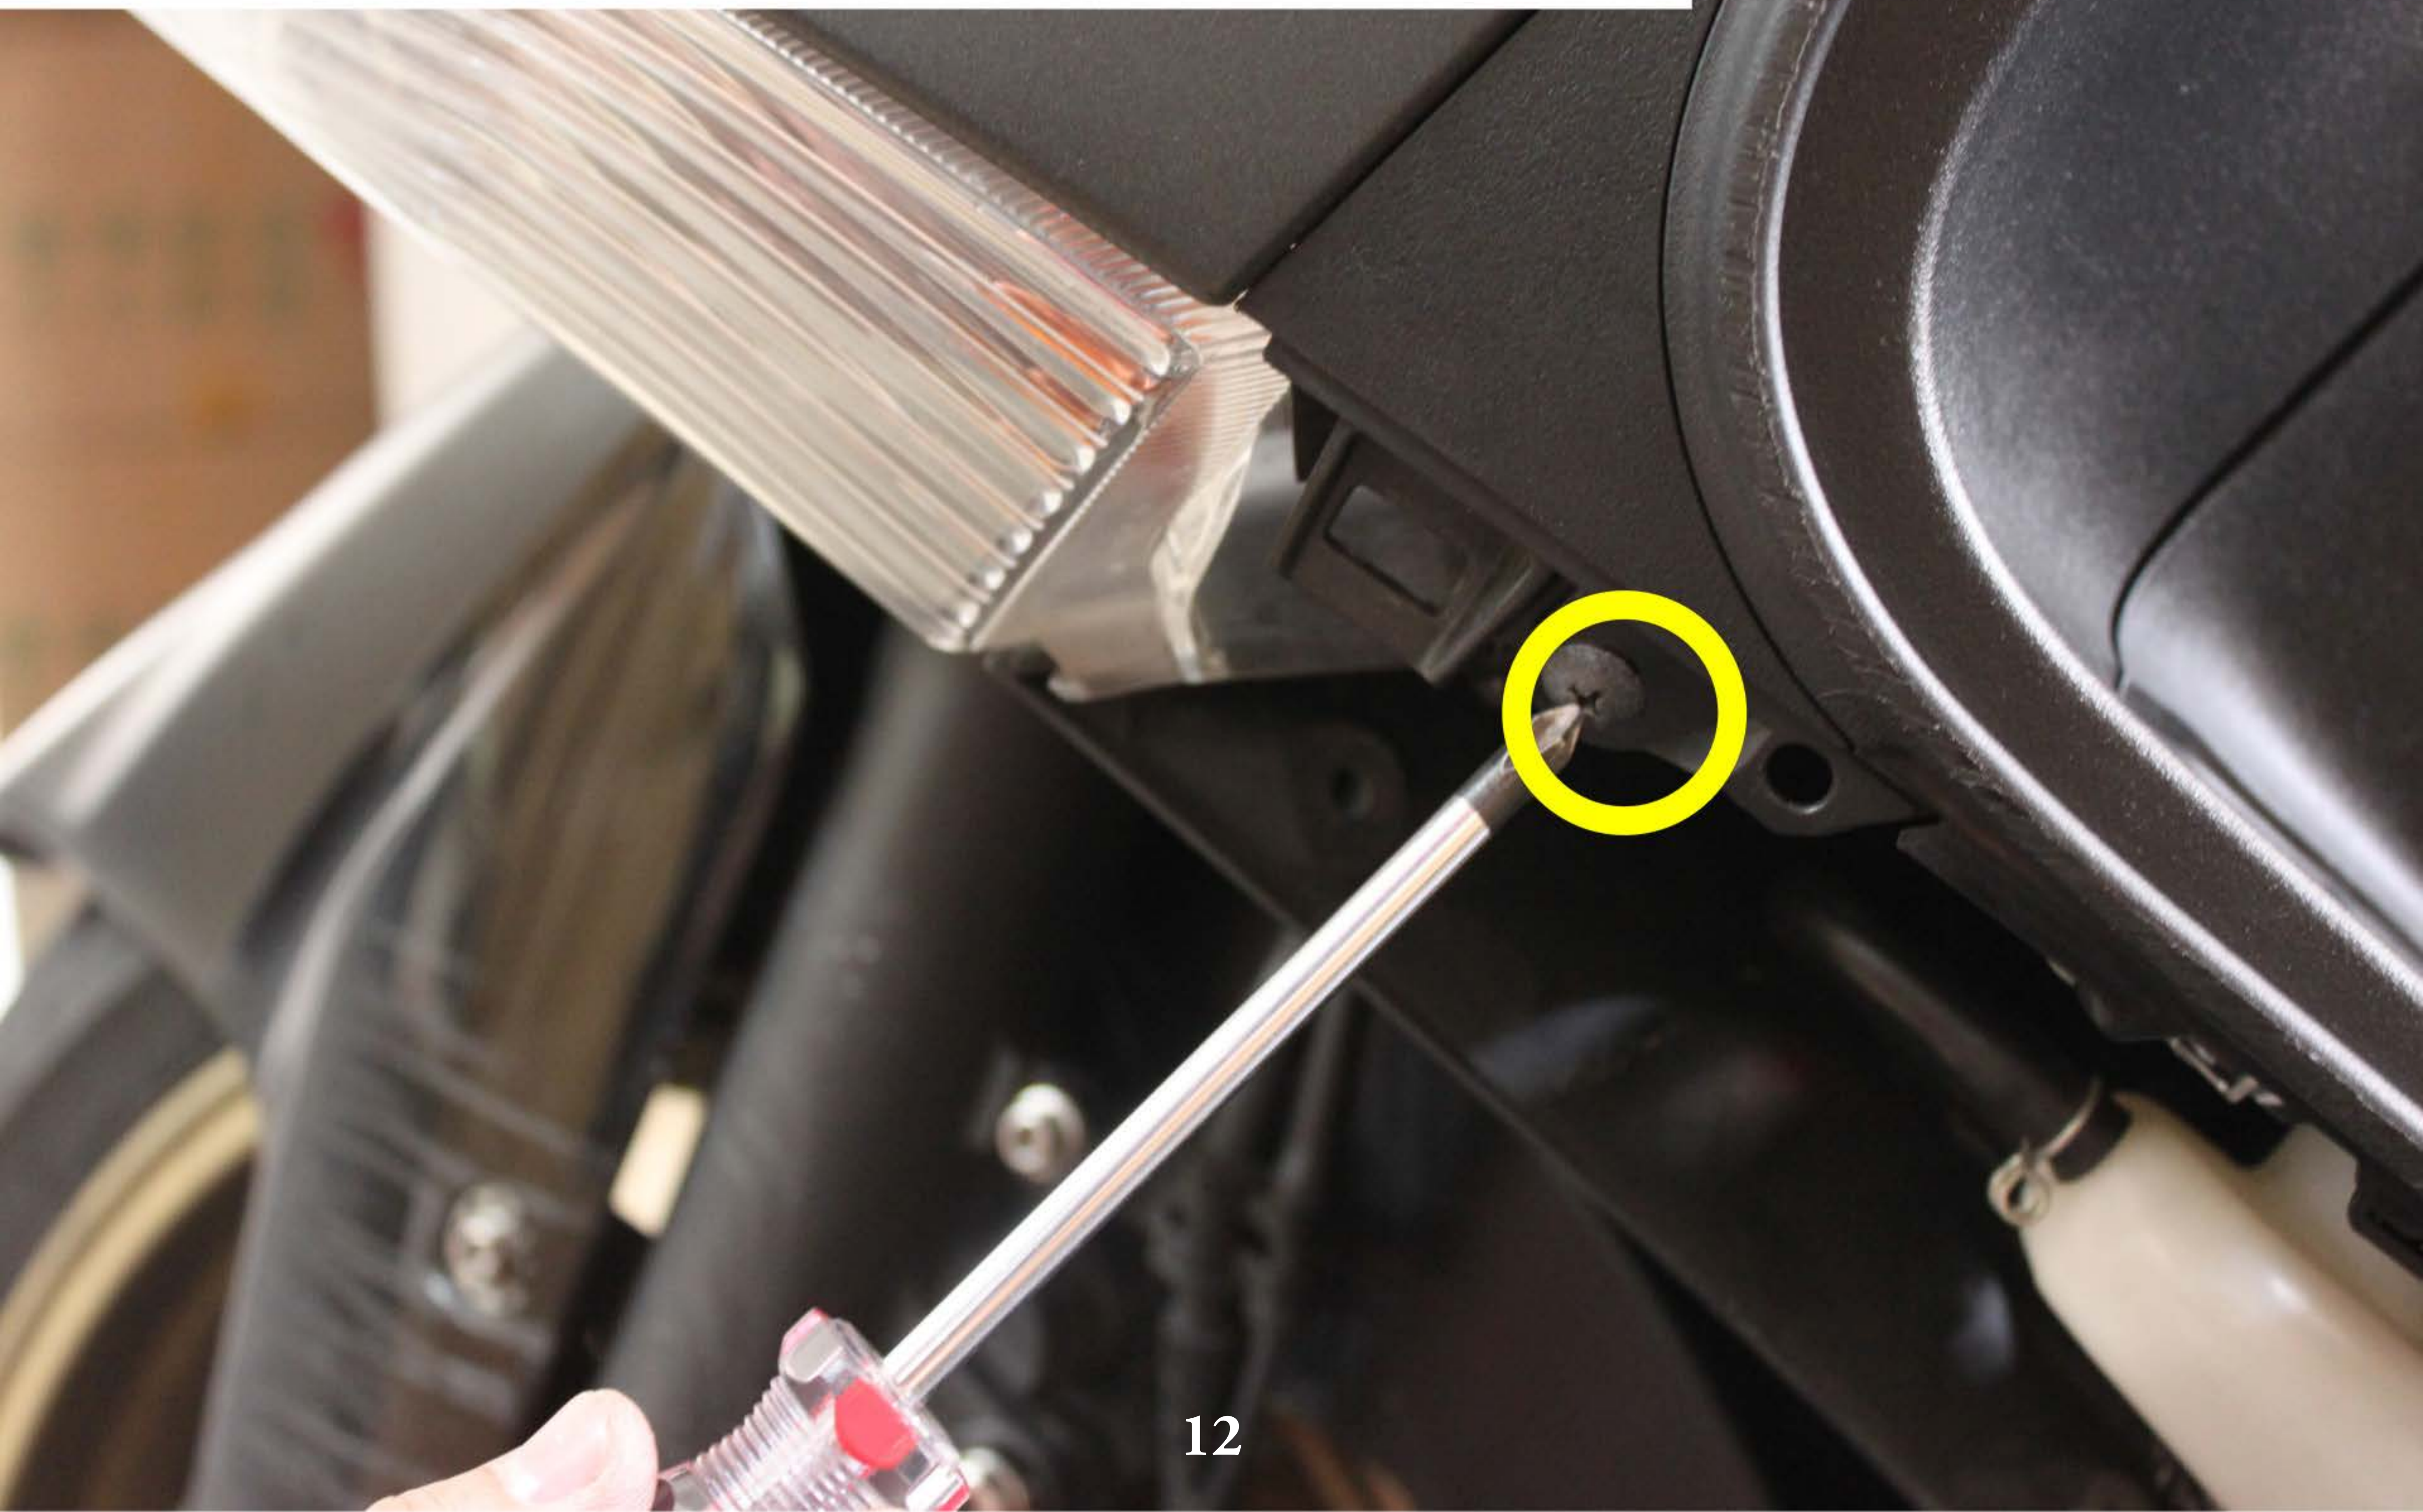


拔除 6PIN 接頭

拆除車殼以及燈具



卸下左右方向燈上方六顆螺絲

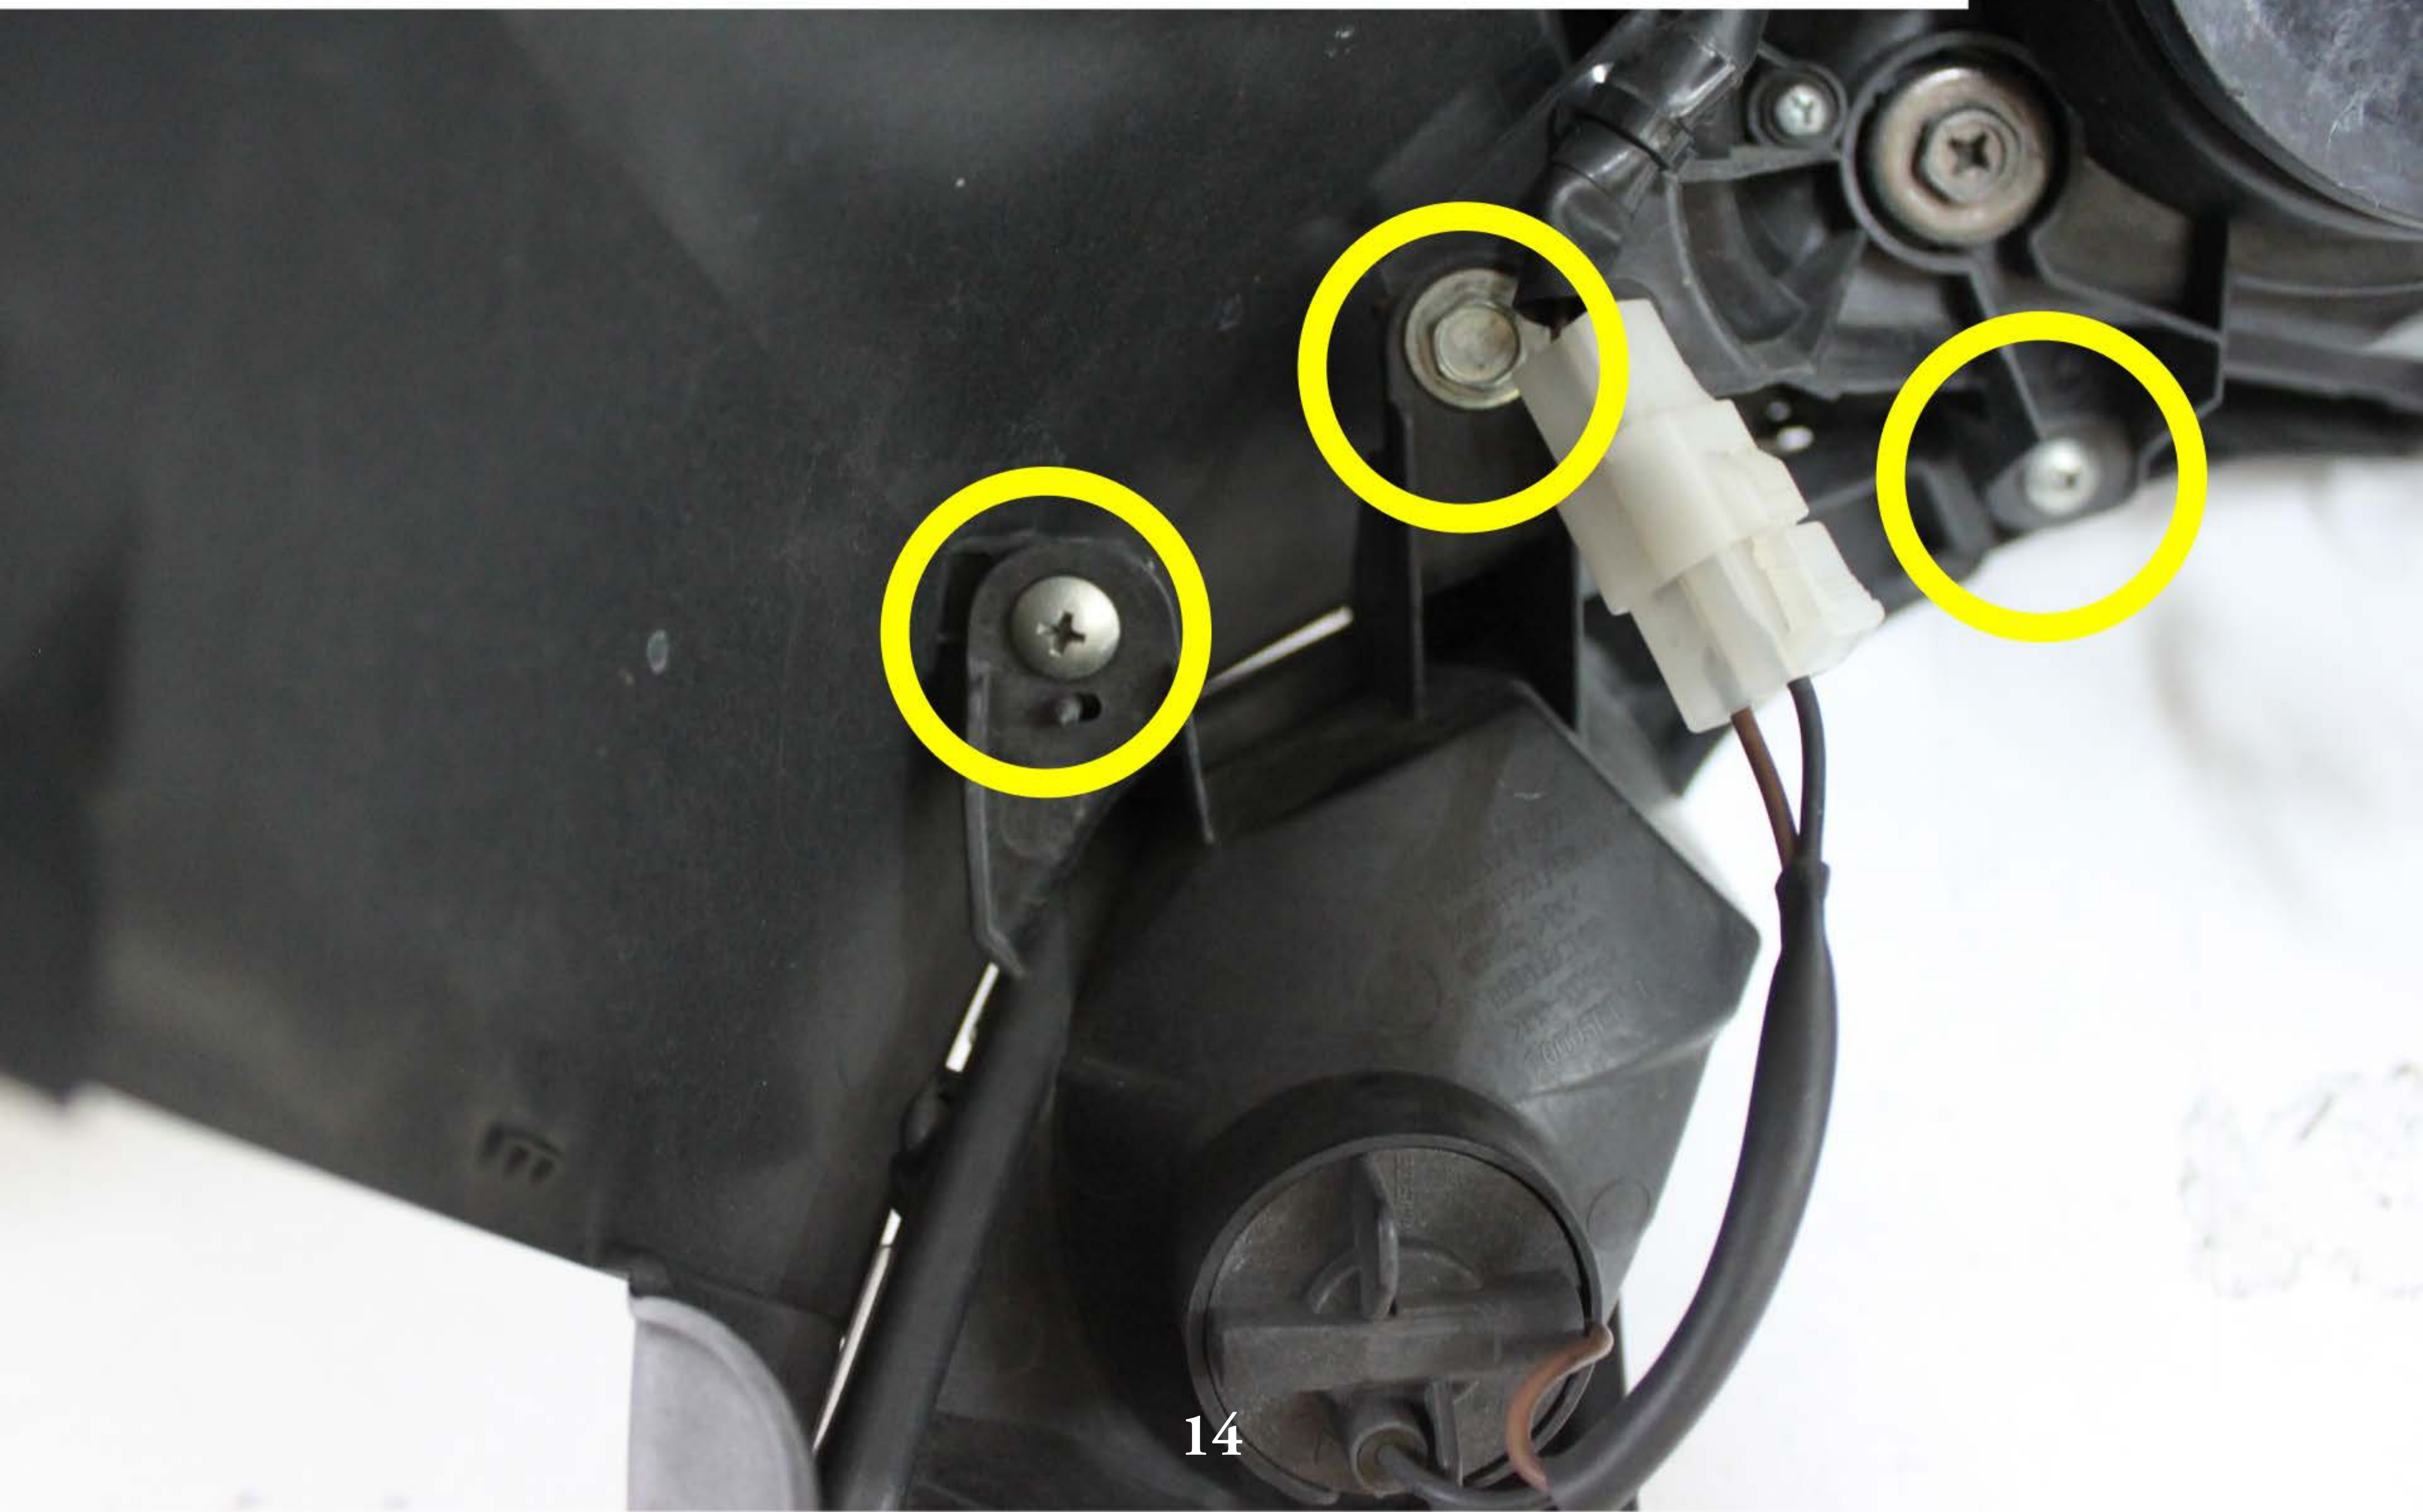

卸下左右外側螺絲

換上方向燈並鎖上



拔開 2PIN 接頭串接





❖ 若加裝我們的魚眼大燈，請將大燈、前方向燈以及原廠線組做串接

接上接頭



卸下左右扶手螺絲

拆下扶手




卸下左右螺絲


拆下後方飾蓋



卸下飾蓋內三顆螺絲

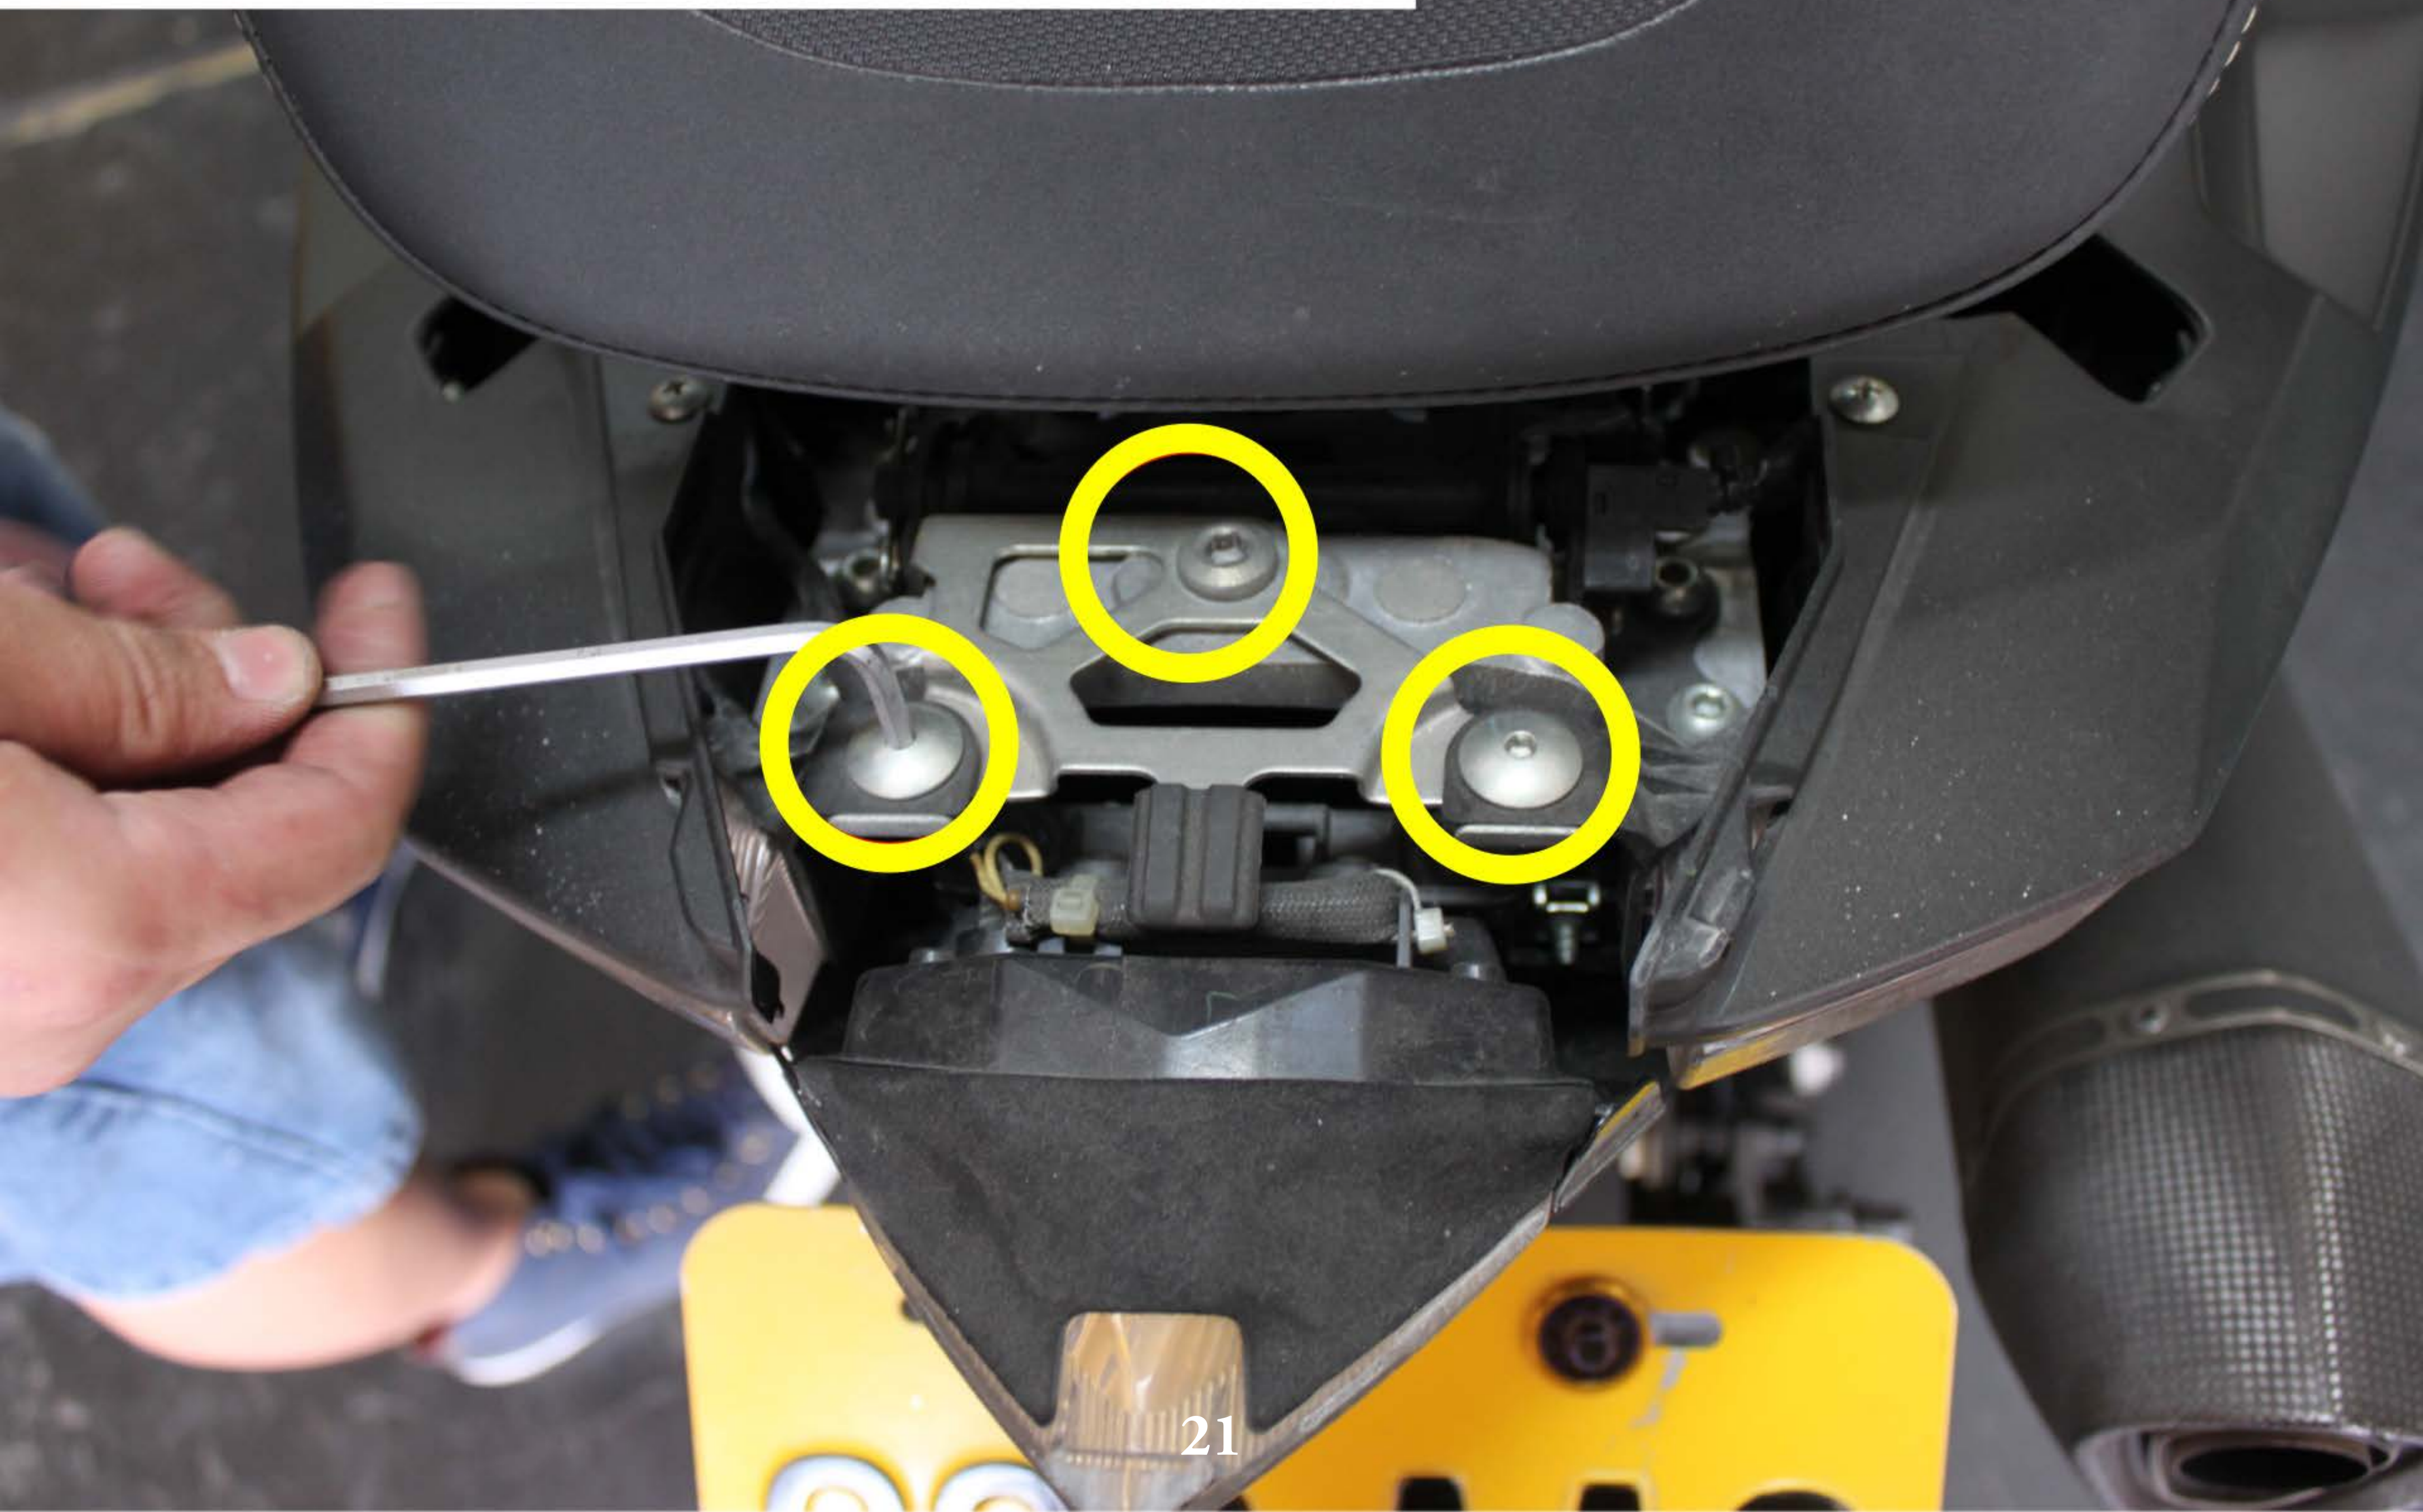


卸下下方左右六顆螺絲

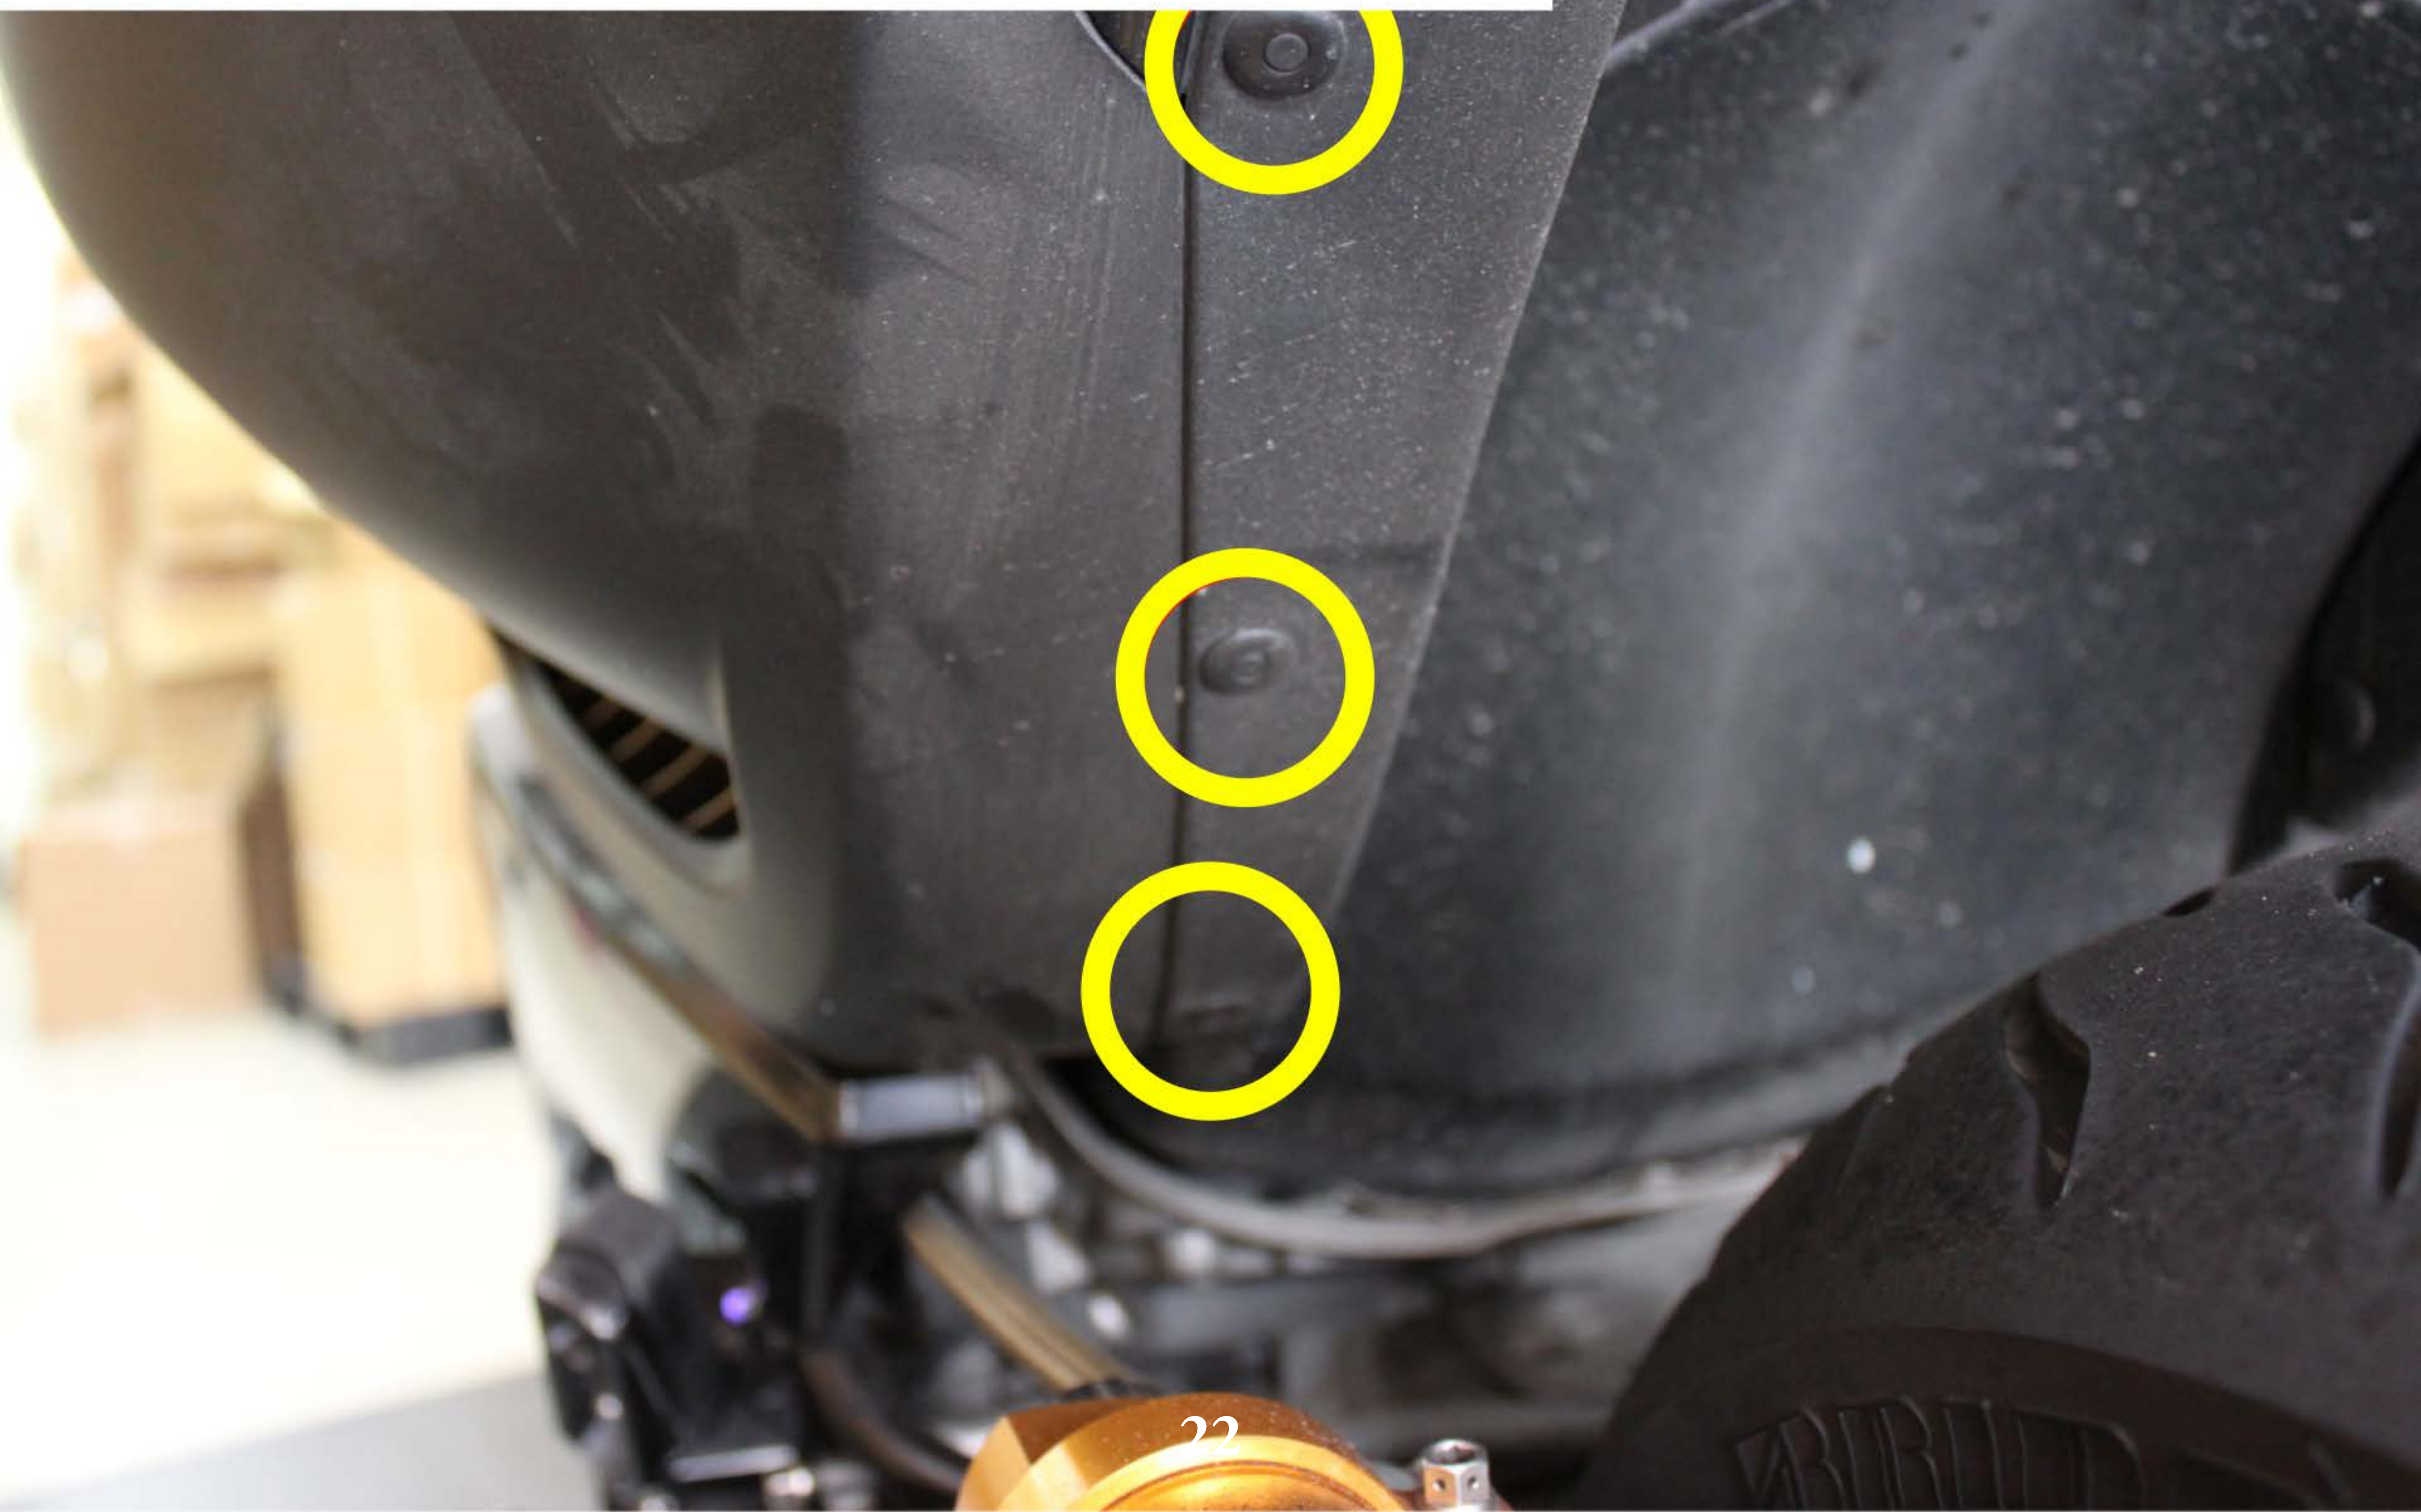

卸下車廂外左右螺絲



卸下踏板內側左右四顆螺絲

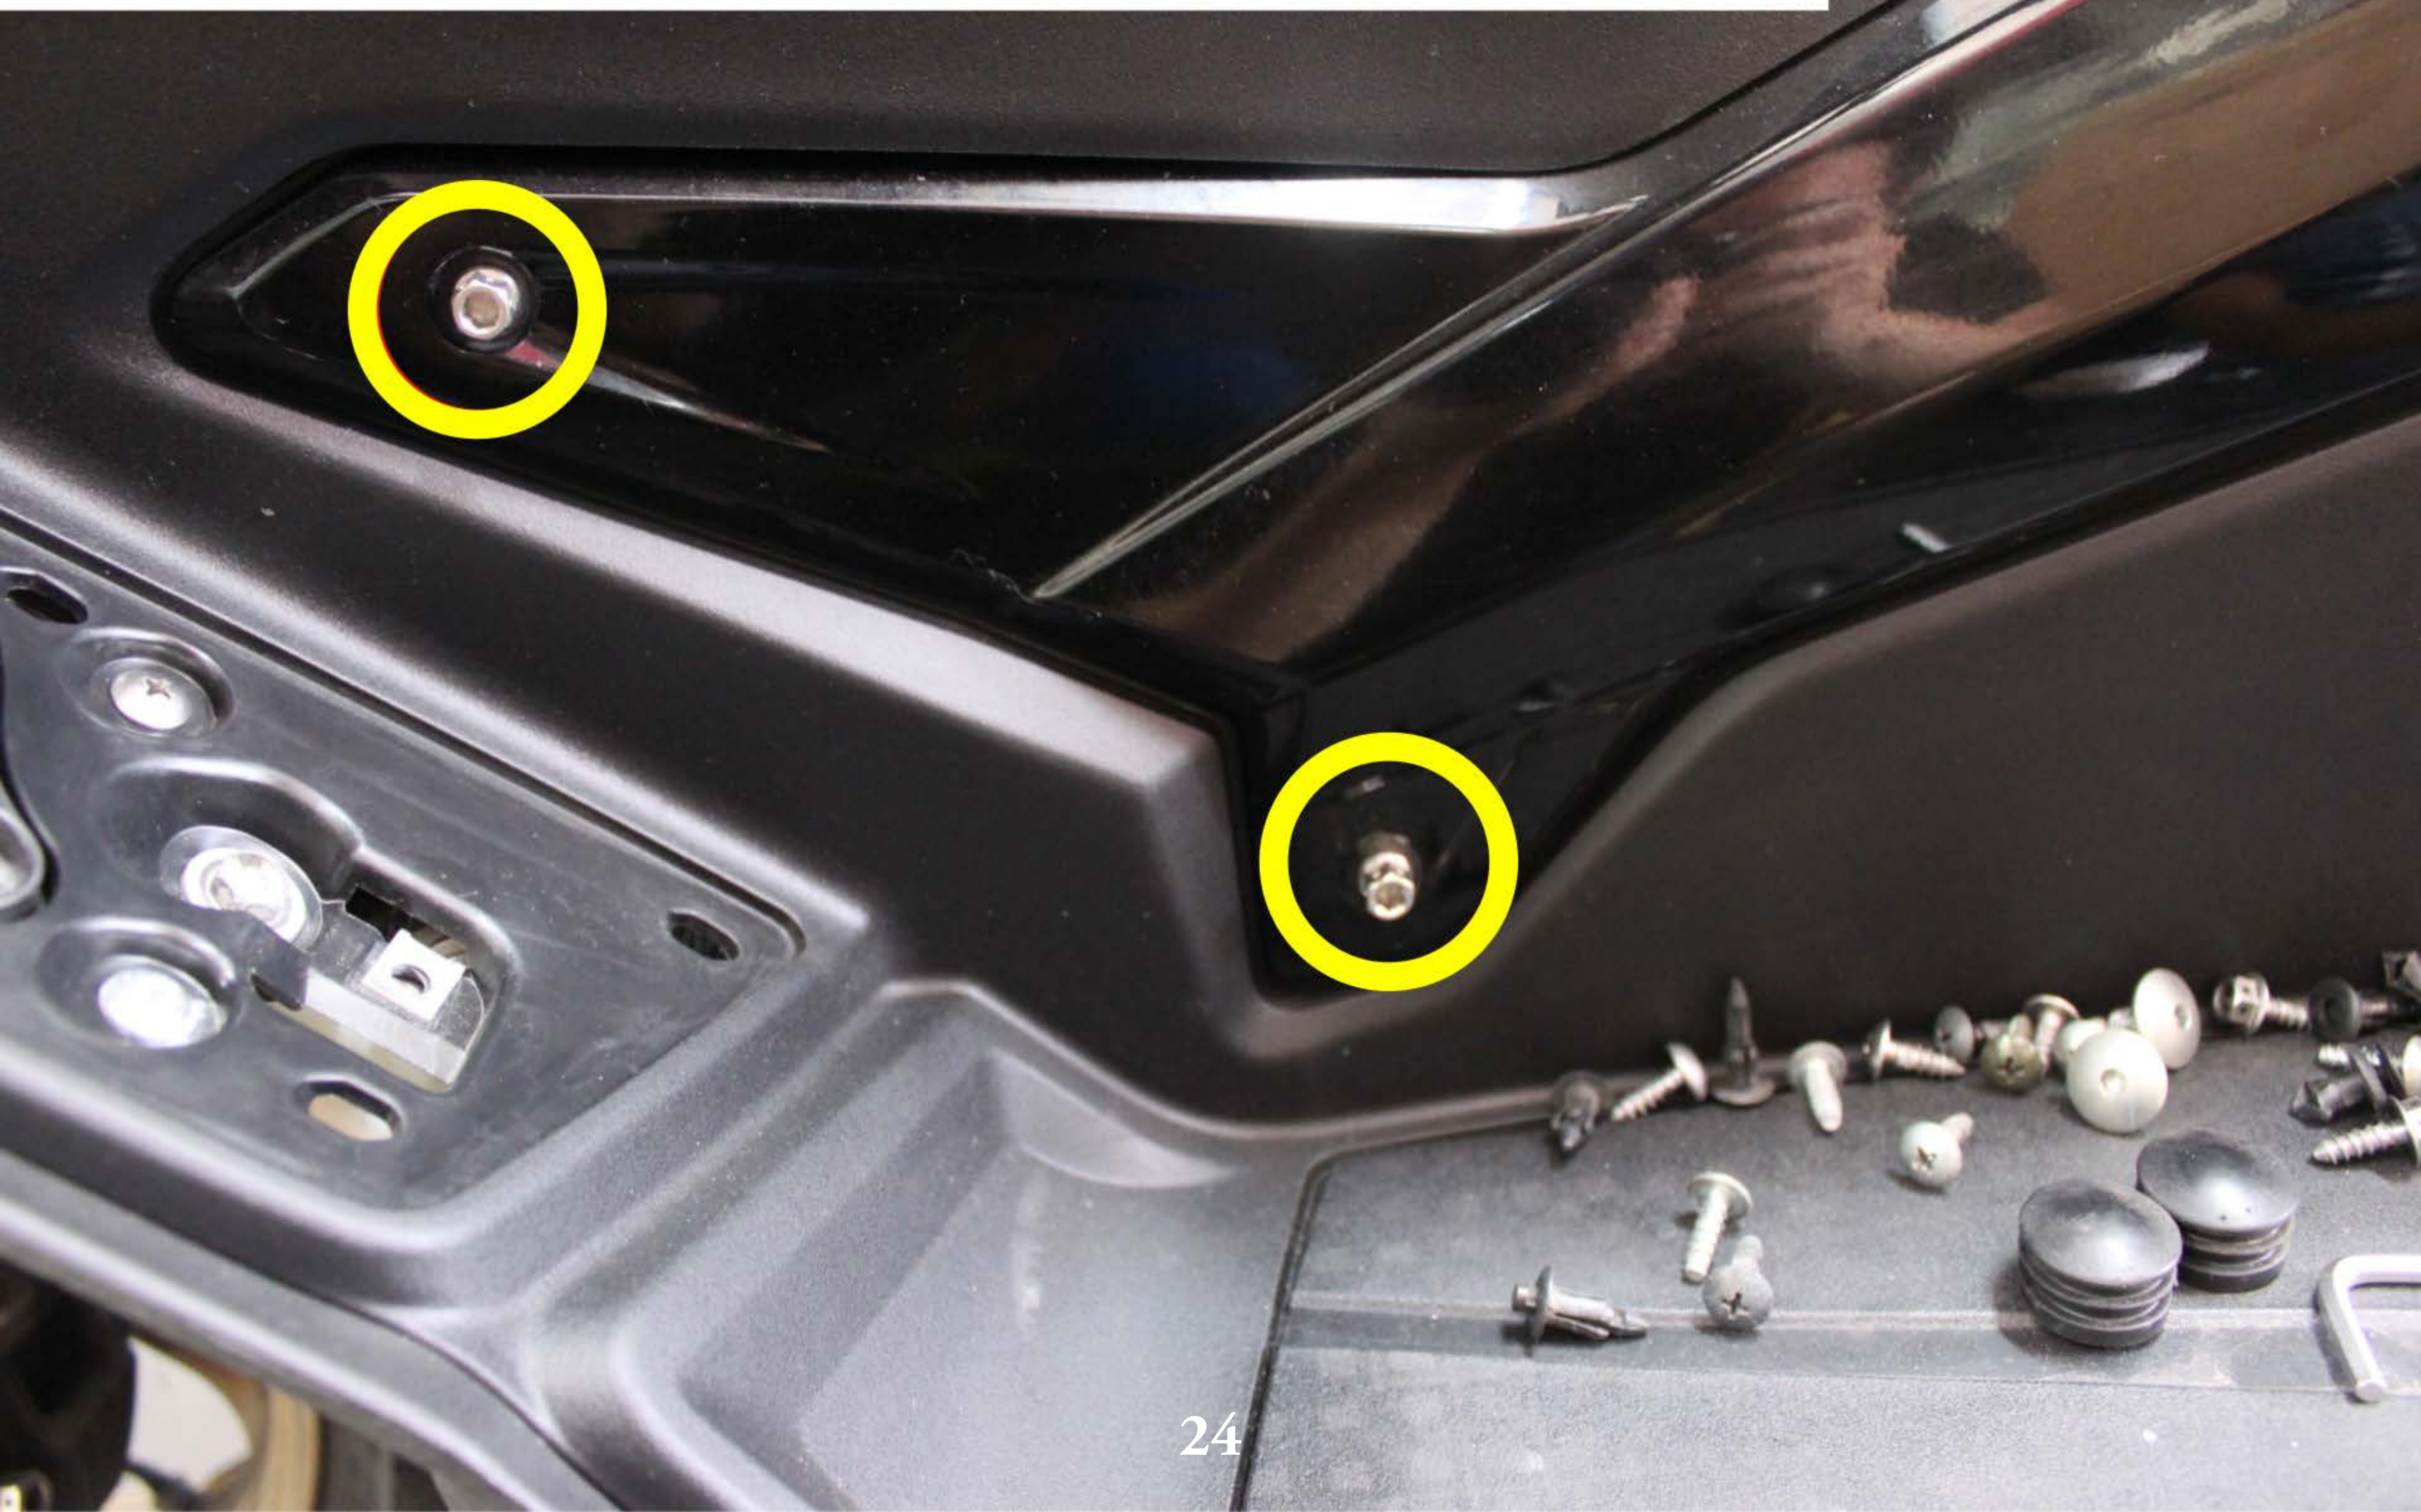

卸下後座腳踏後方左右螺絲

車殼連同尾燈一同拆除



拆除左右共八顆螺絲

卸除方向燈以及尾燈




拆除左右插銷


尾燈連鐵片一同拆除




拆除螺絲以及鐵片

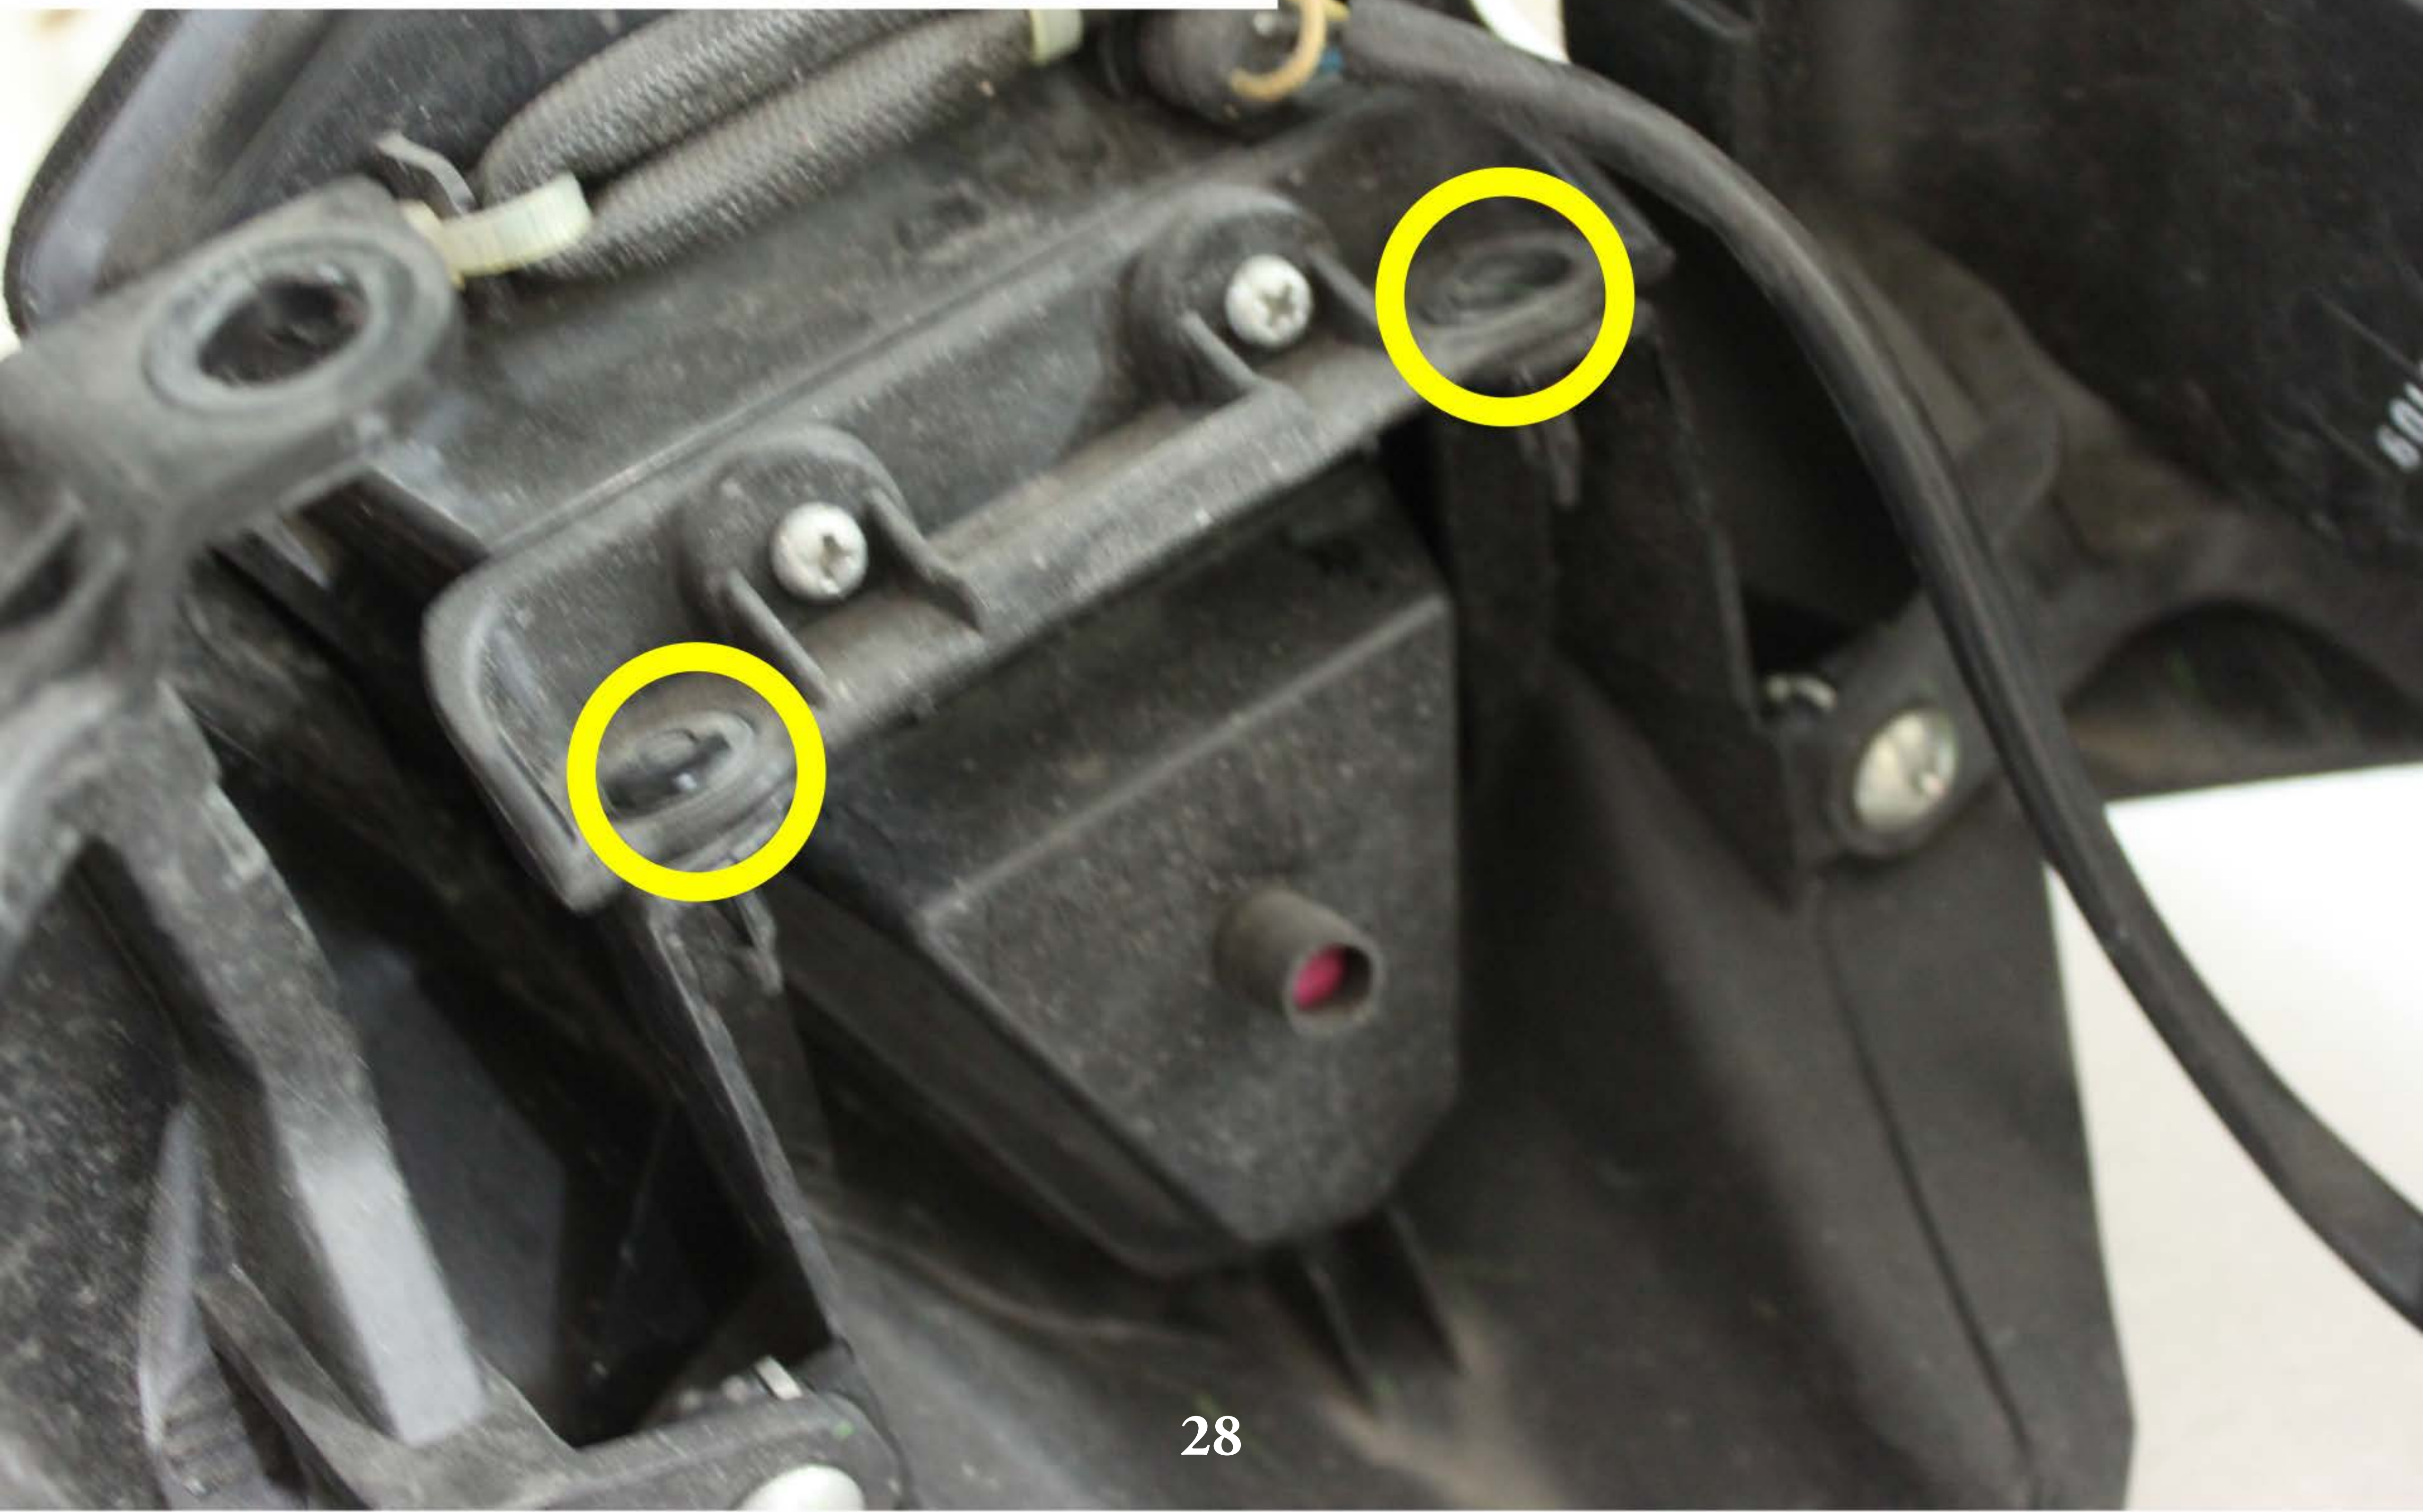

換上尾燈並將鐵片鎖上

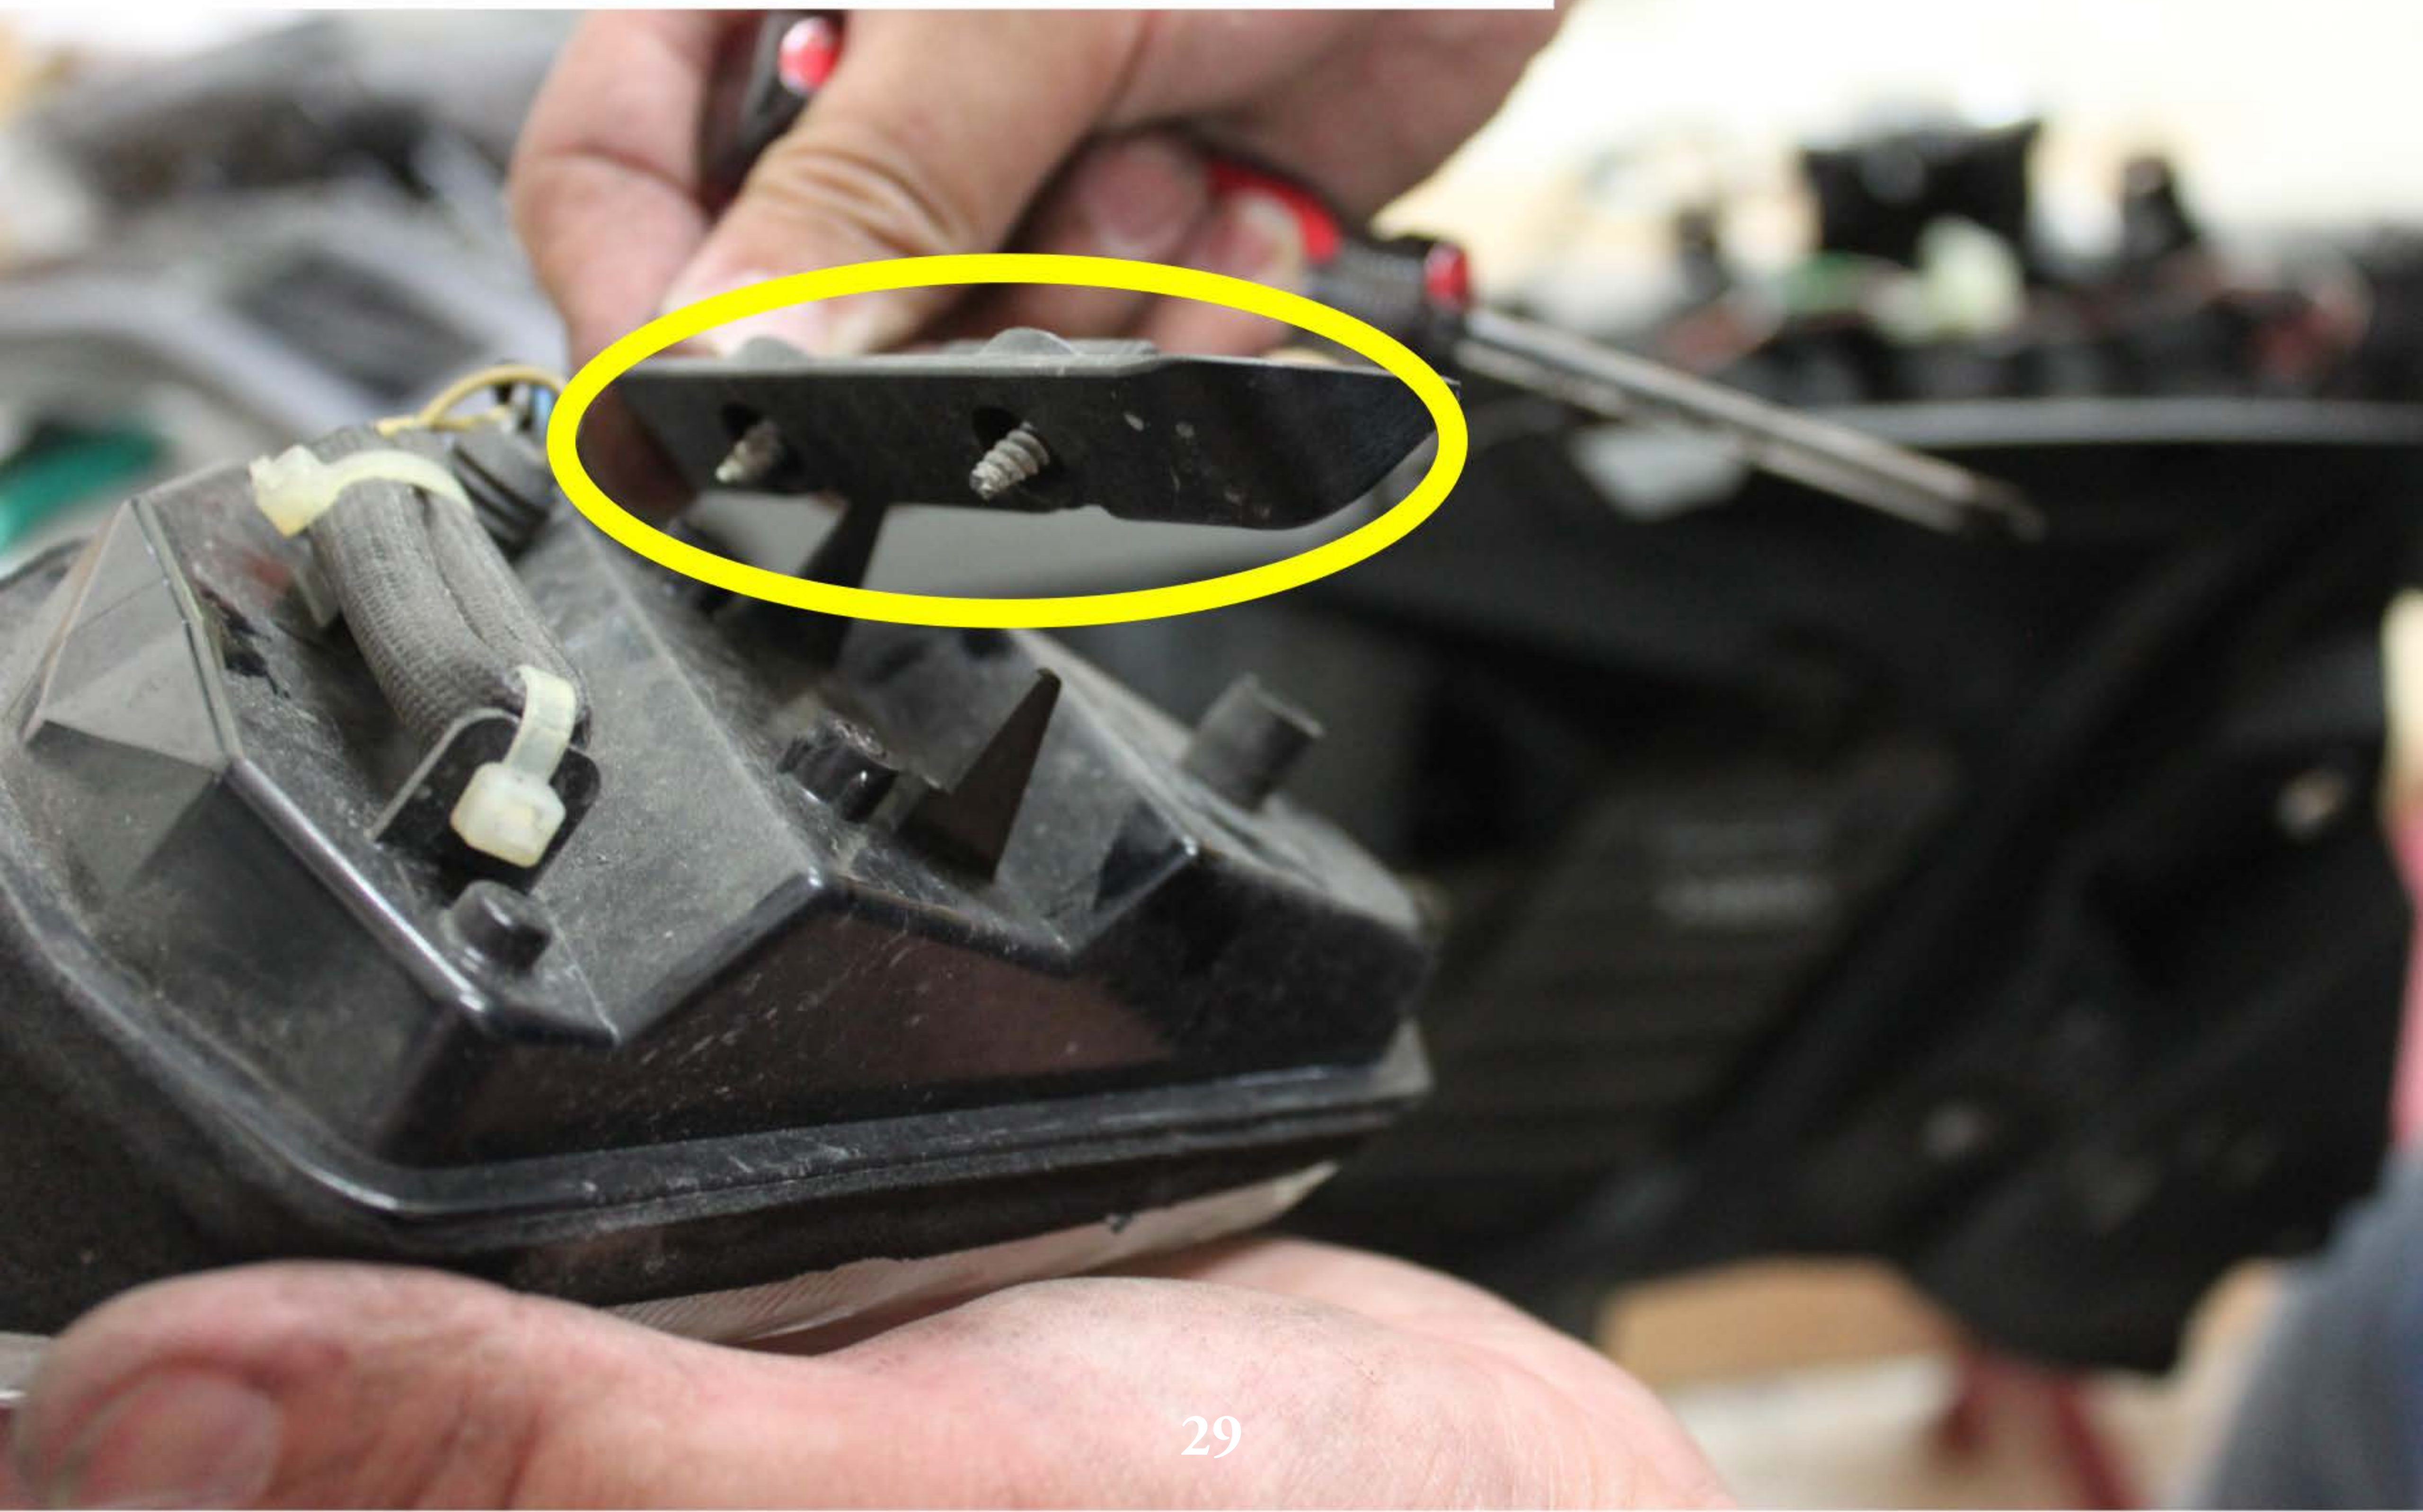


鎖上尾燈

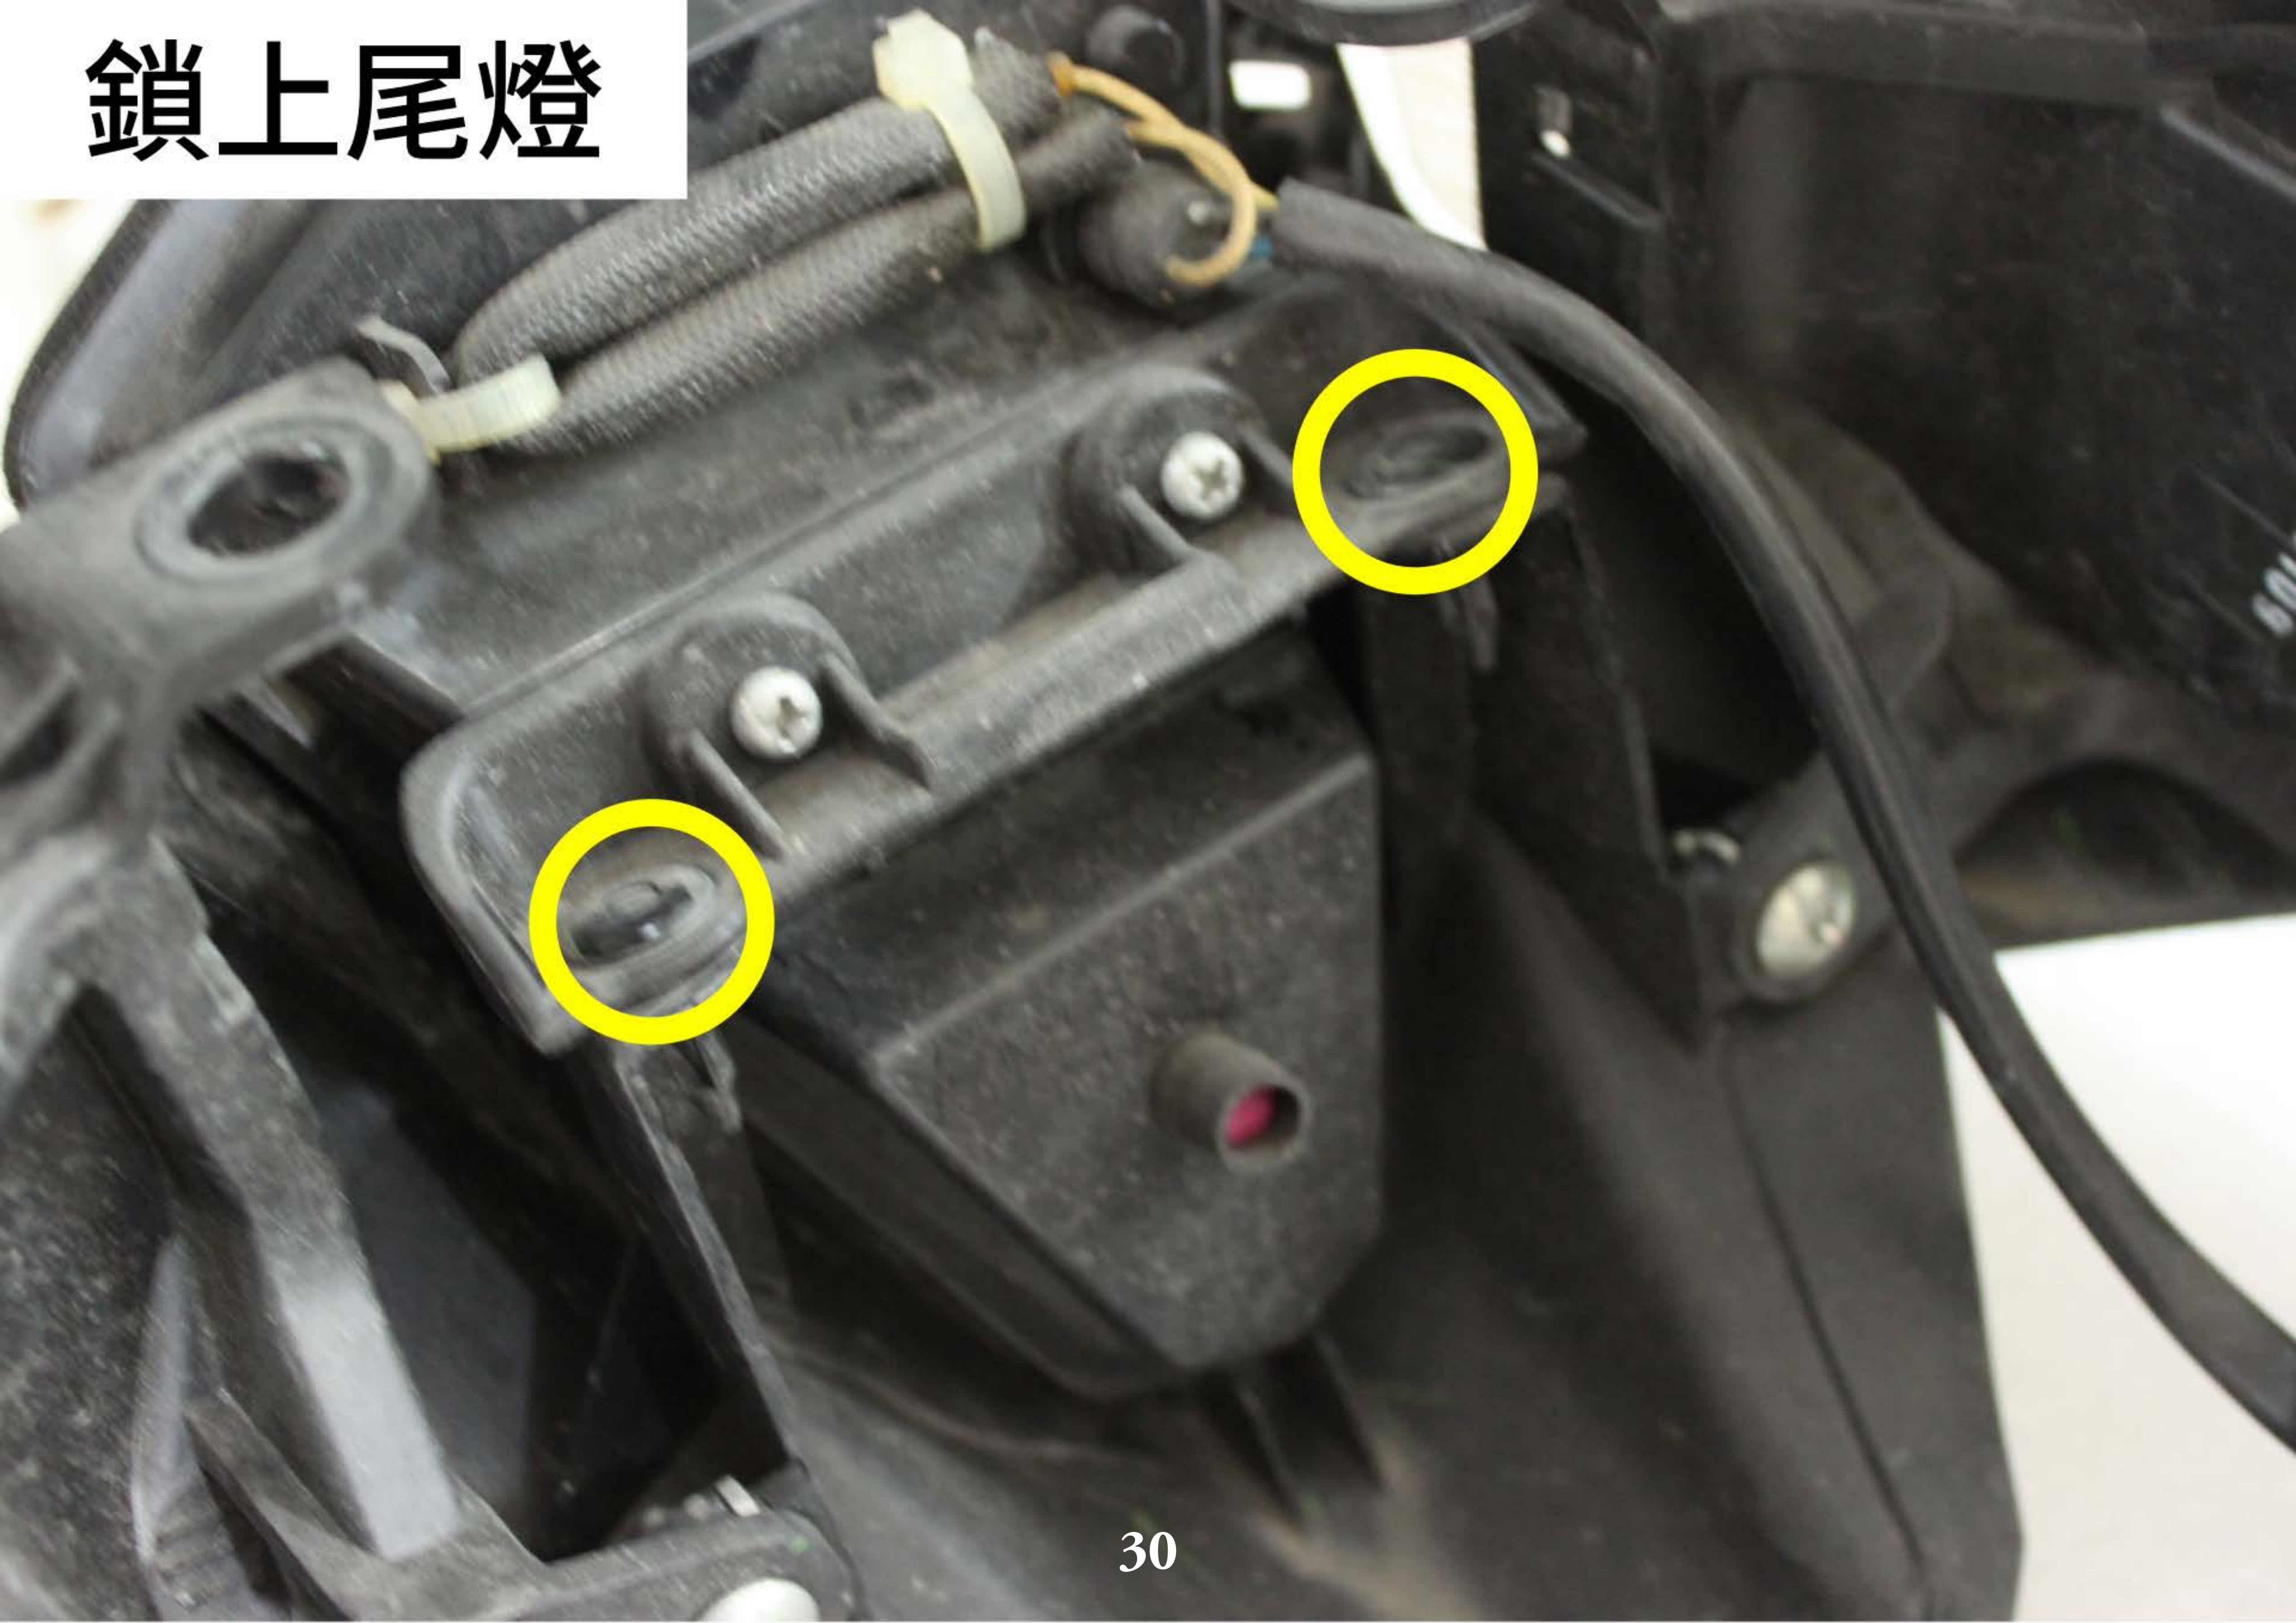

接上方向燈、行車燈以及牌照燈線組

❖ 請依照上方步驟反序將車殼裝回

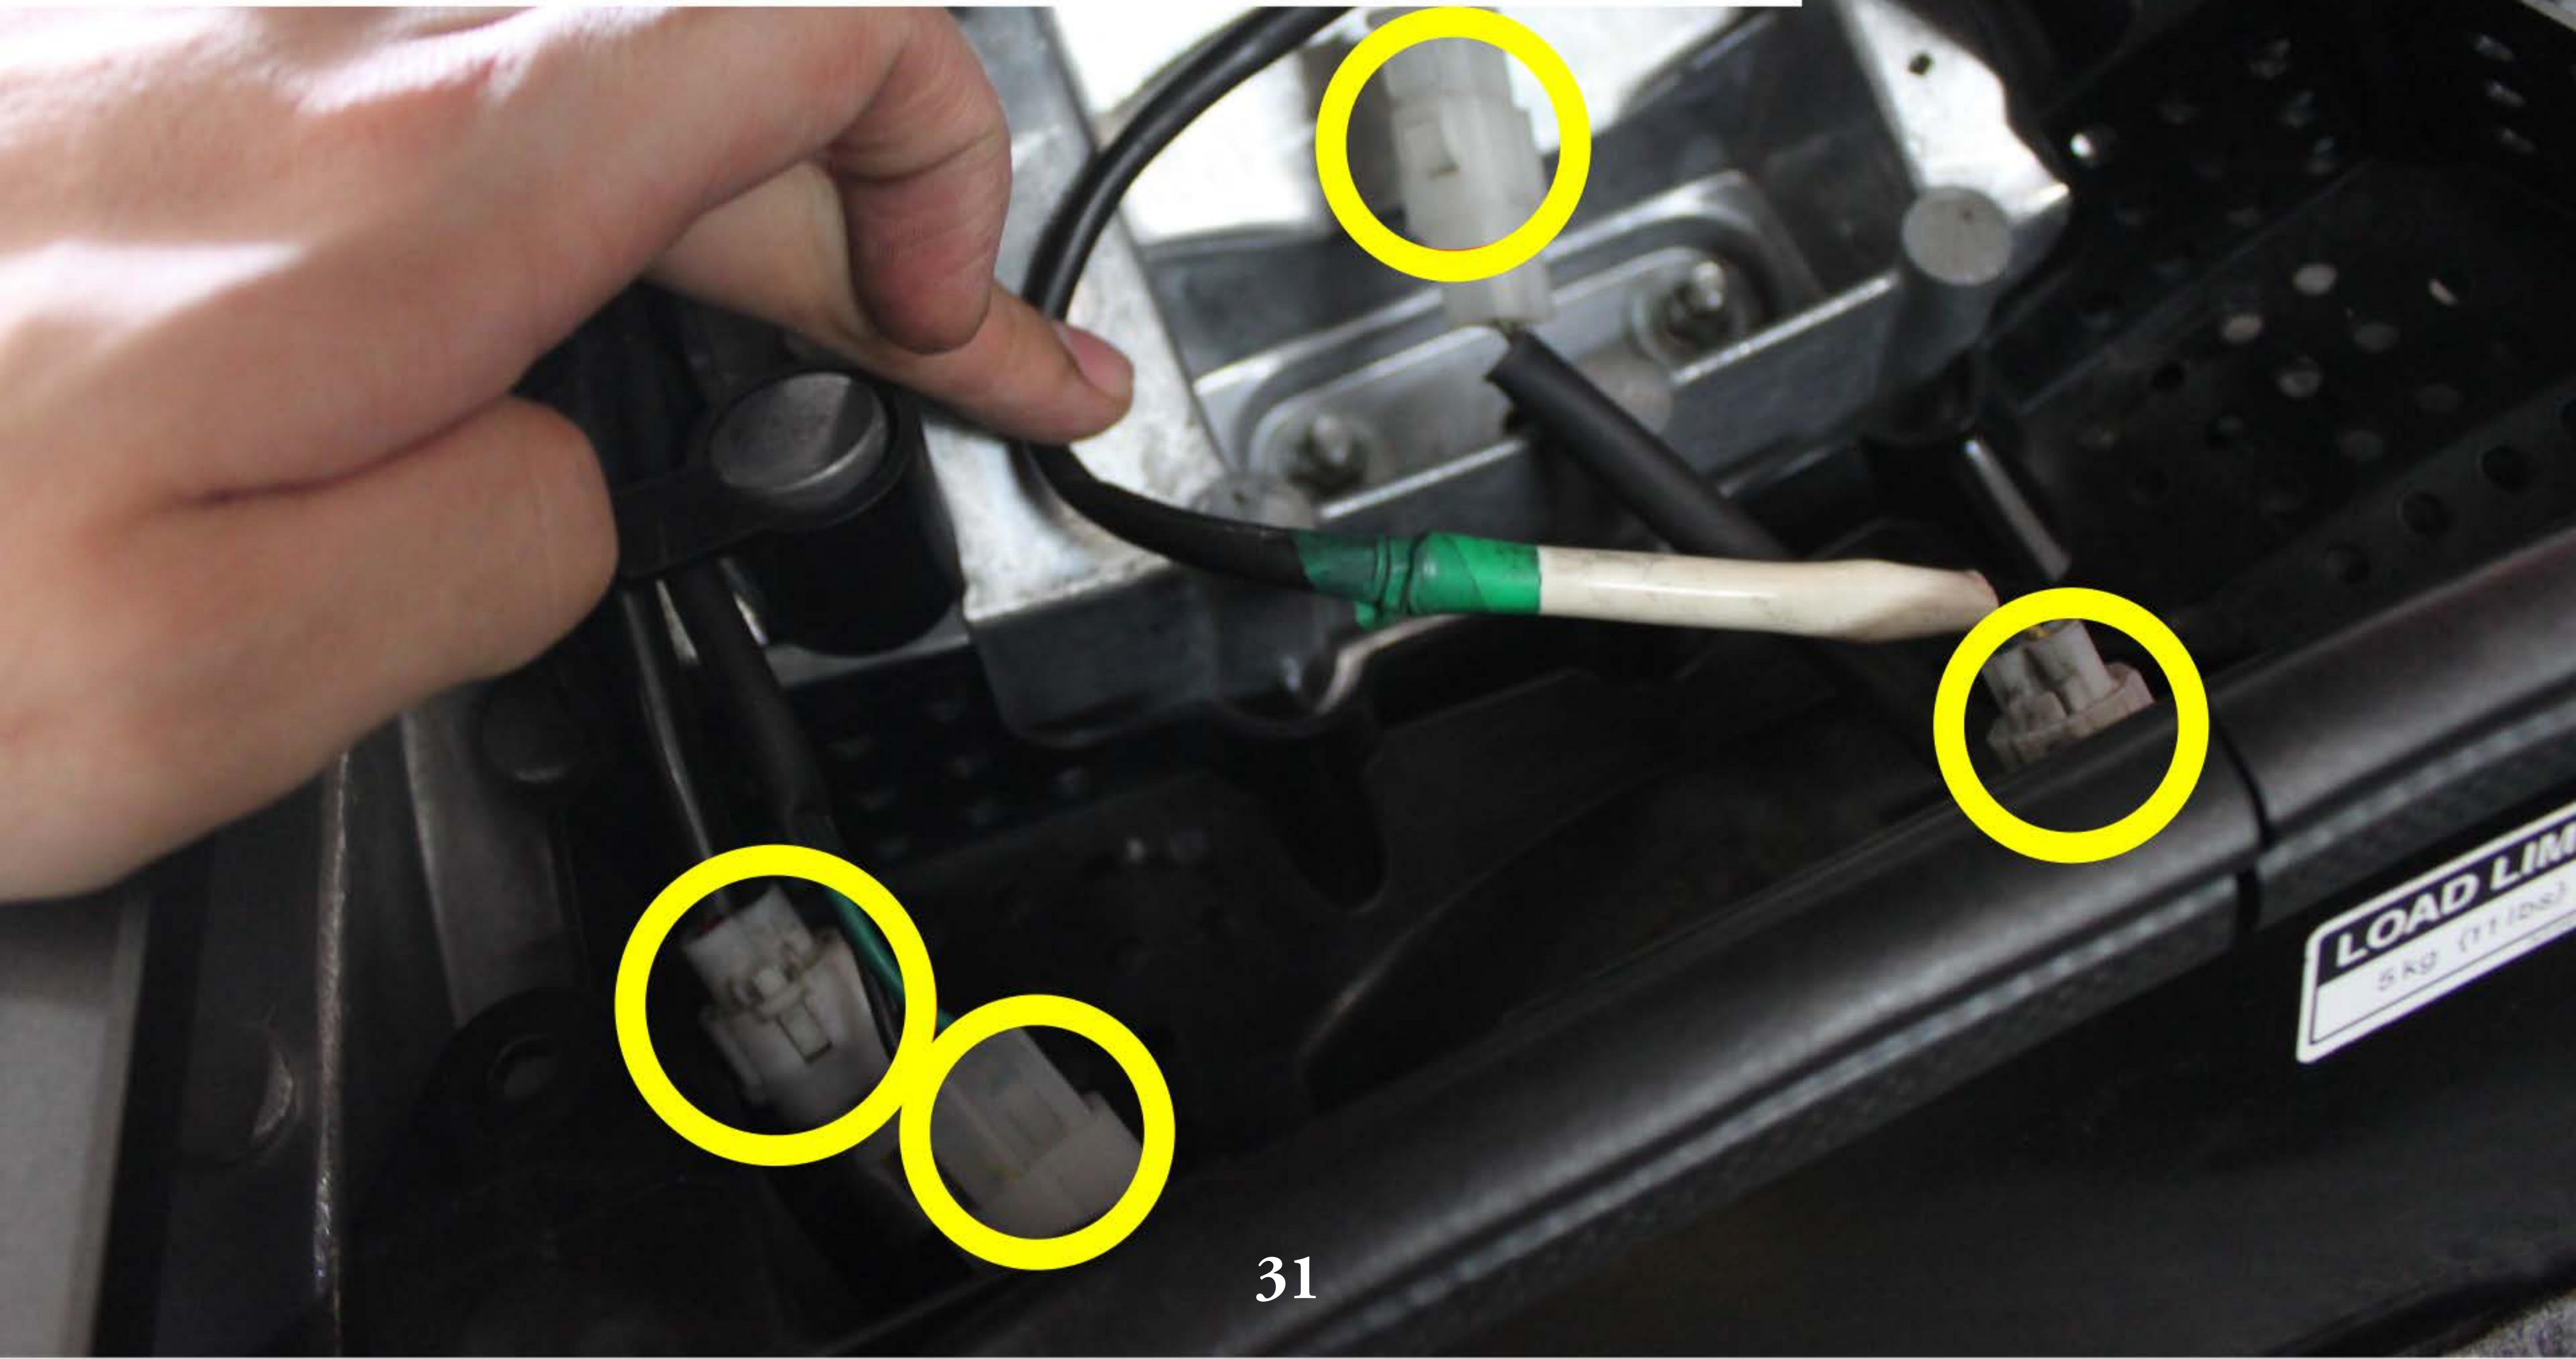



❖ 前方向燈安裝時需將下方扣上前內土除卡榫

安裝說明

繼電器

繼電器




VCC負極線






❖ TMAX 繼電器位於左側置物箱下方

拔除 3PIN 接頭及繼電器

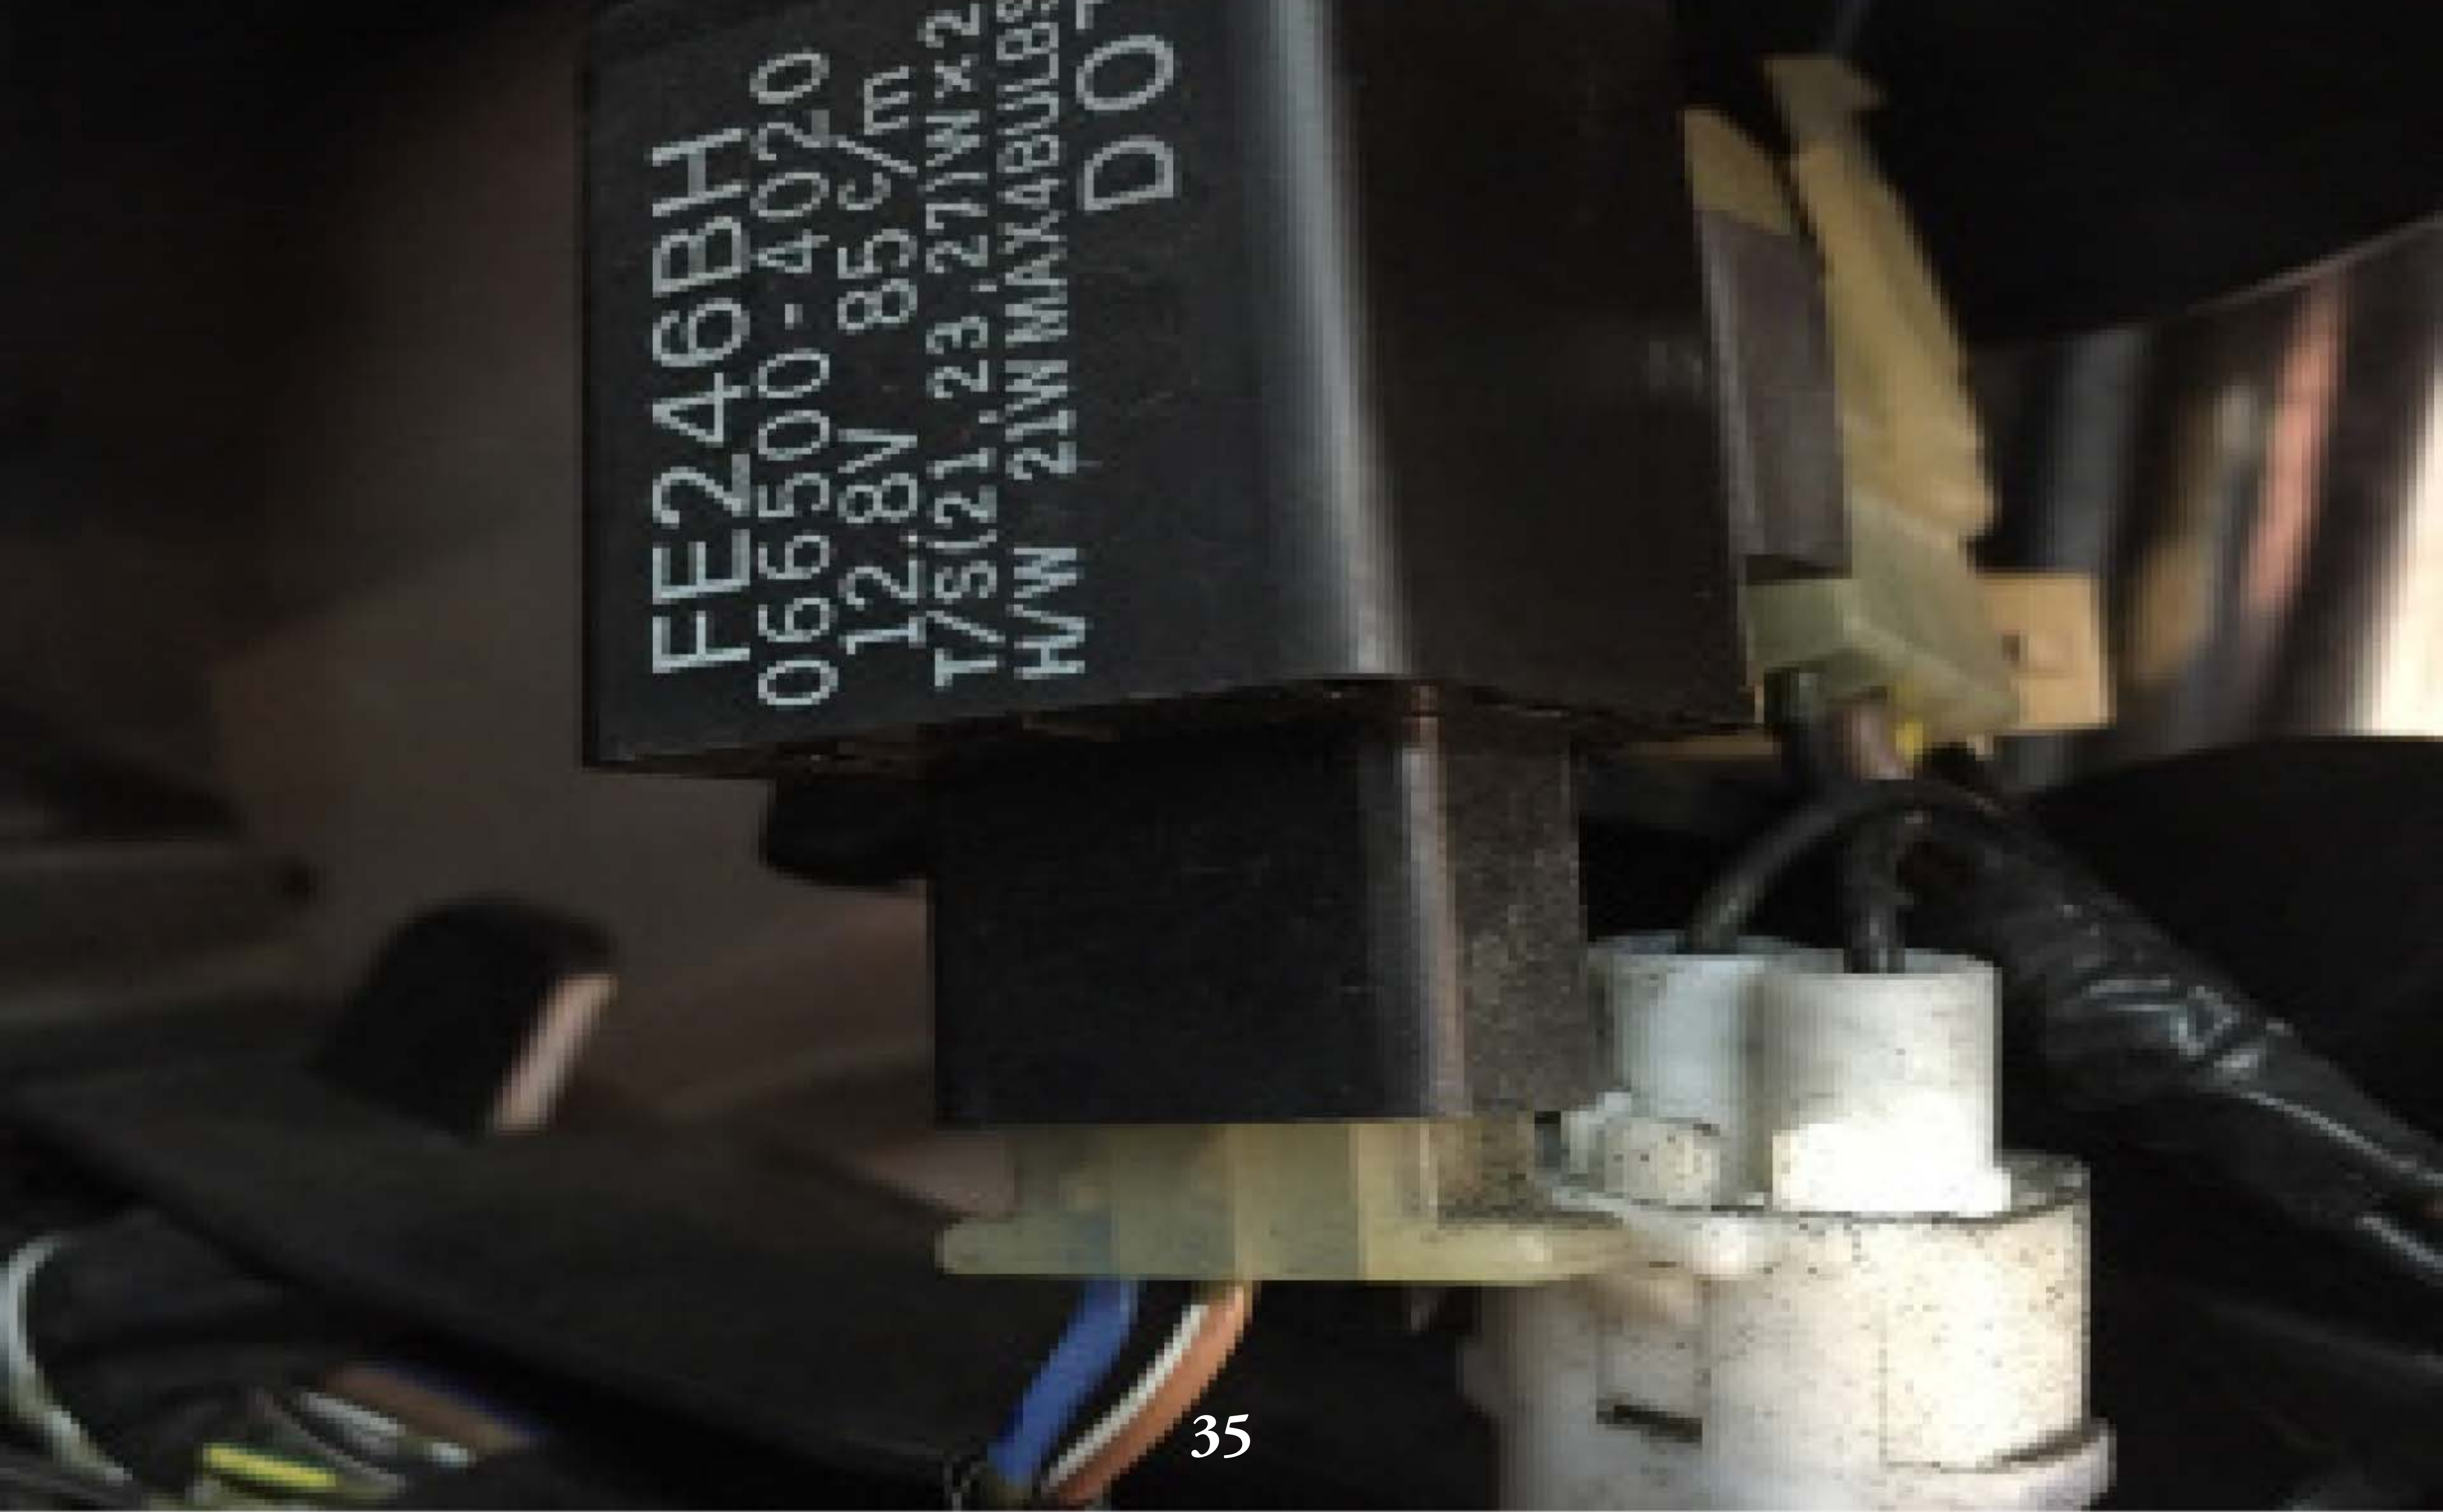

VCC 負極線接上 3PIN 接頭

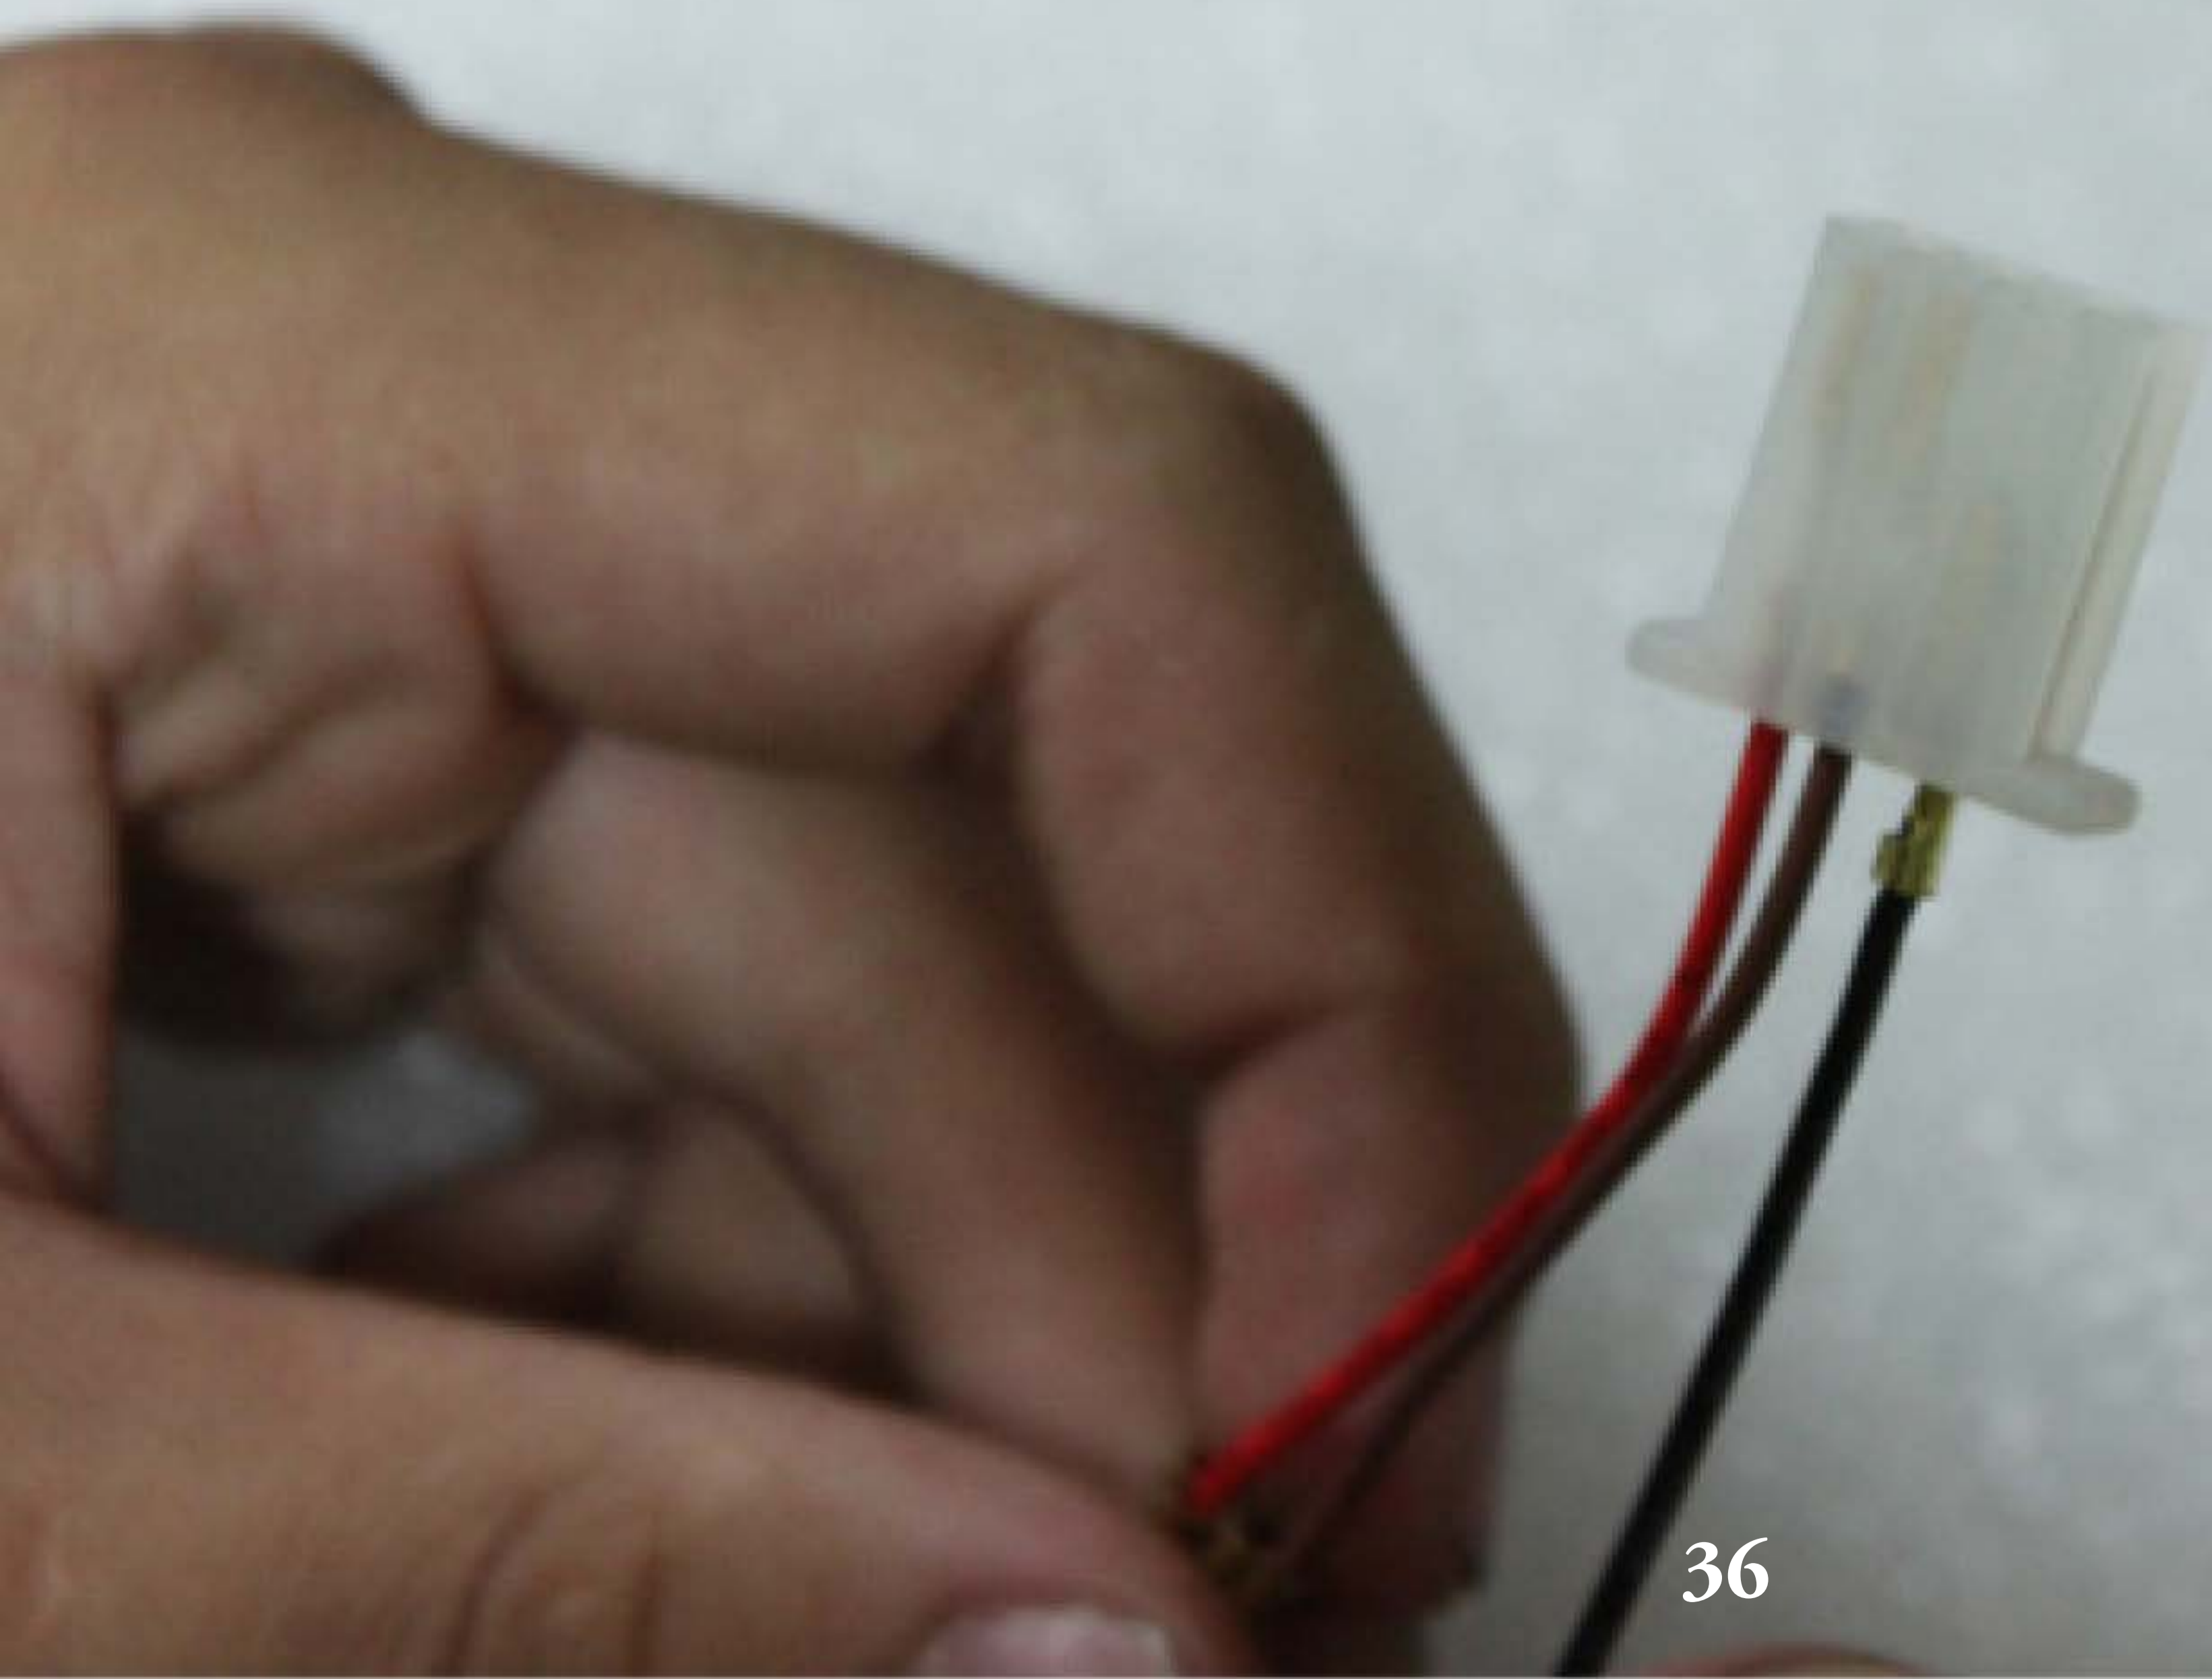

負極鎖上紅圈螺絲處

鎖回繼電器





燈の匠
Light Master

LIGHTMASTER



安裝完成

<http://tw-lightmaster.com/shop/>